

etoe E3 Pro Projector

ETOE E3 Pro Projector with Long Tripod Stand User Manual

Model: E3 Pro Projector

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ETOE E3 Pro Projector with Long Tripod Stand. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.





Figure 1: ETOE E3 Pro Projector with Long Tripod Stand assembled.

2. WHAT'S INCLUDED

Verify that all items listed below are present in your package:

- ETOE E3 Pro Projector
- Long Tripod Stand
- Carry Bag
- User Manual (this document)

3. SETUP GUIDE

3.1 Projector Placement

Position the projector on a stable, flat surface or mount it securely on the provided tripod stand. Ensure adequate ventilation around the projector to prevent overheating.

3.2 Tripod Stand Assembly

1. Unfold the legs of the tripod stand until they are fully extended and stable.
2. Adjust the height of the central column by loosening the locking collars, extending the sections, and then tightening the collars securely.
3. Attach the E3 Pro Projector to the 1/4-inch screw mount on the tripod's ball head. Ensure it is firmly screwed in.
4. Adjust the angle of the projector using the ball head, then tighten the locking knob to secure its position.





Figure 2: The adjustable tripod stand for the projector.

3.3 Power Connection

Connect the power adapter to the projector's power input port, then plug the adapter into a standard electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Initial Power On and Android TV Setup

Press the power button on the projector or the remote control to turn on the device. The projector will boot into the Android TV 10.0 interface. Follow the on-screen prompts to connect to your Wi-Fi network and log in with your Google account to access the full range of features, including the Google Play Store.



Figure 3: Android TV 10.0 interface with access to over 8,000 apps.

4.2 Streaming Applications

The E3 Pro Projector supports streaming from popular applications such as Netflix, YouTube, Hulu, and Disney+. These apps can be downloaded directly from the Google Play Store. The projector is Netflix-certified, ensuring optimal viewing experience for Netflix content.



Figure 4: Enjoying Netflix on a large screen with the E3 Pro Projector.

4.3 Image Adjustment

The projector features advanced intelligent screen technology for optimal image quality:

- **Auto Focus:** The projector automatically adjusts the image clarity for a sharp picture.
- **Auto Keystone Correction:** The projector automatically corrects trapezoidal distortion, ensuring a rectangular image even when projected at an angle.
- **Manual Focus & Manual Keystone:** For fine-tuning, you can manually adjust focus and keystone correction via the settings menu.

Advanced Intelligent Screen Technology



Figure 5: Advanced Intelligent Screen Technology features.

4.4 Connectivity

The E3 Pro Projector includes Chromecast built-in, allowing you to cast content directly from compatible devices. It also supports 5.1G Wi-Fi and Bluetooth for wireless connectivity.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your projector:

- **Lens Cleaning:** Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Avoid abrasive materials or harsh chemicals.
- **Ventilation:** Ensure the projector's ventilation ports are clear of obstructions to allow proper airflow and prevent overheating. Do not block the vents.
- **Storage:** When not in use, store the projector in its carry bag in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your ETOE E3 Pro Projector.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No Power	Power cable not connected; Power outlet faulty.	Ensure power cable is securely connected to the projector and a working power outlet.
Blurry Image	Out of focus; Projector too close/far from screen.	Allow auto-focus to complete or manually adjust focus. Adjust projection distance.
Image is Trapezoidal	Projector not perpendicular to screen.	Allow auto-keystone correction to complete or manually adjust keystone settings.
No Sound	Volume too low; External audio device not connected properly.	Increase volume. Check external audio connections if applicable.
Wi-Fi Connection Issues	Incorrect password; Router issues; Signal interference.	Verify Wi-Fi password. Restart router. Reduce interference.

7. SPECIFICATIONS

Feature	Detail
Brand	etoe
Model	E3 Pro Projector
ASIN	B0BR3N3RDS
Special Feature	Portable
Display Type	LCD
Form Factor	Portable
Mounting Type	Tabletop Mount
Operating System	Android TV 10.0
Connectivity	5.1G Wi-Fi, Bluetooth, Chromecast built-in

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official ETOE website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims. You can visit the official ETOE store for more information:[ETOE Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question