

Total TG103512

Total 350W High-Performance Grass Trimmer User Manual

Model: TG103512

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Total 350W High-Performance Grass Trimmer. Please read this manual thoroughly before using the product and keep it for future reference.

The Total Grass Trimmer is designed for home gardening and landscaping tasks, offering a powerful 350W motor for effective grass trimming. Its ultra-durable, corrosion-resistant structure ensures long-term use, and the ergonomic design provides a comfortable and secure grip for optimal control.

SAFETY INFORMATION

WARNING: To reduce the risk of injury, always follow these safety precautions:

- Always wear protective gloves, safety glasses, and long pants when operating this tool.
- Be aware of potential hazards such as flying debris. Ensure bystanders are at a safe distance.
- Do not operate the trimmer in wet conditions or rain.
- Before each use, inspect the trimmer for any damage or loose parts. Do not use if damaged.
- Keep hands and feet away from the cutting line while the trimmer is operating.
- Disconnect the power supply before cleaning, maintaining, or storing the trimmer.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Total Grass Trimmer:

- **Main Handle:** Ergonomically designed for comfortable grip and control.
- **Auxiliary Handle:** Adjustable for improved balance and handling.
- **Shaft:** Connects the motor housing to the cutting head.
- **Cutting Head:** Houses the cutting line.
- **Safety Guard:** Protects against flying debris.
- **Power Cord:** For connecting to an AC power source.



Figure 1: Front view of the Total 350W Grass Trimmer, showing the main handle, shaft, and cutting head.





Figure 2: Side view of the Total 350W Grass Trimmer, highlighting the auxiliary handle and power cord.





Figure 3: Close-up view of the cutting head and safety guard of the Total 350W Grass Trimmer.



Figure 4: Top view of the main handle and auxiliary handle assembly on the Total 350W Grass Trimmer.

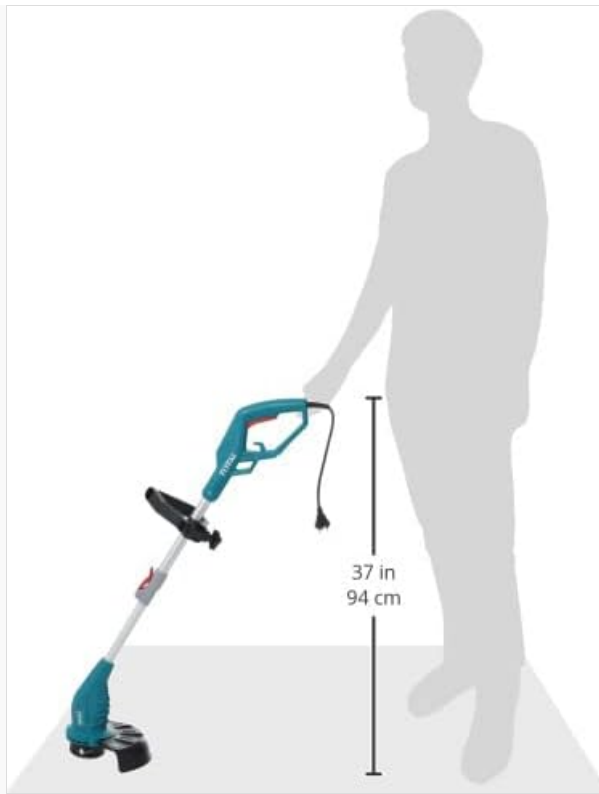


Figure 5: Size comparison of the Total 350W Grass Trimmer, indicating a height of 37 inches (94 cm).

SETUP

The Total Grass Trimmer requires assembly. Follow these steps for proper setup:

1. **Attach the Safety Guard:** Align the safety guard with the mounting points on the cutting head and secure it firmly using the provided screws. Ensure it is tightly fastened to prevent movement during operation.
2. **Assemble the Shaft:** Connect the upper and lower shaft sections. Ensure the locking mechanism clicks into place, indicating a secure connection.
3. **Install the Auxiliary Handle:** Slide the auxiliary handle onto the shaft. Adjust its position for comfortable operation and tighten the locking knob to secure it.
4. **Check the Cutting Line:** Ensure the cutting line is properly installed and extends from the cutting head. Refer to the maintenance section for instructions on replacing the line.

OPERATING INSTRUCTIONS

Follow these guidelines for safe and effective operation of your grass trimmer:

1. Preparation:

- Clear the work area of any obstacles, rocks, or debris that could be thrown by the cutting line.
- Wear appropriate personal protective equipment (PPE), including safety glasses, long pants, and sturdy footwear.
- Ensure the power cord is in good condition and free from cuts or damage. Use an outdoor-rated extension cord if necessary.

2. Starting the Trimmer:

- Plug the power cord into a suitable AC power outlet.
- Hold the trimmer firmly with both hands, ensuring a balanced stance.

- Press the safety lock button (if present) and then squeeze the trigger switch to start the motor.

3. **Trimming Technique:**

- Move the trimmer in a sweeping motion, from side to side, to cut grass evenly.
- Avoid hitting hard surfaces, fences, or trees with the cutting line, as this can cause wear or breakage.
- Do not overload the trimmer by attempting to cut excessively thick or tall vegetation. Make multiple passes if needed.

4. **Stopping the Trimmer:** Release the trigger switch to stop the motor. Disconnect the power cord from the outlet after use.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your trimmer:

- **Cleaning:** After each use, disconnect the power and clean the trimmer housing and safety guard with a damp cloth. Remove any grass clippings or debris from the cutting head.
- **Cutting Line Replacement:**
 - Always disconnect the power before replacing the cutting line.
 - Refer to the cutting head mechanism for specific instructions on how to open the spool housing.
 - Use only the recommended diameter and type of cutting line for your Total trimmer.
 - Wind the new line evenly onto the spool, ensuring it is not tangled.
- **Storage:** Store the trimmer in a dry, secure location, out of reach of children and away from direct sunlight or extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not start.	No power supply; damaged power cord; faulty switch.	Check power outlet and cord connection. Inspect cord for damage. If issues persist, contact customer support.
Cutting line does not advance or breaks frequently.	Incorrect line installation; wrong line type/diameter; cutting too thick material.	Reinstall line correctly. Use recommended line. Avoid cutting overly thick vegetation.
Excessive vibration or noise.	Loose parts; damaged cutting head; debris in motor housing.	Check for loose screws. Inspect cutting head for damage. Clean out any debris.

SPECIFICATIONS

Feature	Detail
Brand	Total
Model Number	TG103512

Feature	Detail
Power Source	AC (Corded Electric)
Color	Multi-color (Teal/White)
Item Weight	1 Kilogram
Package Dimensions	95.6 x 23.8 x 14 cm
Special Features	Comfortable, Ergonomic Design
Assembly Required	Yes
Recommended Uses	Home Gardening & Landscaping

WARRANTY AND SUPPORT

Specific warranty details and direct support contact information are not provided in this manual. For warranty claims or technical assistance, please refer to the product packaging or contact the retailer where the product was purchased. You may also visit the official Total Tools website for general support information.

© 2024 Total Tools. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BR4B7Q79>

More documents and user manuals: **<https://manuals.plus/>**