

WLIVE AD SG031WH

WLIVE Retro TV Stand (Model AD SG031WH) Instruction Manual

For 58 Inch TV, White

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Assembly:** Always assemble the TV stand according to the provided instructions. Ensure all parts are correctly installed and tightened before use.
- **Tip-Over Prevention:** To prevent tip-over risks, it is highly recommended to secure the TV stand to the wall using appropriate anti-tip hardware (not included, but generally advised for furniture).
- **Load Capacity:** Do not exceed the maximum load capacity. The tabletop can support up to **110 lbs (50 kg)**. Each internal partition can support up to **22 lbs (10 kg)**. Overloading can cause damage or injury.
- **Children and Pets:** Keep small children and pets away from the TV stand during assembly. Do not allow children to climb on or play with the TV stand.
- **Protective Film:** A transparent protective film is applied to the acrylic doors to prevent scratches during shipping. Please peel it off carefully before use to reveal the clear finish.
- **Placement:** Place the TV stand on a flat, stable, and level surface.

PRODUCT OVERVIEW

The WLIVE Retro TV Stand (Model AD SG031WH) is designed to accommodate televisions up to 65 inches. It features a classic retro design with corrugated acrylic cabinet doors and ample storage solutions for your media devices and accessories.



Image 1: The WLIVE Retro TV Stand in white, showcasing its design with a television placed on top and decorative items.

Key Features:

- **Retro Design:** Features a concise line and corrugated acrylic cabinet doors for a vintage aesthetic.
- **Ample Storage:** Includes two side cabinets with 3-level adjustable shelves and two open central shelves.
- **Durable Construction:** Made from high-quality engineered wood with a 3-inch thick bottom for stability.
- **Cable Management:** Equipped with triangular cable holes at the back to organize wires.
- **Signal Friendly Doors:** Corrugated acrylic doors allow remote control signals to pass through even when closed.



PRODUCT SIZE



Max.

Weight
Capacity

Tabletop: **110IB**

Each Partition: **22IB**



Image 2: Product dimensions (58" W x 14.6" D x 27" H) and maximum weight capacities (tabletop 110 lbs, each partition 22 lbs).

AMPLE STORAGE SPACES



Television



DVD Player



Remote Control




Books



Spacious Tabletop



Tow Large Cabinets

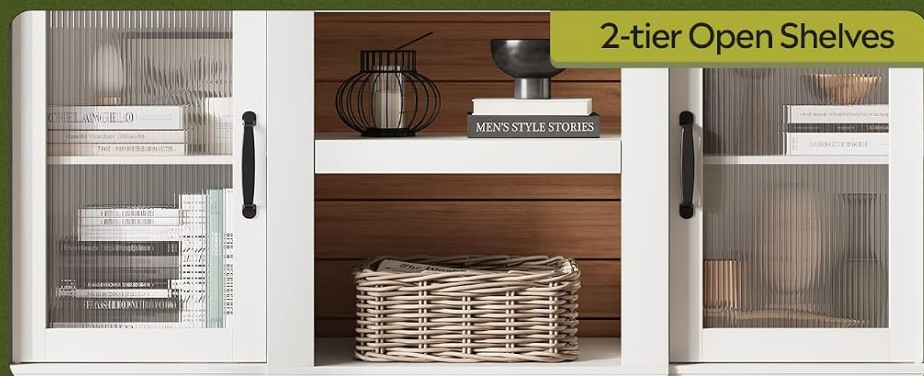

2-tier Open Shelves

Image 3: Visual representation of the spacious tabletop, two large cabinets, and two-tier open shelves for various items.

CORRUGATED ACRYLIC DOORS

Not Affect Signal
Reception



Image 4: Detail of the adjustable shelves, highlighting their three-level flexibility within the storage cabinets.



Image 5: Illustration showing that the corrugated acrylic doors do not obstruct remote control signals, allowing devices to be operated while stored.

SETUP AND ASSEMBLY INSTRUCTIONS

This TV stand is designed for straightforward assembly. All necessary accessories and tools are included in the packaging. Please follow the detailed graphical instructions provided in the separate assembly manual that came with your product.

Before You Begin:

- **Unpack:** Carefully unpack all components and hardware. Lay them out on a clean, soft surface (like a carpet or blanket) to prevent scratches.
- **Verify Parts:** Check the parts list in your assembly manual to ensure all pieces are present and undamaged. If any parts are missing or damaged, please contact customer support.
- **Tools:** The required assembly tools are provided. No additional tools should be necessary.

General Assembly Tips:

- Follow the numbered steps in the assembly manual precisely.
- Do not overtighten screws, as this may damage the engineered wood.
- Ensure all connections are secure before moving or placing items on the stand.
- For easier assembly, consider having a second person assist, especially when lifting or positioning larger sections.

USAGE GUIDELINES

Once assembled, the WLIVE Retro TV Stand is ready for use. Follow these guidelines for optimal functionality:

- **TV Placement:** Carefully place your television on the center of the tabletop. Ensure the TV base is fully supported and does not overhang the edges. This stand is suitable for TVs up to 65 inches.
- **Organizing Cables:** Utilize the triangular cable holes located at the back of the stand to route and organize power cords and media cables. This helps maintain a tidy appearance and prevents cable clutter.
- **Adjusting Shelves:** The shelves within the side cabinets are adjustable to three different levels. To adjust, remove the shelf, reposition the shelf pins to the desired height, and then place the shelf back on the pins.
- **Remote Control Use:** The corrugated acrylic doors are designed to allow infrared signals from remote controls to pass through, enabling you to operate devices stored inside the cabinets without opening the doors.



Image 6: The TV stand supporting a large television, illustrating its compatibility with TVs up to 65 inches.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your WLIVE Retro TV Stand.

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent moisture damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads if necessary.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose fasteners or uneven floor.	Ensure all screws and cam locks are fully tightened. Move the stand to a level surface or use furniture levelers if needed.
Doors do not align properly.	Hinges are not adjusted correctly or frame is not square.	Adjust the door hinges as per the assembly manual. Ensure the main frame of the stand is assembled squarely.
Missing parts or damaged components.	Packaging error or shipping damage.	Do not proceed with assembly. Contact WLIVE customer support immediately for replacement parts.
Remote control not working through doors.	Device too far back or signal obstruction.	Ensure the device is positioned close enough to the front of the cabinet. Check if any other items are blocking the signal path.

If you experience a problem not listed here, or if the suggested solutions do not resolve the issue, please contact WLIVE customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	WLIVE
Model Number	ADSG031WH
Color	White
Material	Engineered Wood, Acrylic
Product Dimensions (L x W x H)	58 x 14.6 x 27 inches (147.3 x 37.1 x 68.6 cm)
Item Weight	60.5 pounds (27.4 kg)
Maximum Tabletop Load Capacity	110 lbs (50 kg)
Maximum Partition Load Capacity	22 lbs (10 kg) per shelf
Compatible TV Size	Up to 65 inches
Special Features	Adjustable shelves, Corrugated acrylic doors, Cable management
Care Instructions	Wipe with Dry Cloth

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your WLIVE Retro TV Stand, please contact our customer support team. Our responsive team is ready to help ensure a satisfactory experience.

Please refer to your purchase documentation or the WLIVE official website for specific contact information.

While a specific warranty period is not detailed in this manual, WLIVE stands behind the quality of its products. Please retain your proof of purchase for any warranty claims or support requests.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BR558NPH>

More documents and user manuals: <https://manuals.plus/>