

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY Replacement Remote Control User Manual for Dyon SMART 42 XT V2](#)

## ALLIMITY QYSY-SMART-42XTV2-QYSY

# ALLIMITY Replacement Remote Control User Manual

For Dyon SMART 42 XT V2 Televisions

## INTRODUCTION

---

This manual provides instructions for the ALLIMITY Replacement Remote Control, designed for Dyon SMART 42 XT V2 televisions. This remote functions as a direct replacement, offering all the features of your original remote without requiring any programming. Simply insert alkaline batteries for immediate use.

## SETUP

---

### 1. Battery Installation

To begin using your ALLIMITY replacement remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Image: Rear view of the remote control, highlighting the battery compartment for installation.

## 2. First Use

No programming is required for this remote control. Once the batteries are correctly installed, the remote is ready for immediate use with your Dyon SMART 42 XT V2 television.

## OPERATING INSTRUCTIONS

---

The ALLIMITY replacement remote control provides full functionality for your Dyon SMART 42 XT V2 TV. Below is a general guide to its buttons and their functions.





Image: Front view of the ALLIMITY remote control, displaying all buttons and their labels.

- **Power Button (RED):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.

- **Volume Up/Down (+/-):** Adjusts the volume level.
- **Channel Up/Down (P^/P^v):** Changes the TV channel.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back Button:** Returns to the previous menu or screen.
- **Home Button:** Accesses the TV's main menu or smart features.
- **Info Button:** Displays information about the current program or input.
- **Guide Button:** Opens the electronic program guide (EPG).
- **LIST Button:** Accesses a list of channels or recorded content.
- **FAV Button:** Accesses favorite channels.
- **NETFLIX, YouTube, Prime Video Buttons:** Direct access to these streaming applications.
- **USB Button:** Switches to USB input mode.
- **AUDIO Button:** Selects audio tracks or modes.
- **SUBTITLE Button:** Toggles subtitles on or off.
- **TEXT Button:** Accesses teletext services.
- **SLEEP Button:** Sets a sleep timer for the TV.
- **ASPECT Button:** Changes the screen aspect ratio.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Control media playback.

## MAINTENANCE

---

### Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the 'Setup' section.

- Always replace both batteries at the same time.
- Use new alkaline batteries of the specified type (AAA).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are correctly inserted with the correct polarity.
  - Replace the batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Make sure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the TV.

- **Specific buttons not working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing proper contact.
- If only certain buttons are affected, and battery replacement does not help, the remote may be damaged.

- **Intermittent operation:**

- This often indicates low battery power. Replace the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR receiver.

## SPECIFICATIONS

---

Attribute	Detail
Brand	ALLIMITY
Model Number	QYSY-SMART-42XTV2-QYSY
Compatible Devices	Dyon SMART 42 XT V2
Connectivity Technology	Infrared
Number of Buttons	25
Maximum Range	10 Meters
Battery Type	Alkaline (AAA)
Color	Black

## WARRANTY AND SUPPORT

---

Specific warranty information for this product may vary depending on your region and retailer. Please refer to the documentation provided at the time of purchase or contact your retailer directly for details regarding warranty coverage and support services.

For technical assistance or further inquiries, please reach out to the manufacturer or the point of purchase.