

[Manuals.plus](#) /

› [Mixpresso](#) /

› Mixpresso 4 Cup Electric Percolator Coffee Pot Instruction Manual, Copper (Model EPCPP-4MIX)

Mixpresso EPCPP-4MIX

Mixpresso 4 Cup Electric Percolator Coffee Pot Instruction Manual

Model: EPCPP-4MIX

INTRODUCTION

Thank you for choosing the Mixpresso 4 Cup Electric Percolator Coffee Pot. This appliance is designed to brew rich, flavorful coffee using the traditional percolation method. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The Mixpresso 4 Cup Electric Percolator Coffee Pot, showcasing its copper finish and classic design.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.
- **Caution:** Hand wash only. This product is not dishwasher safe.

PRODUCT COMPONENTS

The Mixpresso Electric Percolator includes the following parts:

- Electric percolator coffee pot (4-cup / 32 Oz capacity)
- Removable coffee filter basket
- Pump tube
- Lid with cool-touch PC knob
- Power cord (24-inch, removable)



Image: Exploded view of the percolator showing the main pot, detachable power cord, and the stainless steel coffee basket with pump tube.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the coffee pot interior, filter basket, pump tube, and lid in warm, soapy water. Rinse thoroughly and dry. Do not immerse the electric base in water.
3. **Assemble:** Insert the pump tube into the center of the coffee pot. Place the filter basket onto the pump tube.

OPERATING INSTRUCTIONS

Brewing Coffee

1. **Add Water:** Fill the coffee pot with cold water to the desired level. The pot has a 4-cup (32 oz) capacity. Ensure water level is below the bottom of the filter basket.
2. **Add Coffee Grounds:** Place your preferred amount of ground coffee into the filter basket. For best results, use a coarse

grind suitable for percolators. Do not overfill the basket.

3. **Secure Lid:** Place the lid firmly onto the coffee pot.
4. **Connect Power:** Attach the removable power cord to the base of the percolator, then plug it into a standard 120V AC electrical outlet.
5. **Start Brewing:** Press the power button on the base. The indicator light will illuminate, signaling that brewing has begun.
6. **Percolation Process:** Water will heat and be pumped up through the tube, showering over the coffee grounds. This process typically takes 7-10 minutes for a full pot. You can observe the percolation through the clear knob on the lid.
7. **Keep Warm Function:** Once brewing is complete, the percolator automatically switches to a "keep warm" function, maintaining the coffee at an ideal serving temperature (up to 170°F). The indicator light will remain on.
8. **Serve:** Carefully remove the percolator from its base for serving. Pour slowly to avoid drips.



Image: Step-by-step illustration of adding water and coffee grounds to the percolator.

304 Stainless Steel
Shiny Surface

4 Cups
Electric
Percolator

Heating And Keep
Warm Function

Automatic
Switch Off

Cool Touch
Handle and
Base



Image: The percolator pouring brewed coffee into multiple cups, demonstrating its serving function.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your percolator.

1. **Unplug and Cool:** Always unplug the percolator and allow it to cool completely before cleaning.
2. **Disassemble:** Remove the lid, filter basket, and pump tube. Discard used coffee grounds.
3. **Hand Wash Components:** Wash the lid, filter basket, and pump tube in warm, soapy water. Rinse thoroughly.
4. **Clean Pot Interior:** Wash the interior of the coffee pot with warm, soapy water and a soft cloth or sponge. Rinse thoroughly.
5. **Clean Exterior:** Wipe the exterior of the pot and the electric base with a damp cloth. Do not use abrasive cleaners or scouring pads.
6. **Do NOT Immerse:** Never immerse the electric base or the entire coffee pot in water or any other liquid. This can cause electrical shock or damage the appliance.
7. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio; grind size too fine/coarse.	Adjust the amount of coffee grounds or water. Experiment with a coarser grind for stronger coffee, or finer for weaker (though too fine can lead to grounds in coffee).
Coffee grounds in brewed coffee.	Coffee grind is too fine; filter basket not seated correctly.	Use a coarser grind of coffee. Ensure the filter basket is properly seated on the pump tube. Consider using a paper filter if desired (not included).
Percolator not brewing.	Not plugged in; power button not pressed; insufficient water.	Check if the power cord is securely plugged into both the percolator and the outlet. Ensure the power button is pressed and the indicator light is on. Verify there is enough water in the pot.
Coffee tastes burnt or overheated.	Coffee left on "keep warm" for too long.	Serve coffee promptly after brewing is complete. While the keep warm function is designed to maintain temperature, prolonged heating can affect flavor.

SPECIFICATIONS

- Brand:** Mixpresso
- Model Name:** Electric Copper Percolator 4 Cup
- Item Model Number:** EPCPP-4MIX
- Color:** Copper 4 Cup
- Capacity:** 4 Cups (32 Fluid Ounces)
- Product Dimensions:** 9.5"D x 5.5"W x 9.7"H
- Item Weight:** 2.2 pounds
- Material:** Stainless Steel (body), PC (knob)
- Voltage:** 120 Volts (AC)
- Operation Mode:** Manual
- Special Feature:** Removable Filter, Keep Warm Function
- Care Instructions:** Hand Wash Only (Not Dishwasher Safe)



Image: Diagram illustrating key features of the percolator, including the stainless steel lid, glass handle, coffee basket, cool-touch handle, stainless steel interior, and heating light.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Mixpresso customer service. Keep your purchase receipt as proof of purchase.

