

DEZIN B0BR6GCVZX

DEZIN Mini Rice Cooker Instruction Manual

Model: B0BR6GCVZX

INTRODUCTION

Thank you for purchasing the DEZIN Mini Rice Cooker. This appliance is designed to simplify your cooking experience, offering versatile functions for various grains and dishes. Please read this manual thoroughly before use to ensure safe and efficient operation. Keep this manual for future reference.

SAFETY INSTRUCTIONS

- Always ensure the voltage matches your power supply before plugging in.
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children.
- Do not operate if the power cord or plug is damaged.
- Always unplug the rice cooker when not in use and before cleaning.
- Use only the accessories provided or recommended by DEZIN.
- Avoid touching hot surfaces. Use oven mitts or handles.
- Ensure the steam vent is clear during operation.

PRODUCT COMPONENTS

Your DEZIN Mini Rice Cooker includes the following parts:

- Main Unit
- Removable Nonstick Inner Pot
- Detachable Inner Lid
- Measuring Cup
- Rice Spoon

Accessories



New product
liner



measuring
cup



rice spoon



Product
Manual



Detachable Inner Lid

Steam Vent

Larger 2L Nonstick Inner Pot

- Easy Cleanups
- Dishwasher safe
- No burning

Lid Release Button

Image: Exploded view of the Dezin Rice Cooker showing its components: detachable inner lid, steam vent, 2L nonstick inner pot, and lid release button. Accessories like measuring cup and rice spoon are also depicted.

SETUP

1. Unpack all components and remove any packaging materials.
2. Wash the inner pot, detachable inner lid, measuring cup, and rice spoon with warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources.
5. Ensure proper ventilation around the appliance.

OPERATING INSTRUCTIONS

Basic Operation

1. Place the cleaned inner pot into the main unit.
2. Add desired ingredients (e.g., rice and water) to the inner pot.
3. Close the lid securely. Press the lid release button to open.
4. Plug the power cord into a suitable electrical outlet.
5. Press the 'Menu' button to cycle through the cooking functions: Rice, Porridge, Simmer, and Keep Warm. The selected function will illuminate.
6. Once a function is selected, the cooker will automatically begin the cooking process.
7. When cooking is complete, the cooker will automatically switch to 'Keep Warm' mode.



Image: Dezin Rice Cooker control panel showing Rice, Porridge, Simmer, and Keep Warm functions, with examples of cooked white rice, brown rice, porridge, and simmered dish.

Using the Delay Timer

The 24-hour delay timer allows you to prepare ingredients in advance and set a delayed start time for

cooking.

1. Add ingredients to the inner pot and close the lid.
2. Press the 'Delay' button. The display will show a default delay time.
3. Use the 'Menu' button to adjust the delay time in hours.
4. Once the desired delay time is set, select your cooking function (Rice, Porridge, or Simmer) using the 'Menu' button.
5. The cooker will start cooking after the set delay time has elapsed.

7-Step Cooking Process for Rice

The DEZIN Mini Rice Cooker utilizes a 7-step process to ensure optimal rice texture and flavor:

1. **Preheating:** Gradually warms the inner pot.
2. **Water Absorption:** Allows rice to absorb water evenly.
3. **High-Temperature Heating:** Rapidly heats to boiling point.
4. **Boiling:** Maintains a steady boil for thorough cooking.
5. **Steaming:** Steams the rice to perfection.
6. **Slow Cooking:** Gently cooks to enhance flavor.
7. **Holding State (Keep Warm):** Automatically switches to keep warm once cooking is complete.

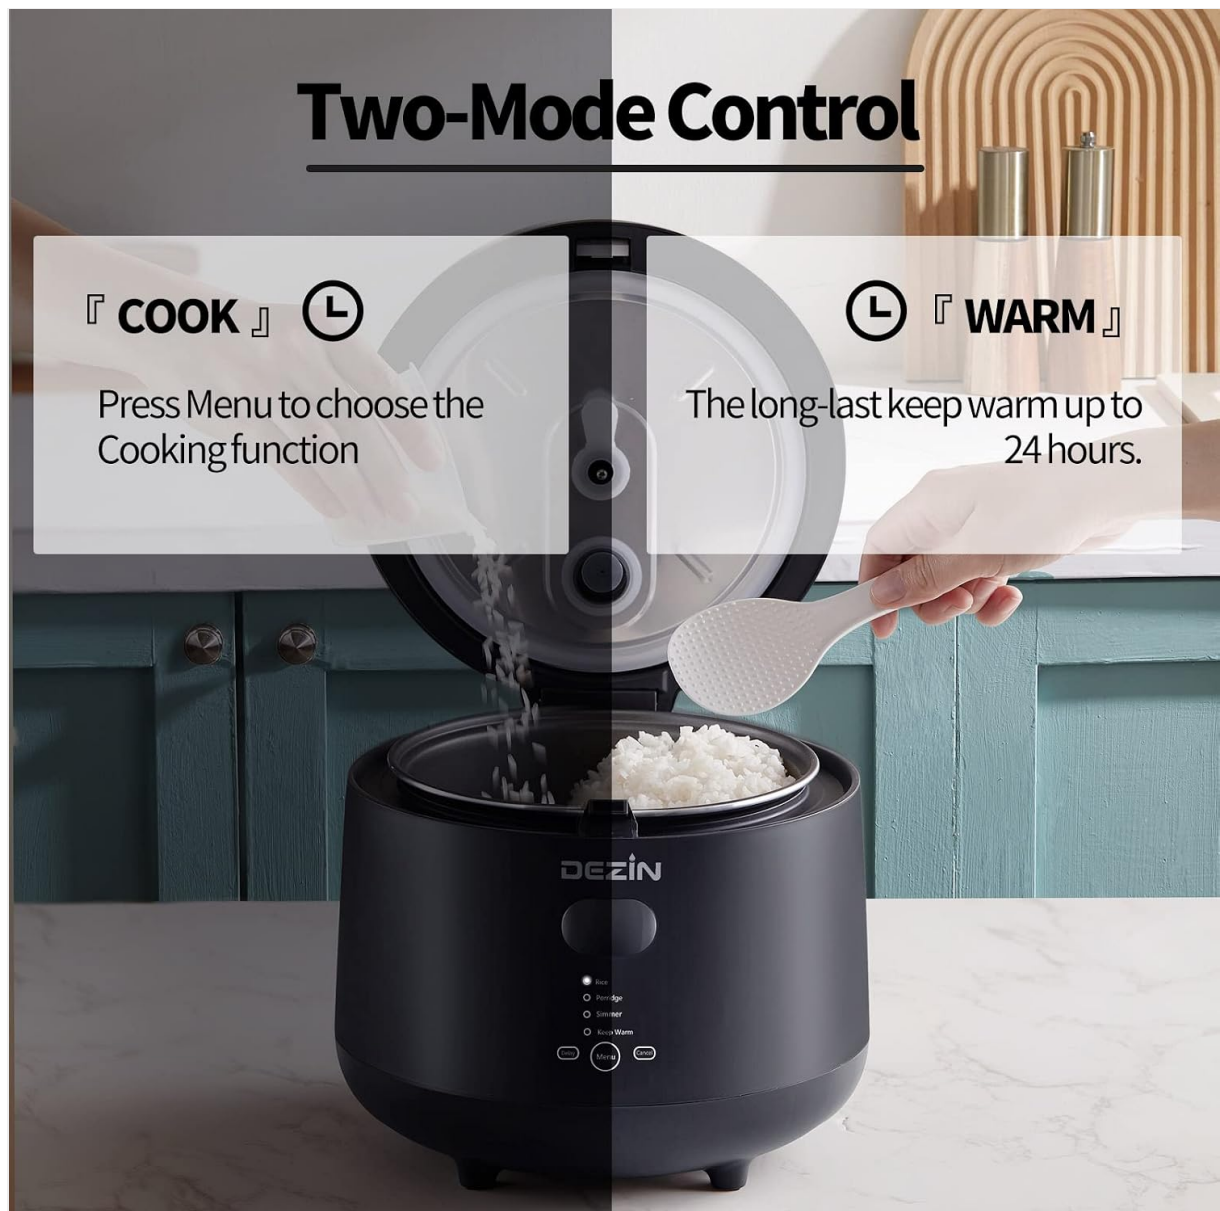


Image: Dezin Rice Cooker with a graph illustrating the 7-step cooking process (preheat, absorb water, heating, boiling, steam, cool down, keep warm & steam) for flavorful rice.

Instructional Video

Your browser does not support the video tag.

Video: Official instruction video for the Dezin Rice Cooker, demonstrating its use and features. Provided by Seavox Commerce.

COOKING GUIDE

The included measuring cup is typically 180ml. Use it for accurate measurements.

For White Rice:

- For 1 cup of uncooked rice, add 1 to 1.2 cups of water.
- For 2 cups of uncooked rice, add 2 to 2.4 cups of water.
- For 3 cups of uncooked rice, add 3 to 3.6 cups of water.
- For 4 cups of uncooked rice, add 4 to 4.8 cups of water.

Note: Adjust water quantity based on desired rice texture and type of rice. Rinse rice before cooking for best results.

3 Cooking Function



Image: Dezin Rice Cooker on a kitchen counter with six bowls of cooked rice, illustrating its 4-cup uncooked capacity.

For Porridge and Simmer:

Follow specific recipes for water-to-ingredient ratios when preparing porridge or simmered dishes. The 'Porridge' and 'Simmer' functions are optimized for these cooking methods.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and performance of your rice cooker.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Inner Pot:** The nonstick inner pot is designed for easy cleaning. Wash with warm, soapy water and a soft sponge. Avoid abrasive cleaners or metal scouring pads to prevent damage to the nonstick coating. The inner pot is scratch-resistant and BPA-free.
3. **Detachable Inner Lid:** Remove the inner lid and wash it with warm, soapy water. Rinse and dry thoroughly before reattaching.
4. **Main Unit:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or immerse the main unit in water.
5. **Steam Vent:** Ensure the steam vent is clear of any food debris.
6. **Accessories:** Wash the measuring cup and rice spoon with warm, soapy water.



Image: Hands holding the nonstick inner pot of the Dezin Rice Cooker above a mound of perfectly cooked rice, highlighting its anti-stick properties.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too hard/dry	Insufficient water; lid not properly closed.	Add more water next time; ensure lid is sealed.
Rice is too soft/mushy	Too much water.	Reduce water quantity next time.
Cooker does not turn on	Not plugged in; power outage; faulty outlet.	Check power connection; test outlet with another appliance.
Food sticks to the pot	Not enough water; pot not cleaned properly.	Ensure proper water ratio; clean pot thoroughly after each use.
Steam leaking from lid	Lid not closed properly; seal damaged.	Ensure lid is securely closed; inspect lid seal for damage.

SPECIFICATIONS

Feature	Detail
Brand	DEZIN
Model Name	Mini Rice Cooker
Capacity	2 Liters (4 cups uncooked rice)
Product Dimensions	10.5"D x 10.5"W x 9.8"H
Power Source	Corded Electric
Wattage	400 watts
Voltage	110 Volts (AC)
Material	Plastic (exterior)
Lid Material	Tempered Glass
Color	Black
Special Features	Non-Stick Inner Pot, Portable, 24-Hour Delay Timer, Keep Warm Function

WARRANTY AND SUPPORT

DEZIN products are manufactured to high-quality standards. For any issues or questions regarding your rice cooker, please refer to the warranty information provided with your purchase or contact DEZIN customer support. Please retain your proof of purchase for warranty claims.

