

[Manuals.plus](#) /

> [AGARO](#) /

> AGARO Imperial Electric Pressure Cooker User Manual

AGARO 33872

AGARO Imperial Electric Pressure Cooker User Manual

Model: 33872 | Capacity: 8 Litres

1. INTRODUCTION

Thank you for choosing the AGARO Imperial Electric Pressure Cooker. This appliance is designed to simplify your cooking process with its advanced features and versatile functions. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



The AGARO Imperial Electric Pressure Cooker, featuring an 8-liter capacity and capable of cooking up to 2.1 kg of raw rice.

Features	 AGARO Digital pressure cooker	 Traditional pressure cooker
Preset menu	Yes	No
Timer	Yes	No
Temperature control	Yes	No
Slow cook	Yes	No
Keep warm	Yes	No
Safety guard	6	Nil
Digital display	Yes	No

Comparison of features between the AGARO Digital Pressure Cooker and a traditional pressure cooker, highlighting benefits like preset menus, timer, temperature control, slow cook, keep warm, and digital display.

2. SAFETY PRECAUTIONS

To prevent personal injury or property damage, always follow basic safety precautions when using electrical appliances. This includes, but is not limited to:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when the appliance is used by or near children.
- Do not immerse the cord, plugs, or the main unit in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the pressure cooker. Make sure the internal pressure has completely dropped before opening.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dehydrated vegetables, do not fill the unit over 1/2 full.

- Always check the pressure release valve and anti-block shield for clogging before use.



Key safety features include a safety locking lid, temperature monitor, pressure regulation system, automatic pressure control, anti-block shield, automatic temperature control, pressure protection system, and heat resistant cooking mitts.

3. PRODUCT COMPONENTS AND OVERVIEW

The AGARO Imperial Electric Pressure Cooker comes with several components designed for versatile cooking.



The main unit of the AGARO Imperial Electric Pressure Cooker shown with its accessories: inner pot, steam basket, steam rack, measuring cup, rice spoon, and soup spoon.

Included Components:

- Main Pressure Cooker Unit
- Stainless Steel Inner Pot (8 Litres)
- Rice Spoon
- Soup Spoon
- Measuring Cup
- Steamer Basket
- Steam Rack



8L Pot

Steam rack

Steam basket

Cooking pot

Lid with pressure valve



An exploded view showing the 8-liter cooking pot, steam rack, steam basket, and the lid with its pressure valve, illustrating how they fit together.

4. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	AGARO
Model Number	33872
Capacity	8 Litres
Material	Stainless Steel (Inner Pot)
Colour	Black
Product Dimensions	35.4D x 34.4W x 40.4H Centimeters

Feature	Specification
Wattage	1300W
Voltage	220-240V/~50 Hz
Item Weight	6.5 kg
Control Method	Touch
Operation Mode	Automatic
Dishwasher Safe	Yes (Inner Pot)
Country of Origin	China

5. OPERATING INSTRUCTIONS

5.1 Control Panel and Display

The AGARO Imperial Electric Pressure Cooker features an easy-to-read backlit LCD display and intuitive touch controls for selecting cooking functions and adjusting settings.



The intelligent LCD panel displays 14 preset programs, adjustable pressure options, adjustable timer options, and a delay timer function.

5.2 Pre-set Cooking Functions

The pressure cooker comes with 14 pre-set cooking functions for various dishes:

- Poultry
- Meat Stew
- Bean Chili
- Soup Broth

- Rice
- Multi-Grain
- Porridge
- Pressure Cook
- Slow Cook
- Sauté
- Steam
- Egg
- Cake
- Yogurt

5.3 Adjustable Cooking Settings

In addition to pre-sets, you can customize your cooking with 6 adjustable settings:

- Timer
- Sterilize
- Pressure Level
- Delay Start
- Keep Warm
- Cancel

5.4 Basic Operation Steps

1. **Preparation:** Ensure the inner pot is clean and placed correctly inside the cooker base. Add ingredients and liquid according to your recipe. Do not exceed the MAX fill line.
2. **Close Lid:** Place the lid on the cooker and turn it clockwise until it locks into place. Ensure the pressure release valve is in the 'Sealing' position.
3. **Select Function:** Plug in the cooker. The display will light up. Select your desired pre-set cooking function (e.g., Rice, Meat Stew) or use the manual 'Pressure Cook' setting.
4. **Adjust Settings (Optional):** Use the 'Timer', 'Pressure Level', or 'Delay' buttons to adjust cooking time, pressure, or set a delayed start if needed.
5. **Start Cooking:** Press the 'Start' button. The cooker will begin preheating, and the display will show 'On' or a similar indicator. Once pressure is reached, the cooking timer will begin counting down.
6. **Pressure Release:** Once cooking is complete, the cooker will beep and automatically switch to 'Keep Warm' mode. You can either allow natural pressure release (NPR) or perform a quick pressure release (QPR) by carefully turning the pressure release valve to the 'Venting' position. **Caution:** Steam will be released forcefully. Keep hands and face clear.
7. **Open Lid:** Once the float valve drops down, indicating all pressure has been released, turn the lid counter-clockwise and lift to open.
8. **Serve:** Carefully remove the inner pot and serve your meal.

Break fast



Poha



Upma



Dhokla

Lunch



Chole



Chicken
biryani



Mutton
curry

Dinner



Palak
paneer



Aloo
dum



Fish
curry



Examples of meals that can be prepared, including Poha, Upma, Dhokla for breakfast; Chole, Chicken Biryani, Mutton Curry for lunch; and Palak Paneer, Aloo Dum, Fish Curry for dinner.

6. CARE AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your AGARO Imperial Electric Pressure Cooker.

- **Unplug Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Inner Pot:** The stainless steel inner pot is dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
- **Lid:** Wash the lid by hand with warm, soapy water. Pay special attention to the sealing ring, anti-block shield, and pressure release valve. Remove the sealing ring for thorough cleaning and ensure it is properly reinstalled before next use.
- **Cooker Base:** Wipe the exterior of the cooker base with a damp cloth. Never immerse the cooker base in water or any other liquid.
- **Accessories:** All included accessories (rice spoon, soup spoon, measuring cup, steamer basket, steam rack) can be washed with warm, soapy water or placed in the dishwasher if indicated.

- **Storage:** Store the pressure cooker in a dry place. Ensure all parts are dry before storing.

7. TROUBLESHOOTING

If you encounter issues with your AGARO Imperial Electric Pressure Cooker, refer to the following common troubleshooting tips:

- **Cooker not turning on:** Ensure the power cord is securely plugged into both the cooker and a working electrical outlet. Check your household circuit breaker.
- **Lid not sealing:** Check if the sealing ring is properly installed and not damaged. Ensure there are no food particles obstructing the lid or rim. Make sure the lid is closed and locked correctly.
- **Steam leaking from lid:** This often indicates an improperly seated sealing ring or a damaged ring. Re-seat the ring or replace it if necessary. Ensure the pressure release valve is in the 'Sealing' position.
- **Food not cooking properly:** Verify that you have selected the correct cooking function and time for your recipe. Ensure sufficient liquid is added for pressure to build.
- **Error codes on display:** Consult the full product manual (if available from manufacturer's website) for specific error code meanings and solutions. Generally, unplugging the unit and plugging it back in after a few minutes can resolve minor electronic glitches.

For issues not covered here, please contact AGARO customer support.

8. WARRANTY AND SUPPORT

AGARO products are manufactured with high-quality standards. For warranty information, please refer to the warranty card included with your product or visit the official AGARO website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer and Importer Details:

Manufacturer: UNIVERSAL CORPORATION LIMITED GUANGDONG, CHINA

Importer: Universal Corporation Limited, 4/1 Middleton Street, Sikkim Commerce House, Kolkata-71

Customer Support:

For further assistance, product registration, or to explore other AGARO products, please visit the official AGARO store or contact their customer service department.

AGARO Store Link: [AGARO Official Store](#)

© 2023 AGARO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question