

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEDIARY](#) /

› [LEDIARY Low Profile Ceiling Fan with Lights - Model LEDIARY-LPCFL6W Instruction Manual](#)

LEDIARY LEDIARY-LPCFL6W

LEDIARY Low Profile Ceiling Fan with Lights

MODEL: LEDIARY-LPCFL6W - INSTRUCTION MANUAL

Introduction

Thank you for choosing the LEDIARY Low Profile Ceiling Fan with Lights. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions thoroughly before beginning installation and retain them for future reference.

Important Safety Information

- Always disconnect power at the main circuit breaker before installation or servicing.
- Ensure all electrical connections comply with local codes and ordinances. If you are unsure, consult a qualified electrician.
- Mount the fan only to an outlet box marked 'Acceptable for Fan Support of 35 lbs (15.9 kg) or less' and use the mounting screws provided with the outlet box.
- Do not bend the blade holders during installation, balancing, or cleaning.
- Ensure the fan blades are at least 7 feet (2.1 meters) from the floor.
- Use only E26 bulbs with a height below 4.72 inches and a maximum of 10W for LED bulbs. Incompatible bulbs (e.g., ST19, ST21, or those taller than 4.72 inches) may cause issues or damage.

Package Contents

Verify that all components are present before beginning installation:

- Ceiling Fan Unit with Integrated Light Fixture
- Remote Control
- Mounting Bracket
- Screws and Wire Nuts
- Instruction Manual

35dB Powerful and Quiet

Wide Cooling Area



Image: Overview of the LEDIARY Low Profile Ceiling Fan components, including the main unit, fan blades, and light sockets.

Specifications

Feature	Detail
Brand	LEDIARY
Model Number	LEDIARY-LPCFL6W
Color	Black
Material	Aluminum, Iron, Metal
Style	Modern, Industrial, Farmhouse, Rustic
Light Fixture Form	Close to Ceiling
Product Dimensions	19.7" L x 19.7" W x 6.3" H
Indoor/Outdoor Usage	Indoor

Power Source	DC Motor
Installation Type	Flush Mount
Special Feature	Remote Controlled, Reversible Function, Timer
Control Method	Remote
Light Source Type	LED, Incandescent
Finish Type	Matte Black
Number of Light Sources	6
Voltage	120 Volts (AC)
Item Weight	8.2 Pounds
Wattage	10 watts (Max LED)
Bulb Base	E26
Assembly Required	Yes
Light Output Maximum	800 Lumens

Ceiling Fan Details



Modern Simple Design



Black Metal Frame



3 Transparent Fan Blades

Image: Detailed dimensions of the ceiling fan and examples of compatible E26 bulb types (A19, T14, G14, G25) with a height restriction of 4.72 inches.

Setup and Installation

Follow these steps carefully for proper installation. It is recommended to have two people for installation.

- 1. Unboxing:** Carefully remove all components from the packaging. Keep the packaging materials until installation is complete.
- 2. Loosen Ceiling Plate Screws:** Use a screwdriver to loosen the four screws on the ceiling plate. Rotate the ceiling plate counter-clockwise to remove it.
- 3. Install Light Bulbs:** **IMPORTANT:** Install the light bulbs at this step before mounting the fan. Screw the E26 light bulbs into the sockets in a clockwise direction. Ensure bulbs are small-sized (height below 4.72 inches) and LED bulbs are max 10W.
- 4. Install Ceiling Plate Bracket:** Secure the mounting bracket to your ceiling's electrical junction box using appropriate screws. Ensure the ground wire is properly connected.
- 5. Hang the Fan:** Use the auxiliary mounting tool (S-hook) to temporarily hang the ceiling fan unit from the ceiling plate bracket, allowing for easier wiring.

6. **Wiring:** Connect the electrical wires from the ceiling to the fan unit according to the wiring diagram in the full manual. Typically, this involves connecting live, neutral, and ground wires.
7. **Fix and Tighten the Ceiling Fan:** Align the screws on the ceiling plate with the grooves on the fan unit. Push the fan up and rotate it clockwise until it is securely in place. Tighten all four screws firmly.

Your browser does not support the video tag.

Video: A visual guide demonstrating the installation process for the LEDIARY Ceiling Fan, from unboxing to final mounting and wiring connections.

Operating Instructions

Your LEDIARY ceiling fan is operated using the included remote control. Ensure the remote has working batteries installed.

- **Power On/Off:** Use the dedicated power button to turn the fan and lights on or off.
- **Light Control:** The light can be turned on and off independently from the fan. It can also be controlled by your wall switch.
- **Fan Speed:** Select from 6 wind speeds to adjust airflow intensity.
- **Timer Function:** Set the fan to automatically turn off after 1, 2, or 4 hours.
- **Reversible Mode:** Activate the reversible motor function via the remote control. This allows for downward airflow (cooling) in summer and upward airflow (circulating warm air) in winter.

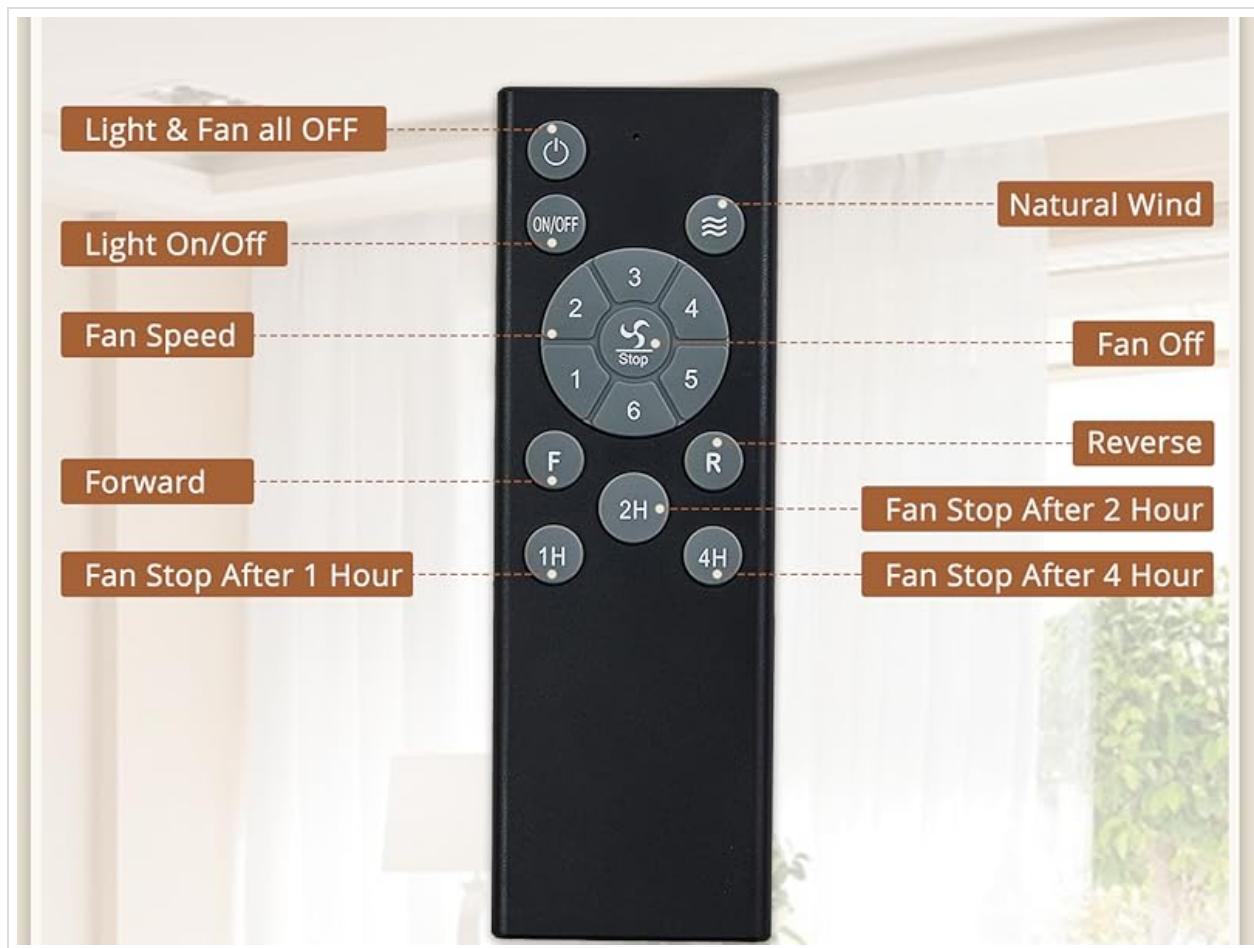


Image: Diagram illustrating the various buttons and functions of the remote control for the LEDIARY Ceiling Fan, including power, fan speed, timer, and reversible mode.

Your browser does not support the video tag.

Video: A demonstration of the LEDIARY Ceiling Fan's features, including light operation, fan speeds, and the quiet DC motor.

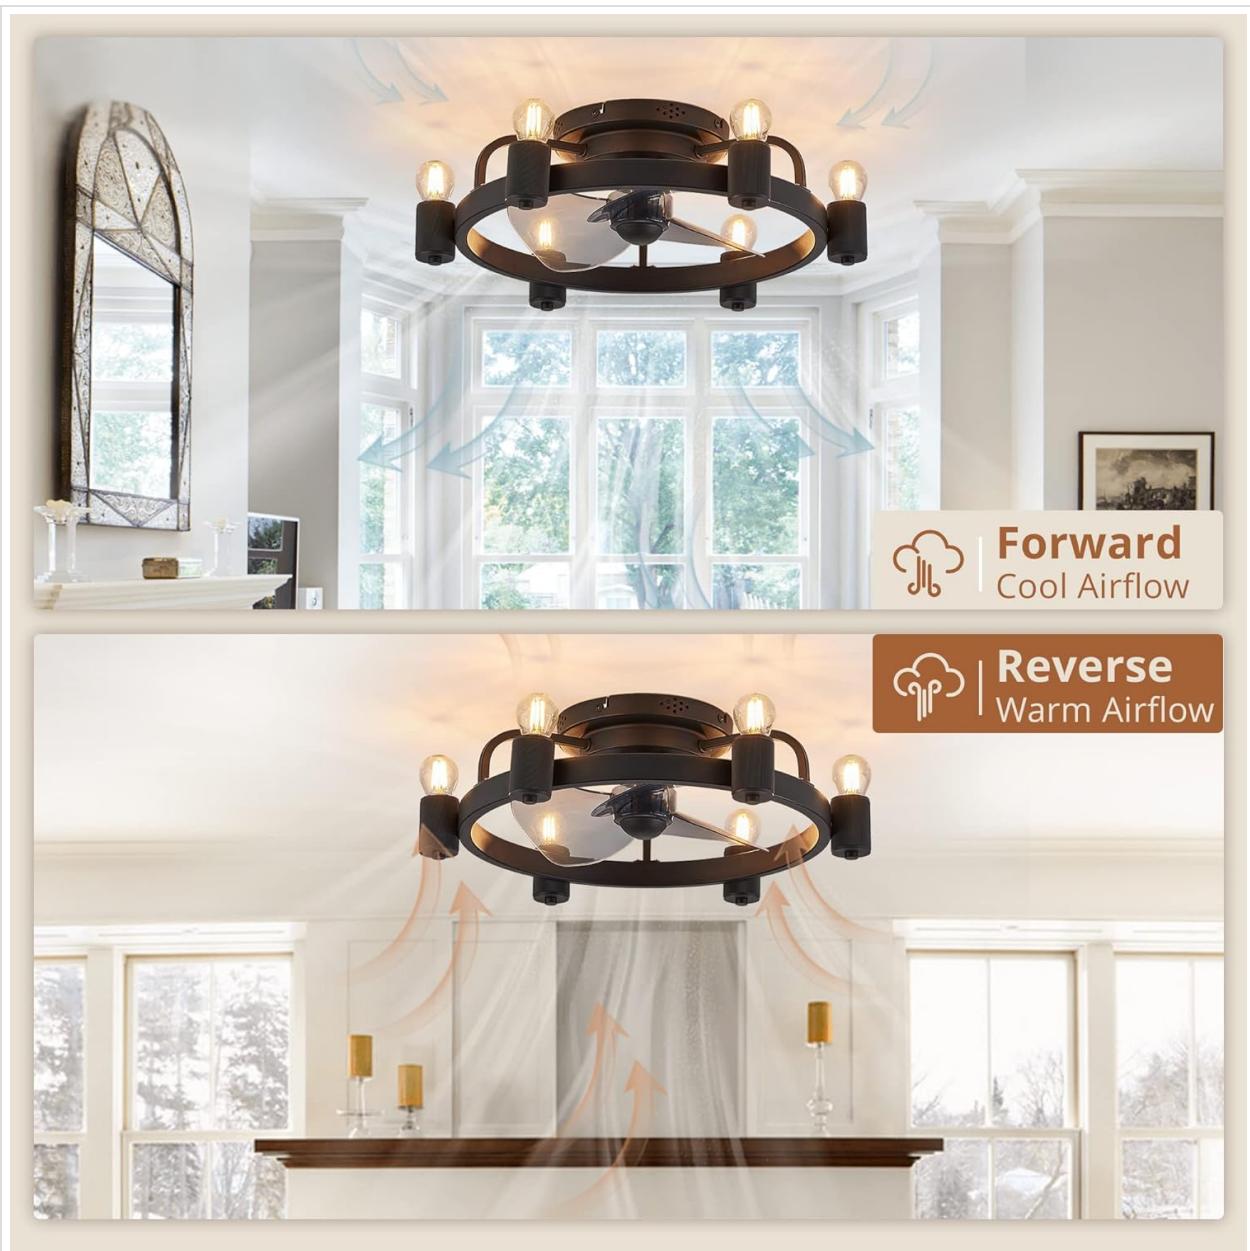


Image: Visual representation of the forward (cooling) and reverse (warm air circulation) airflow modes of the ceiling fan.

Maintenance

- Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Bulb Replacement:** Ensure power is off before replacing bulbs. Use only compatible E26 bulbs as specified in the safety information and specifications section.
- Regular Checks:** Periodically check all connections and screws to ensure they remain tight.

Troubleshooting

Problem	Possible Cause	Solution
Fan does not operate / Lights do not turn on	No power supply; Loose wiring; Remote control battery dead or not paired.	Check circuit breaker and wall switch. Verify all wiring connections are secure. Replace remote battery or re-pair remote.
Lights flicker	Incompatible bulbs; Loose bulb connection.	Ensure bulbs meet specified height and wattage requirements. Tighten bulbs in their sockets.

Fan turns on or changes speed randomly	Remote interference; Internal control unit issue.	Ensure no other devices are interfering with the remote signal. If the issue persists, contact customer support.
Fan is noisy	Loose screws; Improper installation.	Check all mounting screws and ensure the fan is securely attached to the ceiling bracket.

Warranty and Support

LEDIARY provides a 5-year motor support and a 2-year limited support on other parts for this flush mount ceiling fan with lights. We are committed to upholding the highest standards for all our products by testing each product for optimal performance.

For further assistance, troubleshooting not covered in this manual, or warranty claims, please contact LEDIARY customer support through your purchase platform or visit our official website.

© 2024 LEDIARY. All rights reserved.