

[Manuals.plus](#) /

> [Greenworks](#) /

> Greenworks PRO 10 in. 60V Cordless Pole Saw (PS60L01) User Manual

Greenworks PS60L01

Greenworks PRO 10 in. 60V Cordless Pole Saw (PS60L01) User Manual

1. INTRODUCTION

This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your Greenworks PRO 10-inch 60V Cordless Pole Saw, model PS60L01. Please read this manual thoroughly before using the product to ensure proper function and to prevent injury.

The Greenworks PRO PS60L01 is designed for pruning and limbing tasks, offering extended reach for various yard clean-up and maintenance needs. This product is sold as a tool-only unit; battery and charger are not included.

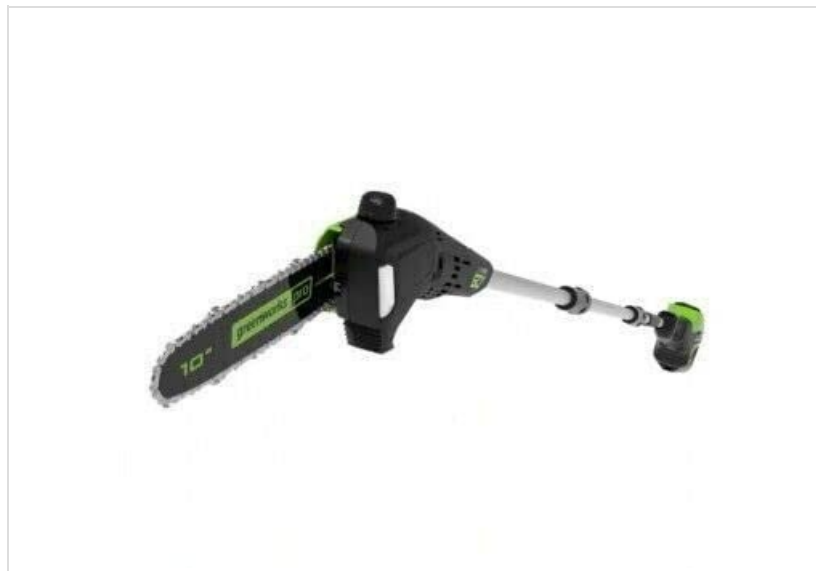


Figure 1: Greenworks PRO 10-inch 60V Cordless Pole Saw (Tool-Only). This image shows the main unit of the pole saw without the battery attached.

2. SAFETY INFORMATION

WARNING: Read all safety warnings, instructions, illustrations, and specifications provided with this power

tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment (PPE), including eye protection, gloves, and head protection, when operating the pole saw.
- Ensure the work area is clear of bystanders, children, and pets.
- Do not operate the pole saw in wet conditions or in the presence of flammable liquids or gases.
- Keep hands and feet away from the cutting chain.
- Before performing any maintenance, adjustments, or cleaning, ensure the battery is removed from the tool.
- Use only Greenworks 60V batteries and chargers with this tool.
- Inspect the pole saw for damaged parts before each use. Replace or repair any damaged components.

3. ASSEMBLY AND SETUP

The Greenworks PRO PS60L01 is a tool-only product. A compatible Greenworks 60V battery and charger are required for operation and must be purchased separately.

3.1 Attaching the Bar and Chain

1. Carefully unpack all components.
2. Place the chain around the sprocket and guide bar. Ensure the cutting edges of the chain are facing the correct direction.
3. Mount the guide bar and chain onto the pole saw body, aligning the bar studs with the holes in the guide bar.
4. Install the side cover and tighten the nuts securely. Adjust chain tension as per the instructions in your full product manual (not provided here).

3.2 Adding Chain Oil

The pole saw features an automatic chain oiler for constant chain lubrication. Before first use and regularly thereafter, fill the oil reservoir with appropriate bar and chain oil.

1. Locate the oil cap on the pole saw body.
2. Unscrew the cap and fill the reservoir with high-quality bar and chain oil.
3. Replace the cap and ensure it is tightened to prevent leaks.

4. OPERATING INSTRUCTIONS

4.1 Starting the Pole Saw

The Greenworks PRO PS60L01 features an easy-starting system with no prime, no choke, and no pull cord, ensuring fast starts every time.

1. Ensure the battery is fully charged and securely inserted into the pole saw.
2. Hold the pole saw firmly with both hands.
3. Engage the safety lock-out button, then squeeze the trigger to start the motor.

4.2 Cutting Techniques

- Always maintain a firm grip and balanced stance.
- Begin cutting with the bottom of the guide bar, allowing the chain to pull the saw into the branch.

- Avoid cutting branches thicker than the guide bar length.
- Be aware of falling branches and clear your escape path before cutting.
- The intelligent brushless motor technology provides more power and longer runtimes for efficient cutting.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your pole saw.

- **Chain Lubrication:** The automatic chain oiler provides constant lubrication. Regularly check the oil level and refill the reservoir as needed. Use only recommended bar and chain oil.
- **Chain Tension:** Periodically check and adjust the chain tension. A properly tensioned chain should be snug but still able to be pulled around the guide bar by hand.
- **Chain Sharpening/Replacement:** A dull chain will not cut efficiently and can cause kickback. Sharpen or replace the chain as necessary. Refer to your full product manual for detailed instructions on chain maintenance.
- **Cleaning:** After each use, remove the battery and clean the pole saw, especially the guide bar and chain area, to remove sawdust and debris.
- **Storage:** Store the pole saw in a dry, secure location out of reach of children. Remove the battery before storage.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Greenworks PRO PS60L01 pole saw.

Problem	Possible Cause	Solution
Pole saw does not start.	Battery not inserted correctly or discharged. Safety lock-out not engaged.	Ensure battery is fully charged and properly seated. Engage safety lock-out before pressing trigger.
Chain does not move or moves slowly.	Chain tension too tight. Chain dull or damaged. Obstruction in guide bar.	Adjust chain tension. Sharpen or replace chain. Clear any debris from the guide bar.
Excessive vibration during operation.	Loose components. Damaged chain or guide bar.	Check all fasteners for tightness. Inspect chain and guide bar for damage and replace if necessary.

7. SPECIFICATIONS

Feature	Detail
Brand	Greenworks
Model	PS60L01
Voltage	60 Volts
Blade Length	10 Inches

Feature	Detail
Item Weight	8 Pounds
Power Source	Battery Powered
Special Feature	Brushless Motor Technology
Blade Material	High Speed Steel
Surface Recommendation	Wood
Included Components	Bare Tool (Battery and Charger NOT included)