

Foppapedretti A19-150R

Foppapedretti Cordless Vacuum Cleaner A19-150R User Manual

Model: A19-150R

1. INTRODUCTION

Thank you for choosing the Foppapedretti Cordless Vacuum Cleaner A19-150R. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and retain it for future reference. The Foppapedretti A19-150R is a versatile 4-in-1 lightweight stick vacuum designed for various cleaning tasks. It features a powerful 210W brushless motor, offering up to 25 Kpa suction for effective cleaning of pet hair, carpets, and hard floors. Its design includes a multi-stage filtration system and a removable battery for convenient charging and extended use.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance, including the following:

- Read all instructions before using the appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Use only the charger specified by the manufacturer.

3. PACKAGE CONTENTS

Carefully unpack all components and ensure you have received all items listed below. If any parts are missing or damaged, contact customer support.

- Main Motor Unit
- Extension Wand
- Motorized LED Brush Head
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount Bracket
- Power Adapter/Charger
- HEPA Filter (pre-installed)
- User Manual



Figure 3.1: Overview of the Foppapedretti Cordless Vacuum Cleaner showing its main components and various configurations, including the main unit, extension wand, brush head, and filters. This image illustrates how the vacuum can be assembled for different cleaning tasks.

4. SETUP AND ASSEMBLY

4.1 Assembly

1. **Attach the Extension Wand:** Insert the extension wand into the main motor unit until it clicks securely into place.
2. **Attach the Cleaning Head:** Connect the desired cleaning head (e.g., Motorized LED Brush Head, crevice tool, or 2-in-1 brush tool) to the other end of the extension wand or directly to the main motor unit for handheld use. Ensure it clicks into place.

4.2 Charging the Battery

Before first use, fully charge the battery. The battery is removable for convenient charging.

- **Charging Time:** A full charge typically takes 3.5 to 4 hours.
- **Charging Method:** Connect the power adapter to the charging port on the battery or the main unit. Plug the adapter into a wall outlet. The charging indicator lights will show the charging status.

High Quality Removeable Battery



Figure 4.1: The vacuum cleaner's battery being charged while mounted on a wall bracket. The image highlights the charging cable connected to the battery, indicating the charging process and the removable nature of the battery for flexible charging options.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Suction Modes

The vacuum cleaner features two suction modes for different cleaning needs.

- **Power On:** Press the power button to turn on the vacuum cleaner. It will typically start in the standard suction mode.
- **Switch Modes:** Press the mode button to toggle between the two suction levels.
- **Standard Mode (LV:1):** Provides up to 35 minutes of runtime, suitable for everyday dust, hair, and small debris.
- **Max Mode (LV:2):** Provides up to 15 minutes of runtime, ideal for heavier debris like gravel, pet food, or coffee beans, offering maximum suction power.
- **Power Off:** Press the power button again to turn off the vacuum cleaner.

25 KPA Super Strong Suction

2 Modes switchable, deep clean on all flooring types



Figure 5.1: The vacuum cleaner in operation, demonstrating its two suction modes. Level 1 (LV:1) offers 35 minutes for dust and hair, while Level 2 (LV:2) provides 15 minutes for heavier debris like gravel and pet food, illustrating its versatility for various cleaning tasks.

5.2 Using the Motorized LED Brush Head

The motorized brush head is designed for efficient cleaning on various floor types and features LED lights to illuminate dark areas.

- **Swivel Function:** The brush head offers 180° adjustable swivel sideways and 90° up-down functionality, allowing easy maneuverability around furniture and into tight spaces.
- **LED Lights:** The integrated LED lights automatically illuminate the cleaning path, making hidden dust and debris visible under beds, couches, and in dimly lit corners.
- **Floor Types:** Suitable for both hard floors and carpets.

Super Strong Motorized LED Brush Head Suitable for cleaning the corner of bed or couch

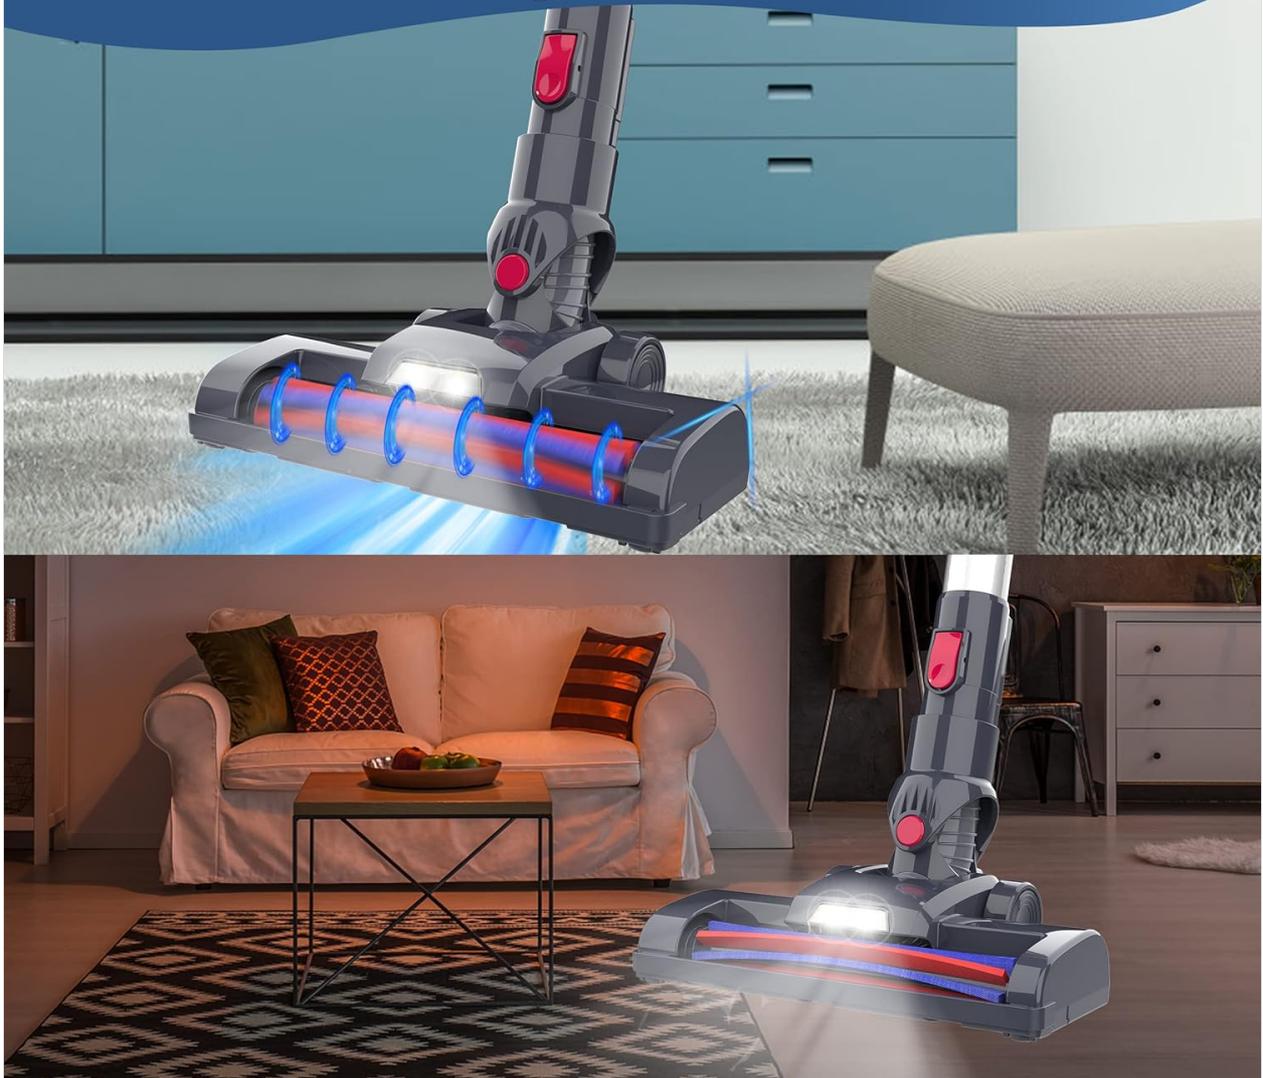


Figure 5.2: The motorized LED brush head in action, showing its ability to clean under furniture and in dark areas. The blue light emitted from the brush head highlights dust and debris on both carpeted and hard floor surfaces, demonstrating its effectiveness in various environments.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Bin

Empty the dust bin regularly, especially when the MAX line is reached, to maintain strong suction.

- **One-Click Release:** Position the dust bin over a trash receptacle. Press the dust bin release button (usually located near the bottom of the dust bin) to open the flap and empty the contents.
- Close the flap securely after emptying.

6.2 Cleaning the Filters

The vacuum cleaner features a 4-layer filtering system, including a washable HEPA filter. Regular cleaning of filters is crucial for maintaining suction power and air quality.

- **Disassembly:** Twist and pull to remove the dust bin from the main motor unit. Then, carefully remove

the internal filter components, including the HEPA filter and metal mesh filter.

- **Washing:** Rinse the HEPA filter and metal mesh filter under running water until clean. Do not use detergents.
- **Drying:** Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not expose to direct sunlight or use a dryer.
- **Reassembly:** Once completely dry, reassemble the filters and dust bin in reverse order of disassembly. Ensure all parts are securely in place.

One Click to Pour Rubbish



Washable HEPA Filter

Figure 6.1: Demonstrates the process of emptying the dust bin with a single click and washing the HEPA filter under running water. This image highlights the ease of maintenance for the vacuum cleaner's filtration system.

4 Layers Filtering System

210W power motor can captures 99.99% of fine particles as small as 0.3 micro



Figure 6.2: An exploded view diagram illustrating the 4-layer filtering system of the vacuum cleaner. It shows the sequence of filtration: Cyclone Filtration (1) for large particles, Metal Mesh Filtration (2) for hair and dust, HEPA Filtration (3) for 0.3 micron dust, and Air Outlet Filtration (4) for fine particles, ensuring comprehensive air purification.

6.3 Cleaning the Brush Roll

Periodically check the motorized brush head for tangled hair or debris. Use scissors to cut away any tangled hair and remove it from the brush roll.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Battery is not properly installed	Charge the battery fully Ensure the battery is securely clicked into place

Problem	Possible Cause	Solution
Low suction power	Dust bin is full Filters are clogged Hose or brush head is blocked	Empty the dust bin Clean or wash the filters (ensure they are completely dry) Check for and remove any blockages in the hose, extension wand, or brush head
Brush roll not spinning	Brush roll is jammed Brush head is not properly attached	Remove any tangled hair or debris from the brush roll Ensure the brush head is securely connected to the extension wand or main unit
Short runtime	Battery not fully charged Using Max mode continuously Battery degradation	Ensure battery is fully charged before use Use standard mode for longer cleaning sessions Contact customer support for battery replacement options if runtime significantly decreases over time

8. SPECIFICATIONS

Feature	Specification
Brand	Foppapedretti
Model Name	A19-150R
Special Feature	Lightweight
Filter Type	HEPA Filter
Included Components	Brush (refer to package contents for full list)
Cordless	Yes
Dust Bin Capacity	0.55 litres
Battery Life (Max)	Up to 35 Minutes (Standard Mode)
Motor Horsepower	210 Watts (Brushless Motor)
Suction Power	Up to 25 Kpa
Charging Time	3.5 - 4 hours
Item Weight	2 kg 740 g
Item Dimensions (LxWxH)	43.9 x 27.4 x 13.5 Centimeters
Control Method	Push Button / Touch

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact the retailer where the product was purchased. Keep your proof of purchase for warranty claims.



bright
User Guide



Bright Terms & Policies
By using your Bright, you agree to be bound by the U-tec Privacy Policy. Please read all applicable terms, rules, policies and usage provisions at <https://u-tec.com/pages/privacy>

[Bright Smart Lighting User Guide - U-tec](#)

Comprehensive user guide for the U-tec Bright smart lighting device, covering setup options via U-tec App and Amazon Alexa, mesh network functionality, and FCC compliance.