

[Manuals.plus](#) /

> [LiLiTok](#) /

> [LiLiTok AF63 M Pen Lite Stylus User Manual](#)

LiLiTok AF63

LiLiTok AF63 M Pen Lite Stylus User Manual

Model: AF63

[Overview](#)

[Compatibility
Maintenance](#)

[Package
Contents
Troubleshooting](#)

[Setup &
Use
Specifications](#)

[Operating
Support](#)

[Charging](#)

1. PRODUCT OVERVIEW

The LiLiTok AF63 M Pen Lite is a high-precision stylus designed to enhance your interaction with compatible Huawei MediaPad and Matebook devices. It offers a natural writing and drawing experience, making it ideal for note-taking, sketching, and precise navigation.



Figure 1: Front view of the LiLiTok AF63 M Pen Lite Stylus, showcasing its sleek silver design and fine tip.

2. COMPATIBILITY

This stylus is specifically designed for use with the following Huawei devices:

- Huawei MediaPad M5 Lite 10.1"
- Huawei MediaPad M6 10.8"
- Huawei MediaPad Lite C5 10.1"
- Huawei Matebook E 2019 (with Qualcomm 850 processor)

Ensure your device model matches one of the listed compatible models for optimal performance.

3. PACKAGE CONTENTS

Upon opening the package, please verify that all items are present:

- 1 x LiLiTok AF63 M Pen Lite Stylus
- 1 x USB Charging Cable (assumed)
- 1 x Replacement Pen Tip (if included)
- 1 x User Manual (this document)



Figure 2: Angled view of the stylus, highlighting the pen tip and the integrated clip for portability.

4. SETUP AND FIRST USE

The LiLiTok AF63 M Pen Lite is designed for immediate use with compatible devices. It typically does not require complex Bluetooth pairing.

4.1 Initial Charge

Before first use, it is recommended to fully charge the stylus. Refer to the "Charging the Stylus" section for instructions.

4.2 Using the Stylus

1. Ensure your compatible Huawei device is powered on and unlocked.
2. Simply touch the stylus tip to the screen. The device should recognize the stylus input automatically.
3. Begin writing, drawing, or navigating your device's interface as you would with a traditional pen.



Figure 3: Top-down view of the stylus, showing its overall length and design.

5. OPERATING INSTRUCTIONS

The AF63 M Pen Lite offers intuitive operation for various tasks:

5.1 Writing and Drawing

Hold the stylus as you would a regular pen. Apply light pressure to the screen to create lines. The stylus supports pressure sensitivity for varying line thickness and opacity, depending on the application.

5.2 Navigation

Use the stylus to tap, swipe, and select items on your device's screen. It provides more precise control than finger input, especially for small icons or detailed work.

5.3 Shortcut Functions (if applicable)

Some applications or device settings may allow for custom actions with the stylus, such as a quick tap for a screenshot or a long press for an eraser function. Refer to your device's user manual or specific application settings for details on stylus-specific shortcuts.

6. CHARGING THE STYLUS

The AF63 M Pen Lite features a built-in rechargeable battery. When the battery is low, the stylus's performance may diminish or it may stop responding.

1. Locate the charging port on the stylus (typically at the end opposite the tip or under a cap).
2. Connect the provided USB charging cable to the stylus.
3. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
4. A charging indicator light (if present) will illuminate, typically red, and turn green or off when fully charged.
5. Charging time may vary, but typically takes 1-2 hours for a full charge.

Note:

- Do not use damaged charging cables or adapters.
- Avoid charging in extreme temperatures.



Figure 4: View of the stylus showing both ends, where the charging port is typically located on the non-tip end.

7. MAINTENANCE AND CARE

7.1 Cleaning

To clean the stylus, gently wipe it with a soft, dry, lint-free cloth. Do not use harsh chemicals, abrasive cleaners, or immerse the stylus in water.

7.2 Pen Tip Replacement (if applicable)

Over time, the pen tip may wear down. If your stylus came with replacement tips, follow these steps:

1. Gently pull the old tip straight out from the stylus.
2. Insert the new tip straight into the stylus until it is firmly seated.

Caution:

- Do not twist the tip when removing or inserting, as this may damage the stylus.
- Store the stylus in a safe place to prevent damage to the tip.



Figure 5: Close-up view of the stylus tip, which may require occasional cleaning or replacement.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stylus not responding	Low battery; Incompatible device; Device issue.	Charge the stylus; Verify device compatibility; Restart your device.
Inaccurate or inconsistent input	Worn-out tip; Screen protector interference; Dirty screen/tip.	Replace the pen tip; Remove or adjust screen protector; Clean screen and stylus tip.
Stylus not charging	Faulty cable/adaptor; Dirty charging port.	Try a different USB cable and power adapter; Gently clean the charging port.

If the issue persists after trying these solutions, please contact customer support.

9. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	LiLiTok
Model	AF63 M Pen Lite
Compatible Devices	Huawei MediaPad M5 Lite 10.1", MediaPad M6 10.8", MediaPad Lite C5 10.1", Matebook E 2019
Material	Aluminium
Battery Type	Lithium (Rechargeable, built-in)
ASIN	B0BRCV1GCJ
Date First Available	December 30, 2022

10. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical assistance, please contact the seller or manufacturer directly through the platform where the product was purchased. Please have your purchase details and product model (AF63 M Pen Lite) ready when contacting support.

Manufacturer: LiLiTok