

shernbao PGC-670

shernbao 4-in-1 Pet Grooming Clipper PGC-670 User Manual

Model: PGC-670

1. INTRODUCTION

Thank you for choosing the shernbao 4-in-1 Pet Grooming Clipper, Model PGC-670. This cordless clipper is designed for efficient and comfortable pet grooming, featuring multiple speed settings, adjustable blade lengths, and low noise operation. Please read this manual thoroughly before first use to ensure safe and optimal performance of your grooming clipper.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always keep the clipper dry. Do not use it near water or in wet conditions.
- Do not disassemble the clipper. Refer all servicing to qualified personnel.
- Keep out of reach of children and pets.
- Ensure the clipper is fully charged before use to maintain optimal performance.
- Unplug the clipper before cleaning or performing any maintenance.
- Do not use the clipper if the cord or plug is damaged.
- Avoid dropping the clipper, as this may damage internal components.
- Only use the provided charging cable and accessories.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- shernbao PGC-670 Pet Grooming Clipper
- User Manual
- Lubricating Oil
- Cleaning Brush
- USB Charging Cable

- 3 Attachment Combs (3mm, 6mm, 10mm)

Length Adjustment Function

1.0mm / 1.3mm / 1.6mm / 1.9mm



Image: Package contents of the shernbao PGC-670 Pet Grooming Clipper.

4. PRODUCT FEATURES

- **Ergonomic Design:** Matte and bright molding plastic material for comfortable handling.
- **Adjustable Blade Length:** Integrated length adjustment function for retained hair lengths of 1.3mm, 1.6mm, and 1.9mm.
- **Multiple Speed Settings:** 5 adjustable speeds (5000/5500/6000/6500/7000 RPM) for various grooming needs.
- **Low Noise Operation:** Operates at a low noise level, approximately 65dB, to minimize pet stress.
- **Cordless Operation:** Provides up to 4 hours of running time on a single charge.
- **Fast Charging:** Requires only 2 hours for a full charge.
- **Lightweight:** Weighs approximately 215g (7.6oz) for ease of use.
- **Versatile Use:** Suitable for trimming feet, face, paws, and other body areas.
- **Detachable Blades:** Works with Shernbao 4-in-1 series blades (10A and 30A adjustable thin blades, and non-adjustable thick blades #3, #4, #5, #6, #7).
- **Attachment Comb Compatibility:** Compatible with Shernbao ACK-002 or other brands' 5-in-1 attachment guide combs.
- **Smart LED Display:** Shows remaining battery, current speed, available time, charging reminder, and clean/oil

indicators.



Image: Key features of the shernbao PGC-670 clipper.

5. SETUP

5.1 Charging the Clipper

Before first use, fully charge the clipper. Connect the USB charging cable to the clipper and a compatible USB power adapter (not included). The LED display will indicate charging status. A full charge takes approximately 2 hours and provides up to 4 hours of run time.

5.2 Attaching/Detaching Blades


The clipper uses detachable blades. To attach a blade, align it with the clipper head and press firmly until it clicks into place. To detach, push the blade release button (if present) or gently pull the blade away from the clipper head.

5.3 Attaching Guide Combs


Guide combs help achieve desired hair lengths. The PGC-670 is compatible with Shernbao ACK-002 attachment combs and others. To attach a comb:

1. Ensure the clipper is off.
2. Align the comb with the clipper blade.
3. Slide the comb onto the blade until it securely snaps into place.


To remove, gently pull the comb away from the blade.

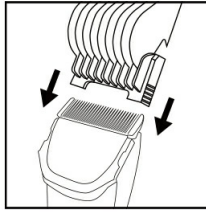

Step 1: Align comb

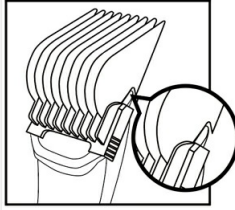

Step 2: Slide comb

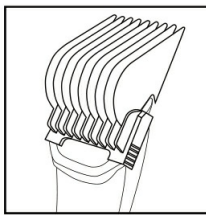

Step 3: Secure comb

Image: Steps for attaching a guide comb to the clipper.

Image: Shernbao PGC-670 clipper with compatible ACK-002 attachment combs.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the power button to turn the clipper on. Press it again to turn off.

6.2 Adjusting Speed

The clipper features 5 adjustable speeds. Use the speed adjustment buttons (usually '+' and '-') to cycle through 5000, 5500, 6000, 6500, and 7000 RPM settings. Select a speed appropriate for your pet's hair type and grooming task.



Image: Clipper LED display showing current status.

6.3 Adjusting Blade Length

The integrated blade offers length adjustments of 1.3mm, 1.6mm, and 1.9mm. Use the adjustment lever on the side of the clipper to select the desired length. This adjustment works when no attachment comb is used or in conjunction with certain combs.

Display current status in real time

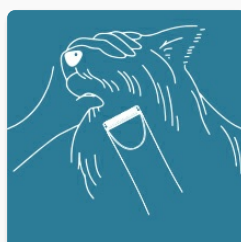 


Image: Blade length adjustment mechanism.

 
6.4 Grooming Tips

Always ensure your pet's hair is clean, dry, and detangled before grooming to prevent snagging and ensure a smooth cut.


- **Face Trimming:** Use caution around sensitive areas.
- **Paw Trimming:** Carefully trim hair between paw pads.
- **Body Trimming:** Move the clipper in the direction of hair growth for a smoother finish.




Trimming the face

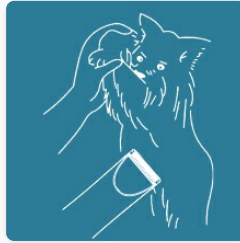

Trimming around ears

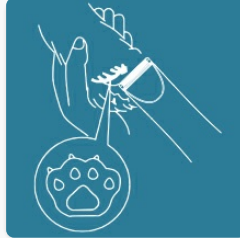

Trimming paws

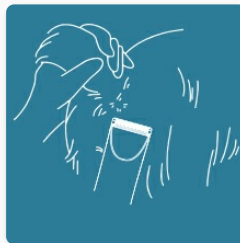 

Trimming the body

Image: Illustrations for grooming different areas of a pet.

7. MAINTENANCE

7.1 Cleaning the Blades

After each use, turn off the clipper and detach the blade. Use the provided cleaning brush to remove any trapped hair from the blade and clipper head. For thorough cleaning, you may rinse the blade under running water, ensuring it is completely dry before reattaching.

7.2 Oiling the Blades

Regular oiling is crucial for maintaining blade sharpness and clipper performance. After cleaning and drying the blade, apply 1-2 drops of the lubricating oil (provided) to the teeth of the blade. Run the clipper for a few seconds to distribute the oil evenly. This should be done before and after each grooming session.

7.3 Storage

Store the clipper in a dry, cool place away from direct sunlight. Ensure the clipper is clean and oiled before storing for extended periods.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on	Low battery; Power button not pressed firmly	Charge the clipper; Press the power button firmly

Problem	Possible Cause	Solution
Clipper pulls hair or cuts poorly	Blades are dull or dirty; Hair is tangled or wet; Insufficient oil	Clean and oil blades; Ensure hair is clean, dry, and detangled; Replace blades if dull
Clipper gets hot	Extended use; Blades need oiling	Allow clipper to cool down; Clean and oil blades
LED display not working	Clipper off; Malfunction	Turn clipper on; Contact customer service if issue persists

9. SPECIFICATIONS

 
- **Model:** PGC-670
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Charging Time:** Approximately 2 hours
- **Run Time:** Approximately 4 hours
- **Speed Settings:** 5 (5000/5500/6000/6500/7000 RPM)
- **Noise Level:** As low as 65dB
- **Blade Adjustment:** 1.3mm, 1.6mm, 1.9mm
- **Weight:** 215g (7.6oz)
- **Material:** Plastic
- **Color:** Grey
- **Recommended Uses:** Clipping, grooming, body trimming, facial trimming, pet grooming
- **Target Audience:** Pets (Dogs)
- **Package Dimensions:** 8.78 x 3.74 x 3.5 inches
- **Date First Available:** January 1, 2023

10. WARRANTY AND SUPPORT

The shernbao PGC-670 Pet Grooming Clipper comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

For any questions, concerns, or warranty claims, please contact our customer service. We offer **24-Hour Customer Service** to assist you.

Please refer to your purchase documentation for specific contact details or visit the official shernbao website for support information.

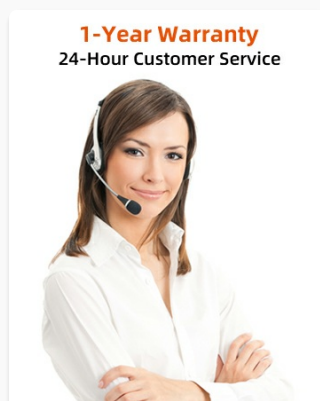

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question