

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Oilsky](#) /
- › [Oilsky M7 Bluetooth 5.0 MP3 Player for Kids - User Manual](#)

Oilsky M7

Oilsky M7 Bluetooth 5.0 MP3 Player for Kids - User Manual

Model: M7

INTRODUCTION

Thank you for choosing the Oilsky M7 Bluetooth 5.0 MP3 Player. This device is designed with children in mind, offering a simple and intuitive way to enjoy music, audiobooks, and other functions. It features a durable design, long battery life, and a built-in speaker for versatile listening. Please read this manual carefully to ensure proper use and maintenance of your device.

PRODUCT OVERVIEW & KEY FEATURES

The Oilsky M7 MP3 Player combines ease of use with a range of features:

- **Child-Friendly Design:** Cute design with a dedicated music button for instant playback.
- **Long-Lasting Battery:** Integrated 750mAh rechargeable battery provides extended playback times: approximately 90 hours with wired headphones, 39 hours via Bluetooth, 27 hours with the built-in speaker, and 23 hours for FM radio.
- **Ample Storage:** 32GB internal memory, expandable up to 128GB with a TF card (not included).
- **Bluetooth 5.0 Connectivity:** Connects wirelessly to Bluetooth headphones or speakers. *Note: Does not support Bluetooth data transfer to mobile phones or computers.*
- **HiFi Lossless Audio:** Professional audio decoding chip delivers high-fidelity, lossless sound.
- **Built-in HD Speaker:** Enjoy music without headphones.
- **Portable & Lightweight:** Weighs only 53 grams, making it easy to carry.
- **Multi-functional:** Includes FM radio, voice recorder, alarm clock, stopwatch, and pedometer.



Image: Oilsky M7 MP3 Player highlighting the one-button play feature for easy music access.



Image: Oilsky M7 MP3 Player with children enjoying music, illustrating HiFi lossless sound quality and 32GB storage capacity.

WHAT'S IN THE BOX

Your Oilsky M7 MP3 Player package includes the following items:

- 1 x Oilsky M7 MP3 Player for Kids
- 1 x USB-C Cable

- 1 x Wired Headphones
- 1 x Lanyard
- 1 x User Manual



Image: A visual representation of all items included in the Oilsky M7 MP3 Player package.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB-C cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port.



Image: The Oilsky M7 MP3 Player highlighting its 750mAh battery capacity.

2. Inserting a Micro SD Card (Optional)

If you wish to expand the storage, gently insert a Micro SD card (up to 128GB) into the designated slot until it clicks into place. Ensure the card is inserted in the correct orientation.



Image: Demonstrating the insertion of a Micro SD card into the MP3 player.

3. Transferring Music Files

Connect the MP3 player to your computer using the USB-C cable. The device will appear as a removable disk. Drag and drop your desired audio files (MP3, WMA, WAV, FLAC, APE) into the player's storage or the Micro SD card folder.



Image: Visual representation of the audio formats supported by the Oilsky M7 MP3 Player.

4. Powering On/Off

Press and hold the power button (usually located on the side) for a few seconds to turn the device on or off.

5. Screen Lock/Unlock

To prevent accidental presses, you can lock the screen. Press and hold the menu button for 3 seconds to activate the protection lock. When the lock icon appears, press and hold the menu button again for 3 seconds to unlock the device.



Image: Visual guide on how to lock and unlock the screen of the MP3 player.

OPERATING INSTRUCTIONS

1. Basic Navigation

Use the directional buttons (up, down, left, right) to navigate through menus and options. The center button typically acts as 'select' or 'confirm'. The 'back' or 'return' button allows you to go to the previous screen.

2. Music Playback

From any interface, pressing the dedicated music button will directly take you to the music playback screen. The player will resume the last played song. Use the play/pause, next/previous, and volume buttons to control playback.

3. Bluetooth Connection

To connect to Bluetooth headphones or a speaker:

1. Go to the Bluetooth menu on your MP3 player.
2. Ensure your Bluetooth headphones/speaker are in pairing mode.
3. Select 'Search for devices' on the MP3 player.
4. Choose your device from the list to pair.

Important: The Oilsky M7 MP3 Player's Bluetooth function is for audio output only and cannot transfer data to mobile phones or computers.



Image: The Oilsy M7 MP3 Player demonstrating Bluetooth 5.0 connectivity with headphones and a speaker.

4. FM Radio

To use the FM radio, connect the wired headphones as they act as the antenna. Navigate to the FM Radio application, then you can scan for stations and save your favorites.

LECTEUR MP3 AVEC RADIO FM



Partagez plus de bonheur avec vos amis



Les écouteurs filaires
sont soumis à la nature

Image: Children listening to FM radio on the Oilsky M7 MP3 Player using wired headphones.

5. Voice Recorder

Access the Voice Recorder function to record audio. This can be useful for capturing notes or creating personalized audio messages.

LECTEUR MP3 AVEC ENREGISTREUR

Vous pouvez donner de la musique à votre enfant ou enregistrer une histoire pour qu'il joue encore et encore avant de se coucher



"Il y a une princesse qui s'appelle Blanche - neige, sa peau est blanche et ses lèvres sont rouges. Blanche - neige est gentille, donc tout le monde l'aime. Seule la méchante reine ne l'aime pas..."

Image: The Oilsky M7 MP3 Player displaying its voice recorder feature, with children listening to a story.

6. Other Functions

The Oilsky M7 also includes:

- **Alarm Clock:** Set alarms for reminders.
- **Stopwatch:** For timing activities.
- **Pedometer:** Track steps during physical activity.
- **Photos:** View images on the device.

AUTRES PETITES FONCTIONS AMUSANTES

Répondez à vos besoins avec le lecteur MP3 Kids



Image: The Oilsky M7 MP3 Player displaying its multi-functional interface with icons for various features.

MAINTENANCE

To ensure the longevity and optimal performance of your Oilsky M7 MP3 Player:

- Keep the device dry and away from extreme temperatures.
- Clean the screen and body with a soft, dry cloth. Avoid using harsh chemicals.
- Avoid dropping or subjecting the device to strong impacts.
- Charge the battery regularly, even if not in use, to maintain battery health.
- Do not attempt to disassemble or repair the device yourself.

TROUBLESHOOTING

If you encounter issues with your MP3 player, try the following solutions:

Problem	Solution
Device does not turn on	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, perform a hard reset (refer to the device's specific reset method if available, or hold the power button for an extended period).
Cannot connect via Bluetooth	Ensure Bluetooth is enabled on both the MP3 player and the target device (headphones/speaker). Make sure the target device is in pairing mode. Keep devices within range. Remember, it cannot connect to phones/computers for data transfer.
Music files not recognized	Check if the music files are in a supported format (MP3, WMA, WAV, FLAC, APE). Ensure files are transferred correctly to the device's internal storage or the Micro SD card.
Short battery life	Battery life varies based on usage (wired vs. Bluetooth, speaker vs. headphones, volume level). Ensure the device is fully charged. Reduce screen brightness or turn off unused features to conserve power.
Screen is unresponsive	Check if the screen lock is active. Unlock the screen by pressing and holding the menu button for 3 seconds. If still unresponsive, try restarting the device.

SPECIFICATIONS

Feature	Detail
Brand	Oilsky
Model Name	M7
Color	Blue
Screen Size	1.44 Inches
Connectivity Technology	Bluetooth 5.0, USB-C
Memory Storage Capacity	32 GB (expandable via Micro SD up to 128GB)
Battery Capacity	750 mAh
Special Features	Easy to Use, Portable, Rechargeable, Built-in Speaker, HiFi Lossless Audio, FM Radio, Voice Recorder, Alarm, Stopwatch, Pedometer
Compatible Devices	Speaker, Headphones, Personal Computer (for file transfer)
Media Type	Micro SD

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the Oilsky M7 32GB MP3 Player for children with Bluetooth 5.0 functionality. This video demonstrates the player's features and design.

WARRANTY & SUPPORT

For any questions regarding your Oilsky M7 MP3 Player, please do not hesitate to contact Oilsky customer service via Amazon. We are committed to providing excellent support and assistance.