

Beyution RC-G008

Beyution Universal Remote Control RC-G008 Instruction Manual

Model: RC-G008 | Brand: Beyution

INTRODUCTION

This manual provides detailed instructions for the Beyution Universal Remote Control, model RC-G008. It covers essential information regarding setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your remote control. This remote is designed to be compatible with various TV brands, including Samsung, Sharp, LG, Sony, Panasonic, Toshiba, JVC, Hisense, Philips, and TCL.

SETUP

1. Battery Installation

The Beyution Universal Remote Control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

- 1. Locate the battery compartment on the back of the remote control.
- 2. Press down on the latch and slide the battery cover downwards to open it.
- 3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Slide the battery cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating where to insert the two AAA batteries.

2. Initial Use

This Beyution Universal Remote Control is a replacement infrared remote and does not require any programming or setup. Once batteries are installed, it is ready for immediate use with compatible televisions. Simply point the remote at your TV and begin

operating it.



Image: Angled view of the Beyution RC-G008 remote control, highlighting its button layout and design.

OPERATING INSTRUCTIONS

The RC-G008 remote control features a standard layout for easy navigation and control of your television. Below is a guide to its primary functions and special buttons.





Image: Front view of the remote control, detailing the arrangement and labels of all buttons.

Basic Functions

- **Power (●):** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI, AV, etc.).
- **Volume (+/-):** Adjusts the TV's volume level.
- **Channel (CH ▲/▼):** Changes the TV channel up or down.
- **Number Pad (0-9):** Directly enters channel numbers or other numerical inputs.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **Menu:** Opens the TV's main menu.
- **Exit:** Exits the current menu or function.

Special Feature Buttons

- **Netflix:** Direct access to the Netflix application.
- **3D:** Activates or deactivates 3D mode on compatible televisions.
- **APPS:** Opens the TV's applications menu.
- **Smart:** Accesses smart TV features or home screen.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **Colored Buttons (A, B, C, D):** These buttons typically correspond to specific functions within TV menus or smart applications, as indicated on your TV screen.
- **List:** Displays a list of channels or other content.

This remote is designed to work with a wide range of TV brands. For specific functions related to your TV model, refer to your television's user manual.



Image: A user operating the remote control while watching television, demonstrating typical usage.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your Beyution Universal Remote Control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are correctly inserted with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there is a clear line of sight between the remote's infrared emitter and the TV's infrared receiver. Obstructions can block the signal.
 - Confirm the remote is pointed directly at the TV.
- **Limited Range:**
 - Ensure batteries are fresh. Weak batteries can reduce signal strength.
 - Verify no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the problematic buttons, to remove any dirt or debris that might be obstructing them.
 - If the issue persists after checking batteries and cleaning, the remote may have internal damage.

If these steps do not resolve the issue, please refer to the "Warranty and Support" section for further assistance.

SPECIFICATIONS

Model	RC-G008
Brand	Beyution
Connectivity Technology	Infrared
Material	ABS Plastic
Product Dimensions	5 x 1 x 0.5 inches
Item Weight	2.47 ounces
Batteries Required	2 AAA batteries (not included)
Maximum Distance	Approximately 10 meters (33 feet)
Special Feature	Ergonomic design
Compatible Devices	Various TV brands including Samsung, Sharp, LG, Sony, Panasonic, Toshiba, JVC, Hisense, Philips, TCL

WARRANTY AND SUPPORT

Warranty Information

The Beyution Universal Remote Control RC-G008 comes with a **6-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, concerns, or assistance with your remote control, please contact our customer service team. If you cannot find

your specific TV model in a compatibility list or if the remote control you received is damaged or not working, our support staff will provide a satisfactory solution within 24 hours.

Contact: Please refer to the seller's contact information on the platform where you purchased the product, typically via email or messaging system.

© 2023 Beyution. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question