

[Manuals.plus](#) /

› [BolaButty](#) /

› BolaButty Bluetooth Speaker with HD Sound, Portable Wireless, IPX5 Waterproof, Up to 20H Playtime, TWS Pairing, BT5.3 - Instruction Manual

BolaButty

BolaButty Bluetooth Speaker Instruction Manual

Model: C27C

1. PRODUCT OVERVIEW

The BolaButty Bluetooth Speaker delivers an immersive audio experience with its dual drivers and advanced sound technology, providing powerful, well-balanced sound with minimal distortion. Its durable design and IPX5 waterproof rating make it suitable for various environments, including outdoor use. The speaker also features dynamic multi-color light effects that sync with music, and supports True Wireless Stereo (TWS) pairing for an enhanced soundstage.



Image: The BolaButty Bluetooth Speaker, showcasing its IPX5 waterproof capability with water splashing around it. The speaker is black with a textured surface and colorful lights on its ends.

2. WHAT'S IN THE BOX

Upon unboxing your BolaButty Bluetooth Speaker, you will find the following components:

- 1 x Waterproof Bluetooth Speaker (Dimensions: 7.87"D x 2.76"W x 2.81"H, Weight: 1.28lb)
- 1 x Type-C Charging Cable
- 1 x Quick Start Guide

3. SETUP GUIDE

3.1. Charging the Speaker

Before initial use, fully charge the speaker using the provided Type-C charging cable. Connect the Type-C cable to the speaker's charging port and the other end to a 5V1A power adapter (not included). A full charge ensures optimal battery performance.

3.2. Bluetooth Pairing

To connect your speaker to a device via Bluetooth:

1. Power on the speaker. The Bluetooth indicator light will begin to flash, indicating it is in pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "BolaButty C27C" from the list of found devices.
4. Once connected, the Bluetooth indicator light on the speaker will become solid.

For optimal connection stability, ensure your device is within 33 feet (approximately 10 meters) of the speaker and avoid strong electromagnetic environments.

TWS Pairing



Double the sound to create an immersive atmosphere

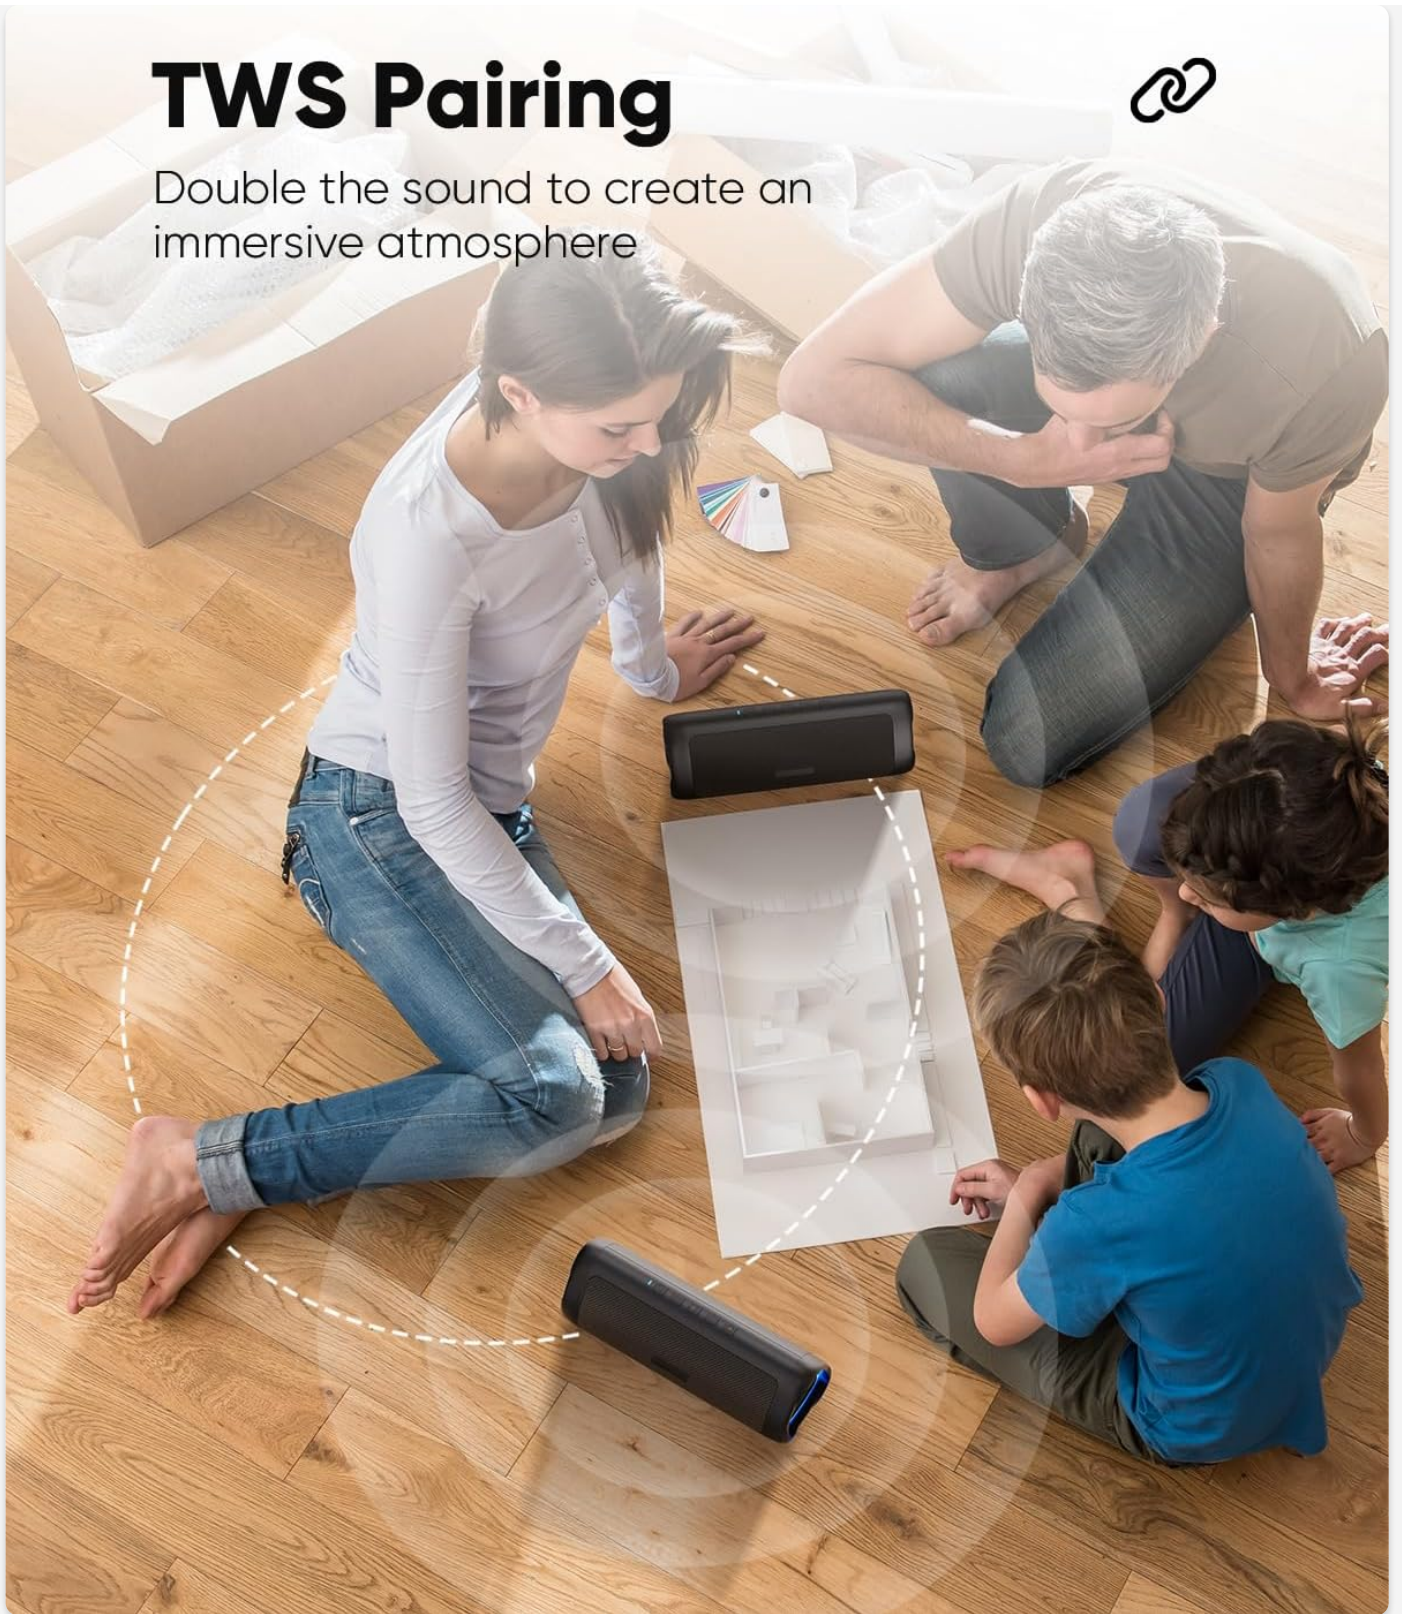


Image: Two BolaButty Bluetooth Speakers positioned on a floor, illustrating the True Wireless Stereo (TWS) pairing feature for an immersive audio experience.

3.3. True Wireless Stereo (TWS) Pairing

For an immersive stereo sound experience, you can connect two BolaButty Bluetooth Speakers together:

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. Press the TWS pairing button on one speaker (this will be your primary speaker).
3. The speakers will automatically search for and connect to each other.
4. Once paired, connect your device to the primary speaker via Bluetooth as described in section 3.2.

4. OPERATING INSTRUCTIONS

4.1. Basic Controls

The speaker features intuitive buttons for easy control:

- **Power Button:** Press and hold to turn the speaker on or off.
- **Volume Up (+):** Press to increase volume.
- **Volume Down (-):** Press to decrease volume.
- **Play/Pause Button:** Press to play or pause audio.
- **Mode Button (M):** Press to switch between Bluetooth and AUX modes.
- **Light Button:** Press to cycle through or turn off the vibrant light effects.



Image: A hand pressing one of the control buttons on the top surface of the BolaButty Bluetooth Speaker, demonstrating ease of use.

4.2. Vibrant Light Effects

The speaker features dynamic multi-color lights that can sync to the beat of your music. To customize or turn off these effects, simply press the dedicated Light button on the speaker's control panel.

Breathing Light



The characters breathe and beat the rhythm of the music.



Image: Three BolaButty Bluetooth Speakers displayed with their end panels illuminated in different RGB colors (blue, red, green), highlighting the 'Breathing Light' feature.

4.3. Hands-Free Calling

With its built-in microphone, the speaker allows for convenient hands-free phone calls when connected to your smartphone. Answer or end calls using the appropriate control button (refer to the Quick Start Guide for specific button functions).

4.4. AUX Playback

You can play music from devices without Bluetooth connectivity using the AUX jack. Simply connect an AUX cable (not included) from your device to the speaker's AUX port. Use the Mode button to switch to AUX input.

5. MAINTENANCE

5.1. Waterproofing (IPX5)

The speaker has an IPX5 waterproof rating, meaning it is protected against water splashes and spills. It is suitable for use outdoors, by the pool, or at the beach. **Note:** IPX5 rating means it can resist a sustained, low-pressure water jet spray. It is not designed for submersion in water.

IPX5 Waterproof



Image: The BolaButty Bluetooth Speaker resting on a sandy surface with water splashing around it, emphasizing its IPX5 waterproof feature for outdoor and wet environments.

5.2. Cleaning

To clean your speaker, use a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the speaker's finish or internal components. Ensure the charging port cover is securely closed before cleaning with water.

6. TROUBLESHOOTING

6.1. Bluetooth Connection Issues

If your Bluetooth speaker disconnects frequently or fails to pair:

- Ensure your device is within 33 feet (10 meters) of the speaker.
- Avoid strong electromagnetic environments, which can interfere with the signal (e.g., Wi-Fi routers, microwave ovens, wireless mice, keyboards).
- Make sure the speaker has sufficient battery power. Low battery can affect Bluetooth module performance.
- If possible, adjust your Wi-Fi device to a 5GHz frequency band to reduce interference with the Bluetooth speaker's 2.4GHz connection.
- Try resetting the speaker (refer to the Quick Start Guide for reset instructions).



Image: A text box titled 'Note' explaining how Wi-Fi signal strength, microwave ovens, or other 2.4GHz devices can cause noise, connection interruption, or delay in the product.

6.2. Short Battery Life

If the speaker's battery does not last as long as expected:

- Ensure the speaker was fully charged before use.
- Actual playtime can vary depending on volume level, audio content, and usage. For example, at 50% volume with lights off, playtime is approximately 21 hours, but at 100% volume with lights on, it's approximately 2 hours.
- Turn off the multicolor lights with a simple button press to conserve battery.

Up to 20H Working time

Continued music fills most of the day



20H



Notes: Up to 20H playtime under 50% volume and light off.

Image: A graphic highlighting 'Up to 20H Working time' for the BolaButty Bluetooth Speaker, with a note indicating this is under 50% volume and with lights off.



Image: A table providing detailed playtime approximations for the speaker under various conditions, including 50% and 100% volume with lights on or off.

6.3. Low Volume or Poor Sound Quality

If the sound is not as expected or the volume is too low:

- The speaker’s maximum output power is 10 Watts.
- In an indoor environment (approx. 200-300 square feet), a 10W speaker should provide clear and sufficient volume.
- In noisy indoor environments, the volume may be insufficient.
- For outdoor use, where sound diffuses more easily without walls to reflect it, the effective range is about 33 feet, and the volume may seem lower. The speaker may not be able to overcome very loud ambient noise outdoors.



Image: A text box addressing frequently asked questions about the speaker's sound output, maximum power, and performance in indoor versus outdoor environments.

7. SPECIFICATIONS

Feature	Detail
Model Name	C27C
Speaker Type	Built-In

Feature	Detail
Special Feature	Portable
Recommended Uses	For Smartphones or Tablets, outdoor events, parties, poolside, beach, camping, hiking
Compatible Devices	Smartphone
Unit Count	1.0 Count
Surround Sound Channel Configuration	2_0 (Stereo)
Color	1pcs-Glossy Black
Battery Life	Up to 20 Hours (50% Vol and light off), Max 24 Hours
Included Components	1 waterproof Bluetooth speaker, 1 Type-C charging cable, quick start guide
Product Dimensions	7.87"D x 2.76"W x 2.81"H
Is Waterproof	True (IPX5)
Number of Items	1
Control Method	Touch
Wireless Communication Technology	Bluetooth
Power Source	Battery Powered
Woofer Diameter	2.81 Inches
Water Resistance Level	Waterproof
Number of Batteries	1 Lithium Ion batteries required (included)
Audio Driver Type	Dynamic Driver
Bluetooth Range	30.48 Meters (33 Feet)
Subwoofer Connectivity Technology	Wireless
Connectivity Protocol	Bluetooth
Includes MP3 player?	No
Battery Capacity	5.85 Milliamp Hours
Processor Count	1
Maximum Range	33 Feet
Manufacturer	BolaButty
Item Weight	1.24 pounds
ASIN	B0BRKPVZB4

Feature	Detail
Item model number	C27C
Date First Available	January 3, 2023
Country of Origin	China
Brand	BolaButty
Speaker Maximum Output Power	10 Watts
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount

8. WARRANTY AND SUPPORT

Your BolaButty Bluetooth Speaker is backed by lifetime technical support. For any inquiries, technical assistance, or warranty claims, please contact BolaButty Audio Direct, the seller of this product.

8.1. Contacting Support

You can typically find seller contact information through your purchase platform. For Amazon purchases, navigate to your order details and look for the seller's name, "BolaButty Audio Direct", which usually provides a link to contact them directly.

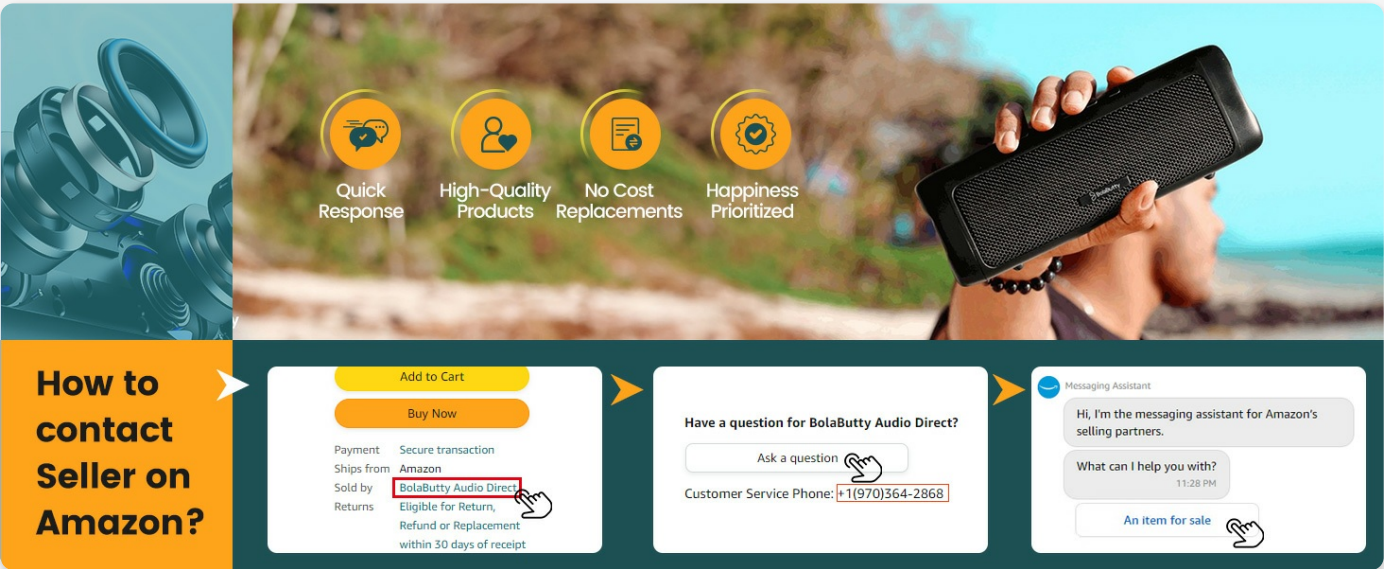


Image: A diagram illustrating the steps to contact the seller, BolaButty Audio Direct, on Amazon for support or inquiries.

8.2. Return Policy

The standard return policy allows for refunds or replacements within 30 days of receipt. Please refer to your purchase platform's specific return policy for detailed terms and conditions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question