

Airpher sfe-62

Airpher Electric Spin Scrubber User Manual

Model: sfe-62

INTRODUCTION

Thank you for choosing the Airpher Electric Spin Scrubber. This cordless cleaning brush is designed to make your cleaning tasks easier and more efficient, reducing strain on your back and knees. With its powerful motor, versatile brush heads, and waterproof design, it is an ideal tool for various cleaning needs around your home.

Please read this manual thoroughly before first use to ensure proper operation, maintenance, and to maximize the lifespan of your device.

SAFETY INFORMATION

To prevent injury or damage to the product, please observe the following safety precautions:

- Do not immerse the charging port in water. Ensure the charging port cover is securely closed during use and cleaning. The main unit is IPX8 waterproof, but proper sealing is crucial.
- Keep the device out of reach of children and pets.
- Use only the provided charging cable and a compatible adapter (not included).
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Avoid using abrasive or corrosive cleaning agents with the scrubber, as they may damage the brush heads or the device surface.
- Ensure the brush head is securely attached before operating the scrubber.
- Do not apply excessive pressure, as this may cause the motor to stall or reduce battery life. The scrubber is designed to work efficiently with moderate pressure.
- Store the scrubber in a dry place away from direct sunlight and extreme temperatures.



Image: The Airpher Electric Spin Scrubber is IPX8 waterproof, allowing for safe use in wet environments.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- Electric Spin Scrubber Main Unit
- Adjustable Extension Handle (4-tier detachable)
- 9 x Replaceable Brush Heads (various types for different cleaning tasks)
- Velcro Holder
- Hook for storage
- Type-C Charging Cable
- User Manual (this document)



Image: Overview of the Airpher Electric Spin Scrubber and its included accessories, including the main unit, extension handle, and various brush heads.

SETUP

Assembly

The Airpher Electric Spin Scrubber features a modular design for easy assembly and customization of length.

1. **Attach Brush Head:** Align the desired brush head with the main unit's rotating base and press firmly until it clicks into place.
2. **Assemble Handle:** For extended reach, connect the extension handle sections by twisting them together clockwise until secure.
3. **Connect Handle to Main Unit:** Insert the assembled handle into the designated slot on the main scrubber unit and twist clockwise to lock it securely.

Easy To Install



Image: Visual guide demonstrating the easy installation process of attaching the brush head, connecting handle sections, and securing the handle to the main unit.

Charging

Before first use, fully charge the scrubber for optimal performance.

- Locate the Type-C charging port on the main unit.
- Open the waterproof cover of the charging port.
- Insert the Type-C charging cable into the port and connect the other end to a compatible USB power adapter (not included).
- The indicator light will show charging status (e.g., red for charging, green for fully charged).
- A full charge typically takes approximately 3-4 hours and provides 90-120 minutes of continuous use.
- Always ensure the charging port cover is sealed tightly before using the scrubber in wet conditions.



Image: The scrubber connected to a power outlet via its Type-C charging cable, indicating the charging process.

OPERATING INSTRUCTIONS

Powering On/Off and Speed Control

- **Power On:** Press the power button once to turn on the scrubber. It will start at the default speed (300 RPM).
- **Change Speed:** Press the power button again to switch to the higher speed (400 RPM) for deep cleaning.
- **Power Off:** Press the power button a third time to turn off the scrubber.



Image: Comparison showing the two optional cleaning speeds: 300 RPM for daily cleaning and 400 RPM for deep cleaning.

Cleaning Tips for Different Surfaces

Select the appropriate brush head for your cleaning task. For best results, use with a suitable cleaning agent.

Brush Head Type	Recommended Use
Pointed Brush	Tile grout, edges, corners around bathtubs or showers.

Brush Head Type	Recommended Use
-----------------	-----------------

Large Flat Brush	Bathroom floors, large flat surfaces.
Small Flat Brush	Sinks, smaller flat areas.
Curved Brush	Washbasins, faucets, curved surfaces.
Scouring Pad	Stoves, tough grime on hard surfaces.
Sponge Brush	Windows, glass, delicate surfaces.
Cloth Brush	Wooden floors, polishing.
Polishing Cloth	Final polishing for shiny surfaces.
Wool-like Brush	Gentle cleaning and polishing.

9 Replaceable Brush Heads

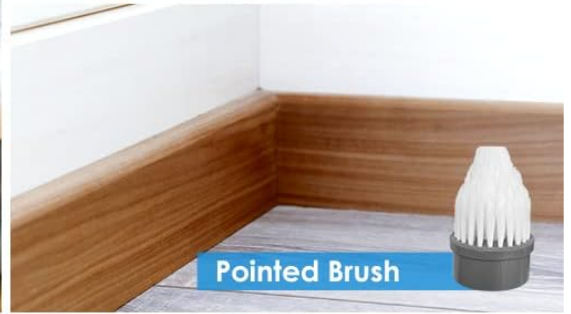


Image: A detailed view of the nine different replaceable brush heads, illustrating their shapes and suggested applications for various cleaning tasks.

Effortless Cleaning

Easily clean any corners of Stubborn Stains



Image: The electric spin scrubber in action, demonstrating its ability to effortlessly clean various types of stubborn stains on different surfaces.

MAINTENANCE

Cleaning the Scrubber

- After each use, remove the brush head and rinse it thoroughly under running water to remove any dirt or cleaning solution residue.

- Wipe the main unit and handle with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the charging port cover is closed before rinsing the main unit.
- Allow all parts to air dry completely before reassembling or storing.

Storing the Scrubber

- Store the scrubber in a cool, dry place.
- You can use the included hook to hang the scrubber for convenient storage.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to maintain battery health. Recharge every 3-6 months if not in use.



Image: The electric spin scrubber hung on a wall using the provided hook, demonstrating a convenient storage method.

TROUBLESHOOTING

If you encounter any issues with your Airpher Electric Spin Scrubber, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is depleted.	Charge the scrubber fully.
Scrubber stops working under pressure.	Excessive pressure applied.	Reduce pressure. The scrubber is designed for efficient cleaning with moderate force.
Brush head does not spin or spins slowly.	Brush head not properly attached. / Obstruction.	Ensure brush head is securely clicked into place. Check for any debris obstructing the rotation.
Short battery life.	Battery not fully charged. / Old battery.	Ensure full charge before use. If battery life significantly degrades, contact customer support.
Water leakage from charging port.	Charging port cover not sealed.	Ensure the charging port cover is firmly pressed and sealed before exposing to water.

SPECIFICATIONS

Feature	Detail
Brand	Airpher

Feature	Detail
Model Number	sfe-62
Color	Gray
Material	Plastic
Product Dimensions	12.4"L x 4.72"W x 6.89"H
Item Weight	1 Pounds
Waterproof Rating	IPX8 Full-body Waterproof
Battery Type	Lithium Ion (included)
Runtime	90-120 minutes (on a single charge)
Charging Port	Type-C
Brush Heads Included	9 (various types)
Handle	4-Tier Detachable/Adjustable (29 to 47 inches)
UPC	762765013885

WARRANTY AND SUPPORT

Airpher provides comprehensive support for its products. Your Electric Spin Scrubber comes with the following:

- **2 Years Free Replacement:** For any manufacturing defects or functional issues within two years of purchase.
- **30 Days No Reason to Return Policy:** For hassle-free returns within 30 days of purchase.
- **Lifetime Support:** Continuous customer support and solutions for the lifespan of your product.
- **24 Hours Quick Response:** Via phone or email for any inquiries or issues.

For warranty claims, technical assistance, or any questions, please contact Airpher customer support through the contact information provided on the product packaging or the official Airpher website. Please have your model number (sfe-62) and purchase details ready when contacting support.



Image: Visual representation of Airpher's customer support commitments, including 24-hour response, 30-day return policy, 2-year free replacement, and lifetime support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question