

[manuals.plus](#) /

› [BaBylissPRO](#) /

› [BaBylissPRO Barberology FX3 Collection Clipper User Manual](#)

## **BaBylissPRO FXX3CB**

# **BaBylissPRO Barberology FX3 Collection Clipper User Manual**

Model: FXX3CB

Brand: BaBylissPRO

## **INTRODUCTION**

The BaBylissPRO Barberology FX3 Collection Clipper (Model FXX3CB) is a professional-grade hair cutting tool designed for precision and performance. This cord/cordless clipper features an advanced high-torque engine, ergonomic housing, and a unique carbon-texture grip surface. It is equipped with a lithium battery providing up to 5 hours of runtime and a high-efficiency brushless motor.

This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your FX3 Clipper.





Figure 1: BaBylissPRO FX3 Collection Clipper (Model FXX3CB)

## PRODUCT OVERVIEW

The FX3 Clipper is part of the BaBylissPRO FX3 Collection, which also includes a trimmer and shaver. This clipper is engineered for professional use, offering robust performance and user-friendly features.

Your browser does not support the video tag.

Video 1: Overview of the BaBylissPRO FX3 Collection, showcasing the clipper, trimmer, and shaver.

## SETUP

## 1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect the clipper and accessories for any signs of damage. Ensure all listed items are present.



Figure 2: Contents of the FX3 Clipper package, including the clipper, charging adapter, cleaning brush, oil, and various clipper guards.

## 2. Initial Charging

Before first use, fully charge the clipper for optimal battery performance. Connect the charging adapter to the clipper and plug it into a suitable power outlet. The 4-stage LED battery indicator light will show the charging progress.

- A full charge provides up to 5 hours of cordless runtime.
- The LED indicator will illuminate to show battery level.

**BaBylissPRO®**



**Low-Profile 5-Position Quick-Taper  
Switch Makes Fading Easy**

**4-Stage LED Battery Indicator Light**

Figure 3: Close-up of the FX3 Clipper showing the 4-stage LED battery indicator and the low-profile 5-position quick-taper switch.

### 3. Attaching Clipper Guards

Select the desired clipper guard. Align the guard with the clipper blade and slide it on until it securely clicks into place. Ensure the guard is firmly attached before use.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

To turn the clipper on, slide the power switch to the "ON" position. To turn it off, slide the switch to the "OFF" position.

### 2. Adjusting Blade Length (Taper Switch)

The FX3 Clipper features a low-profile 5-position quick-taper switch. This lever allows for precise adjustment of the blade length without changing guards, facilitating seamless fading and blending. Move the lever up or down to select the desired cutting length.

**BaBylissPRO®**

## Titanium Carbon-Nitride Ultra-Thin Fade Blade (FX903B)

A flat elongated cutting surface that supports a vertical cutting motion



Zero Gap Adjustable



Figure 4: Detail of the FX3 Clipper's Titanium Carbon-Nitride Ultra-Thin Fade Blade (FX903B), which supports vertical cutting motion and is zero-gap adjustable.

### 3. Motor Speeds

The clipper is equipped with a high-efficiency/torque brushless engine offering two motor speeds: 6,000 RPM and 7,000 RPM. Select the appropriate speed based on hair type and desired cutting performance.

### 4. General Usage

Use this professional cord/cordless lithium battery hair clipper to remove bulk and effortlessly style hair to the shape you desire. Always ensure the blades are clean and oiled before each use for optimal performance and longevity.

## MAINTENANCE

### 1. Cleaning the Blades

After each use, turn off the clipper and remove any attached guards. Use the provided cleaning brush to remove loose hair from the blades. For a more thorough cleaning, detach the blade assembly (refer to manufacturer's instructions for specific blade removal) and clean with a suitable blade cleaner.

### 2. Oiling the Blades

Regular oiling is crucial for maintaining blade sharpness and preventing rust. Apply a few drops of the provided lubricating oil to the blades after each cleaning or as needed. Turn the clipper on for a few seconds to distribute the oil evenly.

### 3. Battery Care

To prolong battery life, avoid completely draining the battery before recharging. Store the clipper in a cool, dry place when not in use.

## TROUBLESHOOTING

If you encounter any issues with your BaBylissPRO FX3 Clipper, please refer to the following common troubleshooting tips:

- **Clipper not turning on:** Ensure the battery is fully charged. Check the power switch position.
- **Reduced cutting performance:** Clean and oil the blades. Ensure the blades are free of hair and debris. Check if the blades are dull and require replacement.
- **Clipper overheating:** Ensure proper ventilation. Clean the motor area if accessible. Avoid prolonged continuous use.
- **Unusual noise:** Check for loose parts or debris in the blade area. Ensure the blade assembly is correctly attached.

For further assistance, please contact BaBylissPRO customer support or visit their official website.

## SPECIFICATIONS

Feature	Detail
Model Number	FXX3CB
Power Source	Lithium Ion Battery
Runtime	Up to 5 hours (cordless)
Motor Type	High-efficiency/torque brushless engine
Motor Speeds	6,000 RPM and 7,000 RPM
Blade Type	Titanium Carbon-Nitride Ultra-Thin Fade Blade (FX903B)
Taper Control	Low-profile 5-position quick-taper switch
Battery Indicator	4-stage LED light
Special Features	Detachable Head, Ergonomic Design, Carbon-texture grip surface
UPC	074108458858

## REPLACEMENT PARTS AND ACCESSORIES

Genuine BaBylissPRO replacement blades and clipper guards are available to ensure continued optimal performance of your FX3 Clipper.

**BaBylissPRO®**

**Replacement Blades Available**



FX903B



FX903G

**Replacement Clipper Guards Available**



FXX3CGR

Figure 5: Image showing available replacement blades (FX903B, FX903G) and replacement clipper guards (FXX3CGR) for the BaBylissPRO FX3 Collection.

**WARRANTY AND SUPPORT**

For detailed warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official BaBylissPRO website. Keep your purchase receipt as proof of purchase for any warranty claims.