

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sharp](#) /

› [Sharp 4K Smart LED TV 55-inch - Roku TV User Manual](#)

## Sharp 4TC55DL7UR

# Sharp 4K Smart LED TV (55-inch) - Roku TV User Manual

Model: 4TC55DL7UR

## INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your new Sharp 4K Smart LED TV with Roku TV. Please read this manual thoroughly before using your television to ensure proper functionality and safety.

## PACKAGE CONTENTS

Before you begin, ensure all items are present in the package:

- 1 x Sharp 55-inch 4K Smart LED TV
- 1 x Remote Control (requires 2 AAA batteries, included)
- 1 x Table Stand with screws
- 1 x User Manual (this document)
- Warranty Information



Image: Front view of the Sharp 55-inch 4K Smart LED TV, showcasing its sleek design and vibrant display.

## SETUP

### 1. Attaching the TV Stand

- Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
- Align the TV stand with the mounting holes on the bottom of the TV.
- Secure the stand using the provided screws. Ensure the stand is firmly attached.

### 2. Connecting Peripherals

The Sharp Roku TV offers various connectivity options. Refer to the back panel image for port locations.

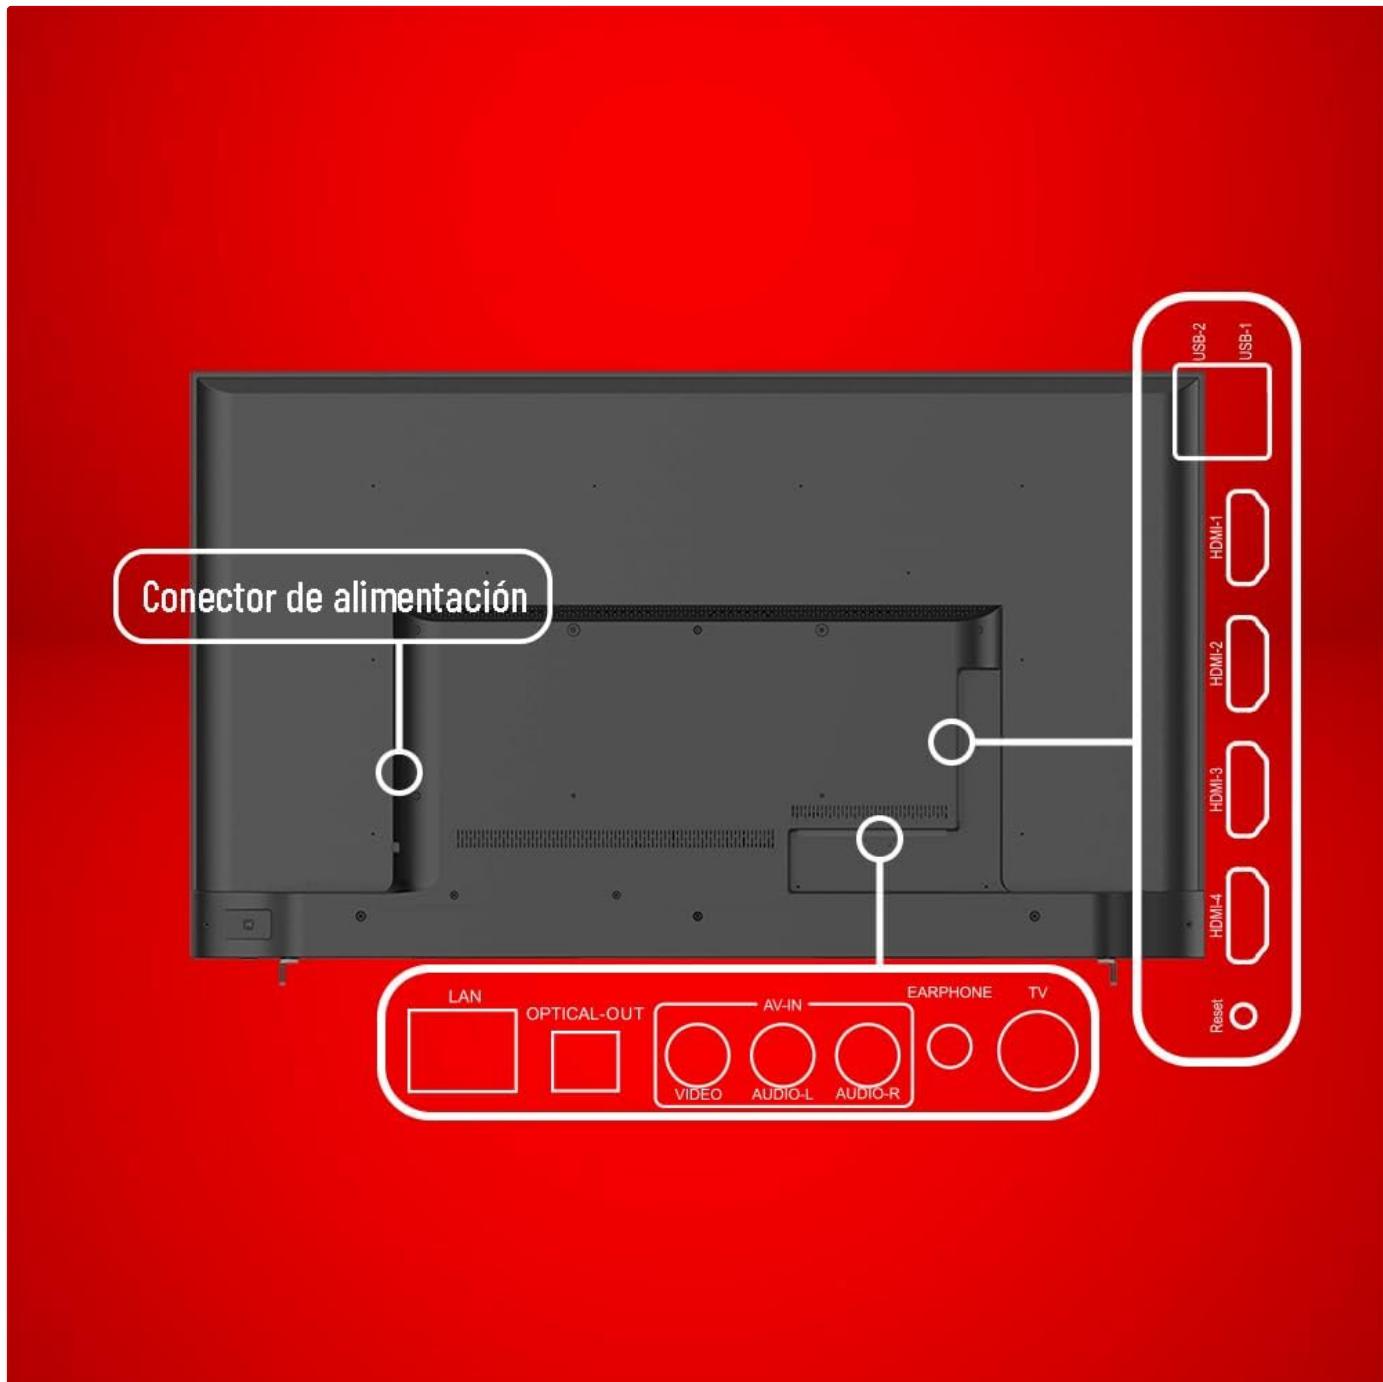


Image: Rear view of the Sharp Roku TV, highlighting the power connector and various input/output ports including HDMI, USB, LAN, Optical Out, AV In, Earphone, and TV antenna input.

- **HDMI Ports (x4):** Connect Blu-ray players, gaming consoles, cable boxes, etc.
- **USB Ports (x2):** For media playback from USB drives.
- **LAN Port:** For wired internet connection.
- **Optical Out:** For digital audio output to soundbars or home theater systems.
- **AV In (Composite Video):** For older devices using RCA cables.
- **Earphone:** For connecting headphones.
- **TV Antenna Input:** For connecting an antenna for over-the-air broadcasts.

### 3. Initial Power On and Network Setup

1. Plug the power cord into a wall outlet.
2. Press the power button on the remote control or TV.
3. Follow the on-screen instructions to select your language, country, and connect to your Wi-Fi network. The TV

supports Wi-Fi connectivity.

4. Complete the Roku TV guided setup, which includes activating your Roku account.

## OPERATING INSTRUCTIONS

### Roku TV Interface

The Sharp 4K Smart LED TV features the intuitive Roku OS, providing easy access to a vast selection of streaming content.

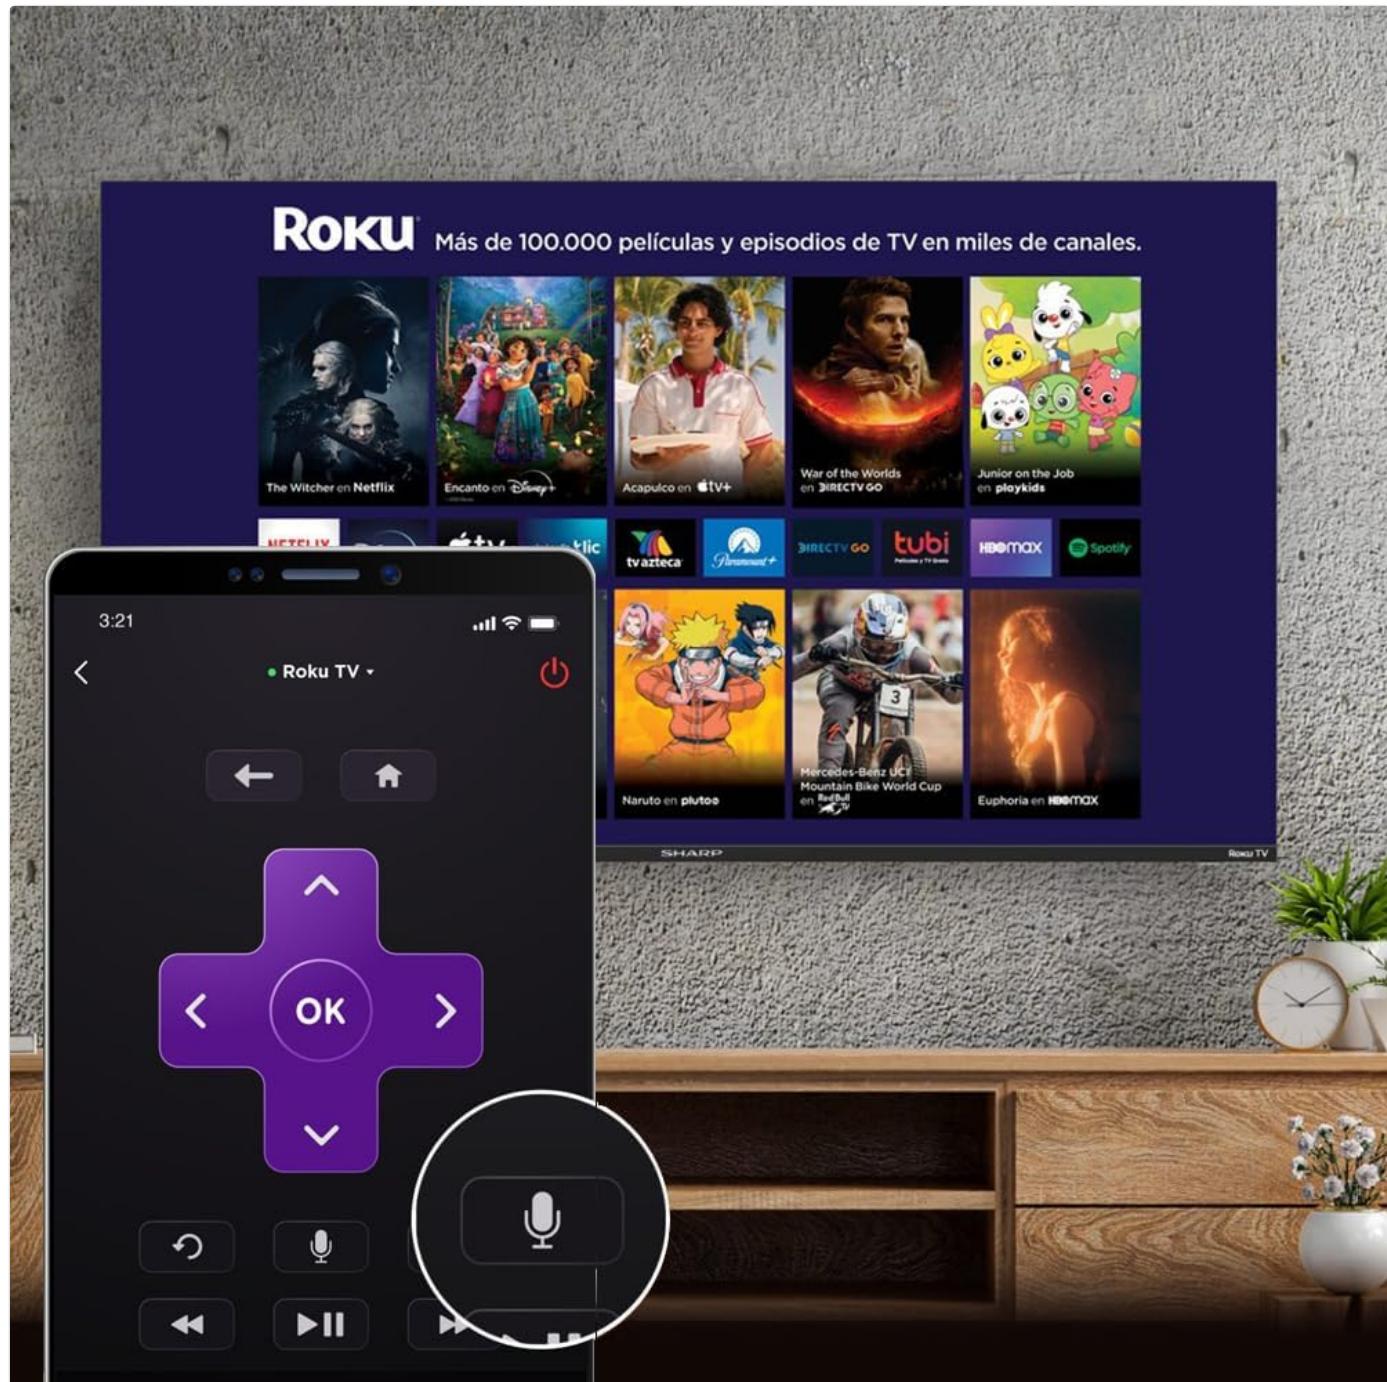


Image: A smartphone displaying the Roku remote app interface next to the Sharp Roku TV showing the main Roku home screen with various streaming channels.

- **Home Screen:** Navigate through your installed streaming channels, connected devices, and settings.
- **Streaming Channels:** Access popular services like Netflix, Disney+, HBO Max, and many more.
- **Voice Control:** Use Amazon Alexa or Google Assistant to find movies, change channels, or switch inputs. The TV supports voice search and control.

- **Roku Mobile App:** Download the free Roku app for iOS or Android to use your smartphone as a remote, enjoy private listening, and cast content.

## Picture and Audio Quality

Experience stunning visuals and immersive sound with your Sharp 4K Smart LED TV.



Image: A graphic illustrating key features of the Sharp 55-inch 4K Roku TV, including 4K Ultra HD resolution, simple home screen, free Roku app, smart home compatibility, voice assistant compatibility, voice control, and streaming capabilities.

- **4K Ultra HD Resolution:** Enjoy superior clarity, detail, and vibrant colors for all your favorite content.
- **Dolby Audio:** Benefit from advanced audio processing for a high-quality sound experience.
- **Picture Settings:** Adjust brightness, contrast, color, and sharpness through the TV's settings menu to optimize your viewing experience.
- **Sound Settings:** Customize audio modes (e.g., Standard, Movie, Music) and adjust bass/treble for preferred sound output.



Image: The Sharp Roku TV displaying a vibrant scene, with the Dolby Audio logo prominently featured, indicating enhanced sound capabilities.

## MAINTENANCE

---

### Cleaning Your TV

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth to gently wipe the screen. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics.
- Wipe the TV frame and stand with a dry, soft cloth.
- Avoid using abrasive cleaners, waxes, or solvents as they can damage the TV's finish.

### General Care

- Ensure proper ventilation around the TV to prevent overheating. Do not block ventilation openings.

- Protect the TV from direct sunlight, extreme temperatures, and high humidity.
- Avoid placing heavy objects on top of the TV.
- When moving the TV, always lift it carefully from the bottom and avoid putting pressure on the screen.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
No power / TV won't turn on	<p>Ensure the power cord is securely plugged into the TV and a working electrical outlet.</p> <p>Check if the outlet has power by plugging in another device.</p> <p>Try a different power outlet.</p>
No picture / Black screen	<p>Verify the correct input source is selected (e.g., HDMI 1, TV).</p> <p>Check all cable connections (HDMI, antenna, etc.) are secure.</p> <p>Restart the connected device (e.g., cable box, Blu-ray player).</p>
No sound	<p>Increase the volume on the TV and any connected audio devices.</p> <p>Check if Mute is activated.</p> <p>Verify audio cables are correctly connected.</p> <p>If using external speakers, ensure they are powered on and correctly configured.</p>
Remote control not working	<p>Replace the batteries (2 AAA).</p> <p>Ensure there are no obstructions between the remote and the TV's IR sensor.</p> <p>Point the remote directly at the TV.</p>
Wi-Fi connection issues	<p>Restart your Wi-Fi router and modem.</p> <p>Go to the TV's network settings and try reconnecting to your Wi-Fi network.</p> <p>Ensure the TV is within range of your Wi-Fi router.</p> <p>Consider using a wired Ethernet connection if persistent issues occur.</p>
Slow performance / App freezing	<p>Restart the TV by unplugging it from the power outlet for 30 seconds, then plugging it back in.</p> <p>Ensure your internet connection is stable and fast enough for streaming.</p> <p>Check for system updates in the TV's settings menu.</p>

## SPECIFICATIONS

Feature	Detail
Brand	Sharp
Model Number	4TC55DL7UR
Screen Size	55 Inches
Display Technology	LED
Resolution	4K (3840 x 2160 Pixels)
Refresh Rate	60 Hz

Feature	Detail
Operating System	Roku OS
Processors	4
RAM	512 MB
Connectivity	Wi-Fi, Ethernet
HDMI Ports	4
USB Ports	2
Audio Output	Optical Out, Earphone, 2.0 Dolby Stereo
Speaker Output Power	16 Watts
Power Consumption	130 Watts
Voltage	120 Volts (AC)
Dimensions (W x D x H)	134 x 11 x 80 cm (approx. 52.7 x 4.3 x 31.5 inches)
Weight	12.7 kg (approx. 28 lbs)
Included Accessories	Remote Control (with 2 AAA batteries), Table Stand (with screws), User Manual, Warranty

## **WARRANTY AND SUPPORT**

Your Sharp 4K Smart LED TV comes with a manufacturer's warranty. Please refer to the warranty information included in your product package for details on coverage, terms, and conditions. Keep your proof of purchase for warranty claims. For technical support, service, or further assistance, please contact Sharp customer service. Contact information can typically be found on the Sharp official website or in the warranty documentation.

No official product videos from the seller are available for embedding at this time.


© 2023 Sharp. All rights reserved.

## **Related Documents - 4TC55DL7UR**




### [Sharp Android TV Quick Start Guide: Setup, Remote, and Specifications](#)

Concise guide to setting up your Sharp Android TV, including stand installation, remote control usage, connectivity options, Google Assistant setup, and technical specifications. Learn how to get started quickly.

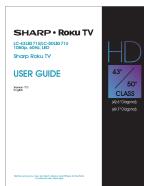

### [Sharp Roku TV User Guide: LC-43LB371U/LC-50LB371U Setup and Operation](#)

Comprehensive user guide for the Sharp Roku TV models LC-43LB371U and LC-50LB371U. Learn setup, connectivity, smart features, and troubleshooting for your 1080p LED TV.

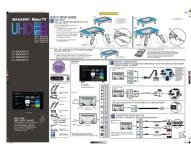

### [Sharp Roku TV Quick Setup Guide: LC-43LBU591U, LC-50LBU591U, LC-55LBU591U, LC-65LBU591U](#)

A concise and accessible guide to setting up your Sharp Roku TV. Learn how to attach stands, prepare for wall mounting, connect devices, establish network connections, use the remote control, and troubleshoot common issues for models LC-43LBU591U, LC-50LBU591U, LC-55LBU591U, and LC-65LBU591U.




### [Sharp 55GM6141E 4K Smart TV Instruction Manual: Setup & Operation](#)

A comprehensive guide for the Sharp 55GM6141E 4K Ultra HD Smart TV, detailing setup, remote control functions, connectivity, settings, and features for optimal user experience.



### [SHARP Roku TV Quick Start Guide: Models 43HJ, 50HJ, 55HJ](#)

Concise and SEO-optimized HTML guide for setting up and using your SHARP Roku TV. Includes setup instructions, safety information, remote control guide, technical specifications, and connectivity options for models 43HJ, 50HJ, and 55HJ.

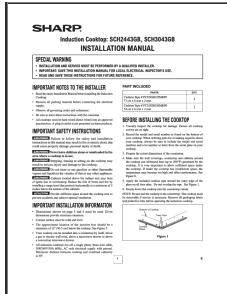

## [Sharp Induction Cooktop Installation Manual](#)

Installation manual for Sharp Induction Cooktops SCH2443GB and SCH3043GB, providing detailed instructions for electrical connection, cutout dimensions, and safety precautions.