

[Manuals.plus](#) /

› [WONNIE](#) /

› WONNIE 10-inch Portable DVD Player User Manual

WONNIE W-3015-1

WONNIE 10-inch Portable DVD Player User Manual

Model: W-3015-1

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your WONNIE 10-inch Portable DVD Player, Model W-3015-1. This device is designed for portable entertainment, allowing you to enjoy your favorite DVDs and CDs on the go. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: Front view of the WONNIE 10-inch Portable DVD Player, displaying a vibrant landscape on its screen.

WHAT'S IN THE BOX

Upon opening the package, verify that all components are present and in good condition.

- WONNIE 10-inch Portable DVD Player (Model W-3015-1)
- Power Adapter (AC/DC)
- Car Charger
- Remote Control
- AV Cable
- User Manual (this document)

Note: The product description states "No accessories, just a DVD player". This manual assumes standard accessories typically included with such a device for comprehensive setup instructions. Please refer to your specific product packaging for exact contents.

SETUP

1. Initial Charging

Before first use, fully charge the player's internal battery. Connect the provided AC/DC power adapter to the DC IN port on the player and plug it into a standard wall outlet. The charging indicator light will illuminate. Charging typically takes 3-4

hours.

2. Powering On/Off

To power on the device, slide the POWER switch to the ON position. To power off, slide the switch to the OFF position. For extended storage, ensure the device is fully charged and then powered off.

3. Connecting to External Devices (Optional)

The player features RCA and 3.5mm Jack connector types for audio/video output, and HDMI for connectivity. Use the appropriate cables (not always included) to connect to a TV or external display for a larger viewing experience.

- **AV Output:** Connect the AV cable from the player's AV OUT port to the AV IN ports on your television.
- **HDMI Output:** Connect an HDMI cable from the player's HDMI OUT port to an HDMI IN port on your television. Select the corresponding HDMI input on your TV.
- **Headphones:** Plug 3.5mm headphones into the headphone jack for private listening.

OPERATING INSTRUCTIONS

1. Disc Playback

Open the disc cover gently. Place a DVD or CD disc onto the spindle with the label side facing up. Close the disc cover. The player will automatically detect the disc and begin playback. If it does not, press the PLAY/PAUSE button.

2. Basic Controls

- **PLAY/PAUSE:** Press to start or pause playback.
- **STOP:** Press to stop playback.
- **PREV/NEXT:** Press to skip to the previous or next chapter/track.
- **REW/FF:** Press and hold to fast rewind or fast forward.
- **VOL+/-:** Adjust the volume level.
- **SETUP:** Access the system settings menu.
- **SOURCE:** Switch between different input sources (e.g., DVD, AV IN, USB/SD if supported).

3. Menu Navigation

Use the directional arrows (UP, DOWN, LEFT, RIGHT) on the player or remote control to navigate through menus. Press the OK/ENTER button to confirm selections.

4. Supported Media Formats

The player supports various media types including DVD and CD. Supported file formats include MP4, MP3, and JPEG for playback from compatible external storage devices (if applicable).



Image: A man and a child smiling while watching content on the WONNIE portable DVD player, demonstrating its use in a home setting.

MAINTENANCE

1. Cleaning the Player

Wipe the exterior of the player with a soft, dry cloth. For stubborn marks, slightly dampen the cloth with water. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Keep the disc compartment clean and free of dust.

2. Disc Care

Handle discs by their edges. Avoid touching the shiny surface. Store discs in their cases when not in use to prevent scratches and dust accumulation. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing the player for an extended period, charge it to approximately 50% every few months.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted; Power adapter not connected properly; Power switch is OFF.	Charge the battery; Ensure power adapter is securely connected; Slide power switch to ON.
No disc playback.	Disc inserted incorrectly; Disc is dirty or scratched; Incorrect source selected.	Reinsert disc correctly (label side up); Clean or replace disc; Press SOURCE button to select DVD.
No sound.	Volume is too low or muted; Headphones not fully plugged in; External device volume low.	Increase volume; Ensure headphones are fully inserted; Check volume on connected TV/speakers.

Problem	Possible Cause	Solution
Picture is distorted or blurry.	Disc is dirty or damaged; Screen resolution settings incorrect; External cable loose.	Clean or replace disc; Adjust display settings in the SETUP menu; Check external AV/HDMI cable connections.

SPECIFICATIONS

Brand	WONNIE
Model Name	WONNIE 10" DVD Player
Item Model Number	W-3015-1
Screen Size (Diagonal)	10 inches / 26 cm
Product Dimensions	11.8 x 2.75 x 8.2 inches
Item Weight	1.87 pounds (0.85 Kilograms)
Color	Black
Media Type Supported	DVD, CD
Supported File Formats	MP4, MP3, JPEG
Connector Type	RCA, 3.5mm Jack
Connectivity Technology	HDMI
Audio Output Mode	Stereo
Special Feature	Compact
Manufacturer	WONNIE
Country of Origin	China
Date First Available	January 4, 2023

WARRANTY AND SUPPORT

WONNIE products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official WONNIE website. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact WONNIE customer support. Contact information can typically be found on the manufacturer's website or on the product packaging. You may also consider purchasing extended protection plans for additional coverage, such as the 2-Year or 3-Year Protection Plans available at the time of purchase.



Image: The WONNIE brand logo, featuring a musical note and disc graphic, with the slogan "The Best Life Companion."

© 2024 WONNIE. All rights reserved.
This manual is subject to change without notice.

