

[Manuals.plus](#) /

› [KitchenAid](#) /

› KitchenAid 7 Quart Bowl-Lift Stand Mixer KSM70SKXX User Manual

KitchenAid KSM70SKXX

KitchenAid 7 Quart Bowl-Lift Stand Mixer KSM70SKXX User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your KitchenAid 7 Quart Bowl-Lift Stand Mixer, model KSM70SKXX. This appliance is designed for mixing, kneading, and whipping various food ingredients. Please read all instructions carefully before initial use.

PRODUCT FEATURES

- Enhanced power in the bowl compared to tilt-head stand mixers, suitable for heavy, dense ingredients.
- Bowl-lift design with a 3-point locking mechanism for stability during operation.
- 11 distinct speed settings, including a 1/2 speed for gentle folding of delicate ingredients.
- 7-quart capacity stainless steel bowl, capable of mixing large batches.
- Includes a Double Flex Edge Beater designed to scrape the bowl for thorough ingredient incorporation.

PACKAGE CONTENTS

The KitchenAid 7 Quart Bowl-Lift Stand Mixer KSM70SKXX includes the following:

- 1 x 7-Quart Stainless Steel Bowl
- 1 x Double Flex Edge Beater
- 1 x Coated Flat Beater
- 1 x Coated Dough Hook
- 1 x 11-Wire Whip
- 1 x Pouring Shield



Image: Included attachments for the KitchenAid 7 Quart Bowl-Lift Stand Mixer.

SETUP AND ASSEMBLY

Attaching the Bowl

1. Ensure the mixer is unplugged and the speed control is set to 'Off'.
2. Raise the motor head by turning the bowl-lift handle clockwise until it locks into the up position.
3. Place the bowl supports over the locating pins on the mixer base.
4. Press down on the back of the bowl until the bowl support spring snaps over the pin.

Attaching Accessories

1. With the mixer unplugged and the bowl attached, slide the desired accessory (beater, dough hook, or wire whip) onto the beater shaft.
2. Rotate the accessory until the pin on the shaft locks into the accessory's groove.
3. Lower the motor head by turning the bowl-lift handle counter-clockwise until it locks into the down position.



Image: Front view of the KitchenAid 7 Quart Bowl-Lift Stand Mixer.

OPERATING INSTRUCTIONS

Speed Control

The mixer features 11 distinct speeds, ranging from 1/2 (stir) to 10 (fast whip). Use the speed control lever located

on the side of the mixer to select the desired speed.

- **1/2 Speed (Stir):** Ideal for gently folding delicate ingredients like blueberries or egg whites without overbeating.
- **Speeds 1-2:** For slow mixing, mashing, or starting heavy mixtures.
- **Speeds 4-6:** For medium mixing, beating, or creaming.
- **Speeds 8-10:** For fast beating, whipping, or aerating.



Image: Speed control dial on the mixer.

Using Attachments for Specific Tasks

Each included attachment is designed for optimal performance in specific culinary tasks:

- **Coated Flat Beater:** Best for normal to heavy mixtures such as cakes, cookies, frostings, and mashed potatoes.
- **Double Flex Edge Beater:** Features flexible edges to scrape the sides of the bowl, ensuring thorough mixing without stopping. Ideal for creaming butter and sugar, or mixing batters.
- **Coated Dough Hook:** Used for mixing and kneading yeast doughs for breads, rolls, pizza, and pasta.
- **11-Wire Whip:** Incorporates air into ingredients. Suitable for eggs, egg whites, heavy cream, and mayonnaise.



More capacity to make 13 dozen cookies*

*Compared to KSM150. Using the flat beater; 28g dough each.

Image: Dough hook kneading dough.



More control with 11 speeds,* including ½ speed for folding

*Compared to KSM150.

Image: Flat beater folding ingredients.

MAINTENANCE AND CLEANING

Cleaning the Mixer Body

Wipe the mixer body with a damp cloth. Do not immerse the mixer in water or other liquids.

Cleaning the Bowl and Attachments

The 7-quart stainless steel bowl and the 11-wire whip are dishwasher-safe. The coated flat beater, double flex edge beater, and coated dough hook should be hand-washed with warm, soapy water to preserve their coating.

TROUBLESHOOTING

If the mixer does not operate, ensure it is properly plugged into a functional power outlet. Check the speed control setting. If issues persist, refer to the comprehensive troubleshooting section in the full product manual or contact KitchenAid customer support.

SPECIFICATIONS

- **Brand:** KitchenAid
- **Model Name:** KSM70SKXXMH
- **Capacity:** 7 Quarts
- **Product Dimensions:** 14.63"D x 11.31"W x 16.5"H
- **Item Weight:** 0.988 ounces
- **Controls Type:** Stainless Steel
- **Special Feature:** Removable Bowl
- **Is Dishwasher Safe:** No (for coated attachments, bowl and wire whip are)
- **Manufacturer:** KitchenAid
- **UPC:** 883049628264

WARRANTY AND SUPPORT

KitchenAid products are designed for durability and performance. For detailed warranty information, product registration, or to access customer support, please visit the official KitchenAid website. Extended protection plans may also be available for purchase.

© 2023 KitchenAid. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

