



Manuals.plus /

› Wavmill /

› Wavmill 24000mAh Camping Fan Instruction Manual

Wavmill FA-GY03

Wavmill 24000mAh Camping Fan Instruction Manual

Model: FA-GY03

1. PRODUCT OVERVIEW

The Wavmill 24000mAh Camping Fan is a versatile 3-in-1 device designed for various indoor and outdoor scenarios. It functions as a powerful fan, an LED light source, and an emergency power bank, making it an essential companion for camping, picnics, BBQs, fishing, travel, and home use during power outages.



Image: The Wavmill 24000mAh Camping Fan, showcasing its fan, light, and detachable battery features. Its compact and portable design, combined with robust features like multiple fan speeds, adjustable brightness, timer settings, and a hidden hook, ensures comfort and convenience wherever you go.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Wavmill 24000mAh Camping Fan Unit
- 2 x 12000mAh Detachable Rechargeable Battery Packs
- 1 x Remote Control
- 1 x USB-C Charging Cable
- 1 x User Manual

3. SAFETY INSTRUCTIONS

To ensure safe operation and prolong the lifespan of your fan, please read and adhere to the following safety guidelines:

- Keep the device away from water and high humidity environments.
- Do not insert fingers or any objects into the fan grille while it is operating.
- Use only the provided USB-C charging cable or a certified 5V-2A adapter for charging.
- Do not disassemble, modify, or attempt to repair the device yourself. Contact customer support for assistance.
- Avoid exposing the battery packs to extreme temperatures (above 60°C/140°F or below -10°C/14°F) or direct sunlight for prolonged periods.
- Dispose of batteries according to local regulations.
- Keep out of reach of children.

4. SETUP

4.1 Initial Charging

It is recommended to fully charge the fan before its first use to optimize battery performance.

- Connect the USB-C charging cable to the fan's input port (5V-2A).
- Connect the other end of the cable to a compatible USB power source (e.g., wall adapter, power bank, computer USB port).
- The battery indicator lights on the control panel will illuminate to show charging progress. All four lights will be solid when fully charged.

4.2 Battery Installation/Removal

The fan comes with two detachable 12000mAh battery packs.

The fan features 4 adjustable wind speeds.

4 Speeds Powerful Wind

Adjust the wind speed according to your needs



Low:

140h

Mid:

80h

High:

50h

Hurricane:

20h

Image: The fan's control panel showing the four speed indicator lights.

- Press the **Speed** button on the control panel or the **Speed+** / **Speed-** buttons on the remote to cycle through speeds 1 (low) to 4 (hurricane).
- The 4 indicator lights on the panel will show the current wind speed.

5.3 LED Light Operation

The fan includes an integrated LED light with 2 brightness settings.

As your outdoor light source

2 light source settings



Image: The fan providing illumination as an outdoor light source.

- Press the **Light** button on the control panel or remote to turn the light on and cycle through brightness levels.
- Press again to turn the light off.

5.4 Timer Setting

Set the fan to automatically turn off after a specified duration.

Humanized Sleep Timing Function

3 Timing Settings



Image: The fan operating with its sleep timing function enabled.

- Press the **Timer** button on the control panel or remote to select 1H, 3H, or 5H auto-off times.
- The corresponding indicator light will illuminate.

5.5 Oscillation Function

The fan head can rotate to cover a wider area.

- Press the **Rotate** button on the control panel or remote to activate oscillation (45° or 90°).
- Press again to stop oscillation.

5.6 Sleep Mode

For undisturbed sleep, activate sleep mode.

- Press the **Sleep** button on the remote control. This will turn off all indicator lights on the control

panel while the fan continues to operate at a low, quiet setting.

5.7 Power Bank Function

The detachable battery packs can be used to charge other USB-powered devices.

Emergency power supply port

(Note: This charging port cannot store power for the fan or battery, just plug and play)



Image: The fan's emergency power supply port in use, charging a smartphone.

- Connect your device's USB charging cable to the USB-A output port on the fan's base.
- The fan's battery will then supply power to your device.

6. MEDIA GALLERY

6.1 Product Videos

Watch these official product videos for a visual guide on the fan's features and usage.

Your browser does not support the video tag.

Video: Demonstrates the Wavmill Battery Operated Fan with Light & Hook for Tent, highlighting its features and portability.

Your browser does not support the video tag.

Video: Showcases the 24000mAh Cordless Battery Powered Fan in action, emphasizing its power and convenience.

Your browser does not support the video tag.

Video: A detailed look at the 24000mAh Camping Fan, demonstrating its various functions and suitability for outdoor use.

7. MAINTENANCE

7.1 Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For the fan blades, use a soft brush or compressed air to remove dust. Do not use water or harsh chemicals.

7.2 Storage

- Store the fan in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every 3 months to maintain battery health.

8. TROUBLESHOOTING

If you encounter any issues with your Wavmill Camping Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Low battery or no charge.	Charge the fan fully. Ensure battery packs are properly installed.
LED light is dim or not working.	Low battery or incorrect brightness setting.	Charge the fan. Press the Light button to cycle through brightness levels.
Remote control is unresponsive.	Remote battery low or no clear line of sight.	Replace remote battery (if applicable). Ensure no obstructions between remote and fan.
Fan does not oscillate.	Oscillation function not activated.	Press the Rotate button on the control panel or remote.

9. SPECIFICATIONS

Feature	Detail
Brand	Wavmill
Model Name	FA-GY03
Battery Capacity	24000mAh (2 x 12000mAh detachable)
Input Voltage	DC 5V-2A (USB-C)
Output Power (Power Bank)	5W-10W (USB-A)
Fan Speeds	4 (Low, Mid, High, Hurricane)
Noise Level	≤30 dB
LED Light Brightness	2 levels
Timer Settings	1H, 3H, 5H
Oscillation Angle	45° / 90°
Product Dimensions	8.93"D x 3.3"W x 10.86"H
Item Weight	2.18 pounds
Control Method	Buttons, Remote Control
Special Features	Portable, LED Light, Timer, Detachable Rechargeable Battery, Hook

10. WARRANTY AND SUPPORT

Wavmill stands behind the quality of its products. For any issues or warranty claims, please contact our customer support team.

Email: warranty4u@yeah.net

Please refer to your product packaging for specific warranty period details.