

- Manuals.plus /
- › Prestige /
 - › Prestige Xpress 1200W Induction Cooktop User Manual

Prestige Prestige Xpress 1200W

Prestige Xpress 1200W Induction Cooktop User Manual

Model: Prestige Xpress 1200W

	Overview	Safety Information	Setup	Operating
Instructions	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. PRODUCT OVERVIEW

The Prestige Xpress 1200W Induction Cooktop is a modern kitchen appliance designed for efficient and safe cooking. It features a ceramic plate, 1200W power, and various preset cooking modes to simplify your culinary tasks. This manual provides essential information for the proper installation, operation, maintenance, and troubleshooting of your induction cooktop.



Image: The Prestige Xpress 1200W Induction Cooktop in use, showcasing its sleek design and a pan cooking vegetables.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Always ensure the power is switched off and the plug is removed from the wall outlet before cleaning or maintenance.
- Allow the appliance to cool completely before cleaning. Do not clean the cooktop when it is hot.
- Clean the cooktop surface and control panel with a damp cloth.
- Do not wash the induction cooktop under running water.
- Never immerse the induction cooktop in water or any other liquid.
- To clean the black glass panel, first wipe it with a wet cloth, then use a sponge with mild detergent, and finally wipe it dry with a soft cloth.

- Ensure hot vessels do not come into contact with the control panel to avoid damage.
- This appliance is equipped with an Automatic Voltage Regulator and High Voltage Surge Protection (up to 4KV) for enhanced safety and durability.

3. SETUP AND INSTALLATION


Follow these steps for initial setup:

1. **Unpacking:** Carefully remove the induction cooktop from its packaging. Retain the packaging materials for future transport or storage.
2. **Placement:** Place the cooktop on a stable, flat, and heat-resistant surface. Ensure there is adequate ventilation around the unit. Do not place it near water sources or flammable materials.
3. **Power Connection:** Plug the cooktop into a standard 230V AC power outlet. Ensure the outlet is properly grounded and can support 1200W power consumption.
4. **Initial Cleaning:** Before first use, wipe the ceramic surface with a damp cloth to remove any dust or residue from manufacturing.

4. OPERATING INSTRUCTIONS

The Prestige Xpress Induction Cooktop features an intuitive control panel for easy operation.

Sleek in Design, Smart in Performance

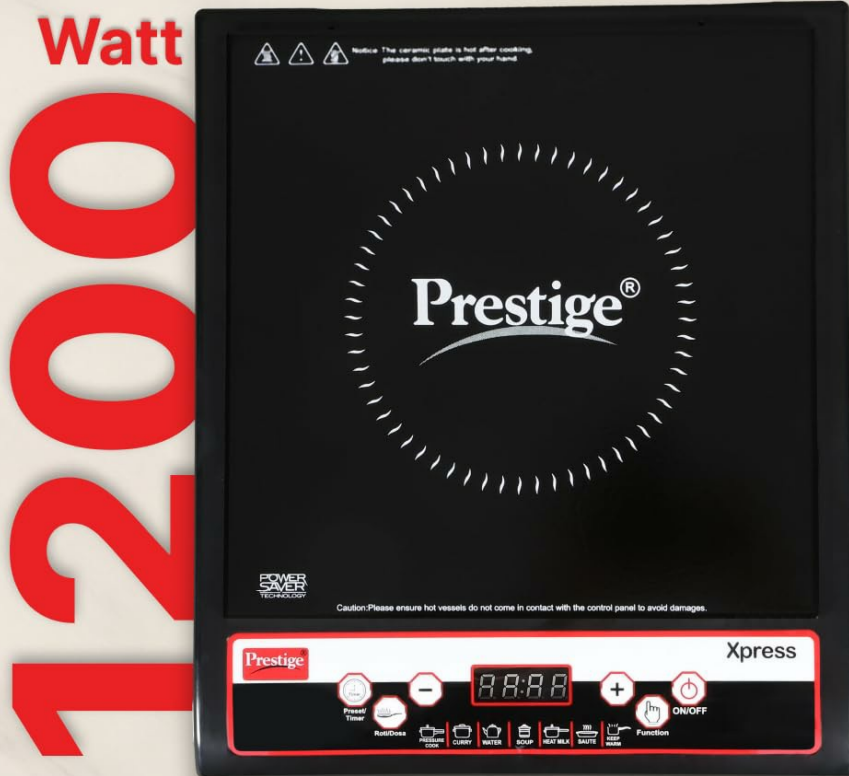

Power Saver Technology
Optimizes Energy for Efficient Cooking



Built-In Timer Function
For Precise, Hands-free Cooking



Child Lock Safety
Prevents accidental operation

Image: Top view of the induction cooktop, highlighting the control panel with various buttons and the 1200 Watt power rating.

4.1 Basic Operation

1. **Power On/Off:** Press the **ON/OFF** button to turn the cooktop on or off. The display will illuminate when powered on.
2. **Place Cookware:** Place suitable induction-compatible cookware centrally on the ceramic plate. The cooktop will not operate without compatible cookware.
3. **Select Function:** Choose your desired cooking function or preset mode using the dedicated buttons on the control panel.
4. **Adjust Settings:** Use the **+** and **-** buttons to adjust temperature or power levels as needed.

4.2 Key Features

- **1200W Power:** Provides efficient and fast heating for various cooking needs.
- **Indian Menu Option:** Dedicated preset modes for popular Indian dishes like Chapati, Dosa, Curry, and Idli, ensuring optimal cooking results with a single touch.

8 Smart Preset Modes for Effortless Cooking

This cooktop comes with **Indian Menu** like Chapati, Dosa, Curry and Idli at just the touch of a button.



Dosa



Pressure Cooker



Curry



Idli



Deep Fry



Heat Milk



Keep Warm



Saute

Image: Display of the 8 Smart Preset Modes, including Dosa, Pressure Cooker, Curry, Idli, Deep Fry, Heat Milk, Keep Warm, and Saute, designed for effortless cooking.

- **Built-in Timer with User Pre-set:** Allows you to set cooking durations for precise, hands-free cooking. The cooktop will automatically switch off once the timer expires.
- **Automatic Voltage Regulator:** Protects the appliance from sudden power fluctuations, ensuring stable and long-lasting performance.

Safe. Stable. Reliable.

Automatic voltage regulator protects against sudden power fluctuations for long-lasting performance.



Image: Visual representation of the Automatic Voltage Regulator and High Voltage Surge Protection (up to 4KV) feature, ensuring safe and stable operation.

- **Anti-Magnetic Wall:** Shields excess magnetic interference, contributing to safer and more efficient cooking.
- **Power Saver Technology:** Optimizes energy consumption for efficient cooking, reducing electricity usage.
- **Child Lock Safety:** Prevents accidental operation, enhancing safety in households with children.

5. CARE AND MAINTENANCE

Proper care ensures the longevity and optimal performance of your Prestige Xpress Induction Cooktop.

- **Daily Cleaning:** After each use, allow the cooktop to cool down completely. Wipe the ceramic surface and control panel with a soft, damp cloth.
- **Stubborn Stains:** For tougher stains, use a mild detergent specifically designed for ceramic or glass cooktops. Apply with a soft sponge and wipe clean.
- **Drying:** Always dry the cooktop thoroughly with a soft, clean cloth to prevent water spots and residue buildup.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or

damage the ceramic surface and control panel.

- **Ventilation:** Ensure the ventilation openings on the cooktop are not blocked to prevent overheating. Regularly check and clean any dust accumulation.
- **Storage:** If storing the cooktop for an extended period, ensure it is clean and dry. Store it in a cool, dry place away from direct sunlight and moisture.

6. TROUBLESHOOTING GUIDE

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; loose plug; power outage.	Check if the plug is securely inserted. Verify power supply from the outlet. Check household circuit breaker.
Cooktop turns on but does not heat.	Incompatible cookware; cookware not centered; small cookware base.	Use induction-compatible cookware (magnetic base). Ensure cookware is centered on the cooking zone. Use cookware with a base diameter of at least 12 cm.
Display shows an error code.	Overheating; internal fault; sensor issue.	Turn off the cooktop, unplug it, and let it cool down for 10-15 minutes. Plug it back in and try again. If the error persists, contact customer support.
Unusual noise during operation.	Normal fan operation; cookware vibration.	A low humming sound is normal due to the cooling fan. Some cookware may vibrate slightly, which is also normal. If the noise is loud or unusual, contact support.
Food not cooking evenly.	Cookware quality; incorrect power setting.	Ensure you are using high-quality, flat-bottomed induction-compatible cookware. Adjust power settings as needed for the specific dish.

7. PRODUCT SPECIFICATIONS

Detailed technical specifications for the Prestige Xpress 1200W Induction Cooktop:

Intelligent Engineering for Safe & Efficient Cooking



Intelligent Control

Automatically Adjusts Power
& Temperature for Each Dish



Anti-magnetic Wall

Shields Excess Magnetic
Interference For Safer, Efficient
Cooking

Image: The induction cooktop displaying its dimensions (39D x 33W x 10H Centimeters) and highlighting the Anti-magnetic Wall feature for safe and efficient cooking.

- **Brand:** Prestige
- **Model Name:** Prestige Xpress 1200W
- **Model Number (ASIN):** B0BRQGGP5D
- **Manufacturer Part Number:** 8901365419921
- **Power Source:** Corded Electric
- **Wattage:** 1200 Watts
- **Voltage:** 230 Volts (AC)
- **Heating Elements:** 1
- **Burner Type:** Induction
- **Control Type:** Push Button
- **Ignition System Type:** Electronic

- **Installation Type:** Counter-Top
- **Heater Surface Material Type:** Glass
- **Material Type:** Ceramic
- **Color:** Black
- **Item Dimensions (D x W x H):** 39D x 33W x 10H Centimeters
- **Item Weight:** 2.77 Kilograms
- **Included Components:** Knob
- **Country Of Origin:** India
- **Certifications:** BIS (Specifications Met)

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Warranty Information

The Prestige Xpress 1200W Induction Cooktop comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use conditions. Please retain your purchase receipt as proof of purchase for warranty claims.

The warranty does not cover damages resulting from improper use, accidents, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For any queries, assistance, or warranty claims, please contact Prestige customer support:

- **Customer Care Number:** 080-46824000
- **Email:** Customercare@ttkprestige.com

© 2026 Prestige. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BRQGGP5D>

More documents and user manuals: <https://manuals.plus/>