

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› Dickie 203747015 Volvo Bus 7900 E Freewheel 40 cm Children's Toy with Opening Doors Single Instruction Manual

DICKIE TOYS 203747015

Dickie 203747015 Volvo Bus 7900 E Freewheel Instruction Manual

Brand: DICKIE TOYS | Model: 203747015

INTRODUCTION

Welcome to the world of public transport with your new Dickie 203747015 Volvo Bus 7900 E Freewheel toy. This 40 cm articulated bus is designed for imaginative play, featuring free-wheeling capabilities, opening parts, and directional wheels for a realistic experience. It's suitable for children aged 3 years and over, encouraging creative adventures and exploration.



Figure 1: The Dickie 203747015 Volvo Bus 7900 E Freewheel toy, showcasing its articulated design and vibrant red and black colors with blue accents.

IMPORTANT SAFETY INFORMATION

ATTENTION! This toy is not suitable for children under 3 years of age due to small parts which may present a choking hazard. The minimum recommended age for safe play is 36 months.

- Always supervise children during play.
- Keep small parts away from young children.
- Inspect the toy regularly for any damage or loose parts. Discontinue use if damage is found.

WHAT'S IN THE BOX

Your Dickie Volvo Bus package includes:

- 1 x Articulated Bus with Opening Parts



Figure 2: The product as it appears in its packaging, ready for unboxing.

KEY FEATURES

The Dickie Volvo Bus is designed with several interactive features to enhance play:

- **Free-Wheeling Design**

The bus features a free-wheeling mechanism, allowing it to be easily pushed and rolled across various surfaces for dynamic play.

- **Opening Doors**

Experience enhanced realism with multiple opening doors along the side of the bus. These doors can be manually opened and closed, allowing for imaginative scenarios such as passengers boarding and alighting.

OPEN DOORS



Figure 3: The bus with its doors in the open position, ready for passengers.

• Directional Front Wheels

The front wheels of the bus are directional, allowing for steering control during play. This feature adds another layer of interactive realism, enabling children to guide the bus around corners and obstacles.

STEERING



Figure 4: Illustration of the directional steering feature on the bus.



Figure 5: Top view showing the steering dial on the bus roof.

• Articulated Body

The bus features an articulated design, allowing the two sections to bend and flex, mimicking the movement of a real-life articulated city bus.

SETUP

The Dickie Volvo Bus is ready for play right out of the box. No assembly or batteries are required.

1. Carefully remove the bus from its packaging.
2. Ensure all packaging materials are safely discarded and kept away from children.
3. The bus is now ready for immediate play.

OPERATING INSTRUCTIONS

Using your Dickie Volvo Bus is intuitive and fun:

• Driving the Bus

Simply push the bus forward or backward on a flat surface. The free-wheeling design ensures smooth movement.



Figure 6: A child demonstrating how to push and play with the bus.

- **Steering**

To steer the bus, locate the circular dial on the top front section of the bus. Rotate this dial left or right to change the direction of the front wheels. This allows you to navigate the bus around obstacles or simulate turns.

- **Opening and Closing Doors**

The bus features several doors that can be manually opened and closed. Gently slide the door panels to simulate passengers entering and exiting the bus.

- **Articulated Movement**

The articulated joint in the middle of the bus allows it to bend. This feature is automatic as the bus turns or navigates uneven surfaces, adding to its realistic movement.

MAINTENANCE

To ensure the longevity of your Dickie Volvo Bus, follow these simple maintenance tips:

- **Cleaning:** Wipe the bus clean with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish or plastic components.
- **Storage:** Store the toy in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Inspection:** Periodically check the wheels, doors, and articulated joint for any signs of wear or damage.

TROUBLESHOOTING

The Dickie Volvo Bus is a robust toy designed for durability. Should you encounter any issues, consider the following:

- **Wheels Not Rolling Freely:** Check for any debris (e.g., sand, lint, hair) caught in the wheel axles. Gently remove any obstructions.
- **Doors Sticking:** Ensure no foreign objects are lodged in the door tracks. A gentle wipe with a damp cloth might help if there's accumulated dust.
- **Articulated Joint Stiffness:** This joint is designed to be flexible. If it feels stiff, ensure no foreign objects are preventing its natural movement. Avoid forcing the joint.

If problems persist, please refer to the manufacturer's support information.

SPECIFICATIONS

Attribute	Detail
Brand	DICKIE TOYS
Model Number	203747015
Product Dimensions	15.75 x 3.35 x 4.92 inches (40 cm length)
Item Weight	14.8 ounces
Recommended Age	36 months - 8 years
Features	Free-wheeling, opening doors, directional front wheels, articulated body

WARRANTY AND SUPPORT

Specific warranty information for the Dickie 203747015 Volvo Bus 7900 E Freewheel toy is not provided in this manual. For details regarding warranty coverage, product support, or to inquire about replacement parts, please refer to the product packaging or visit the official DICKIE TOYS website. Contact information for customer service may also be available on the packaging.