

[Manuals.plus](#) /

> [AddAcc](#) /

> AddAcc D13 40000mAh Battery Operated Camping Fan User Manual

AddAcc D13

AddAcc D13 40000mAh Battery Operated Camping Fan User Manual

Model: D13
Brand: AddAcc

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fan in water or other liquids.
- Keep out of reach of children and pets.
- Do not operate the fan with a damaged cord or plug.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not insert fingers or any objects into the fan grille when in operation.
- Use only the provided charging cable.
- Avoid exposing the fan to extreme temperatures or direct sunlight for prolonged periods.
- Do not attempt to disassemble or repair the fan yourself. Contact customer support for assistance.

PRODUCT OVERVIEW

The AddAcc D13 40000mAh Battery Operated Camping Fan is a versatile and powerful cooling device designed for both indoor and outdoor use. It features a large capacity rechargeable battery, multiple fan speeds, adjustable LED lighting, and convenient remote control operation. Its robust design allows for various placement options, including standing, hanging, and wall-mounting, making it ideal for camping, travel, home, garage, and emergency situations.



The AddAcc D13 fan showcasing its main features including the remote and power bank capability.

EASY TO CARRY WITH BUILT-IN HANDLE



Weight: 7.56 lbs

Length: 13.14"

Width: 7.2"

Height: 14.37"

The fan features a hidden silicone handle for easy portability, with dimensions of 7.2"D x 13.14"W x 14.37"H and a weight of 7.56 lbs.



Wall Mounted Fan



Ceiling Fan



Desk Fan



Camping Lantern Fan

The fan's versatile design allows for use as a wall-mounted fan, ceiling fan, desk fan, or camping lantern fan.

Package Contents

- 1x Rechargeable Fan
- 1x Remote Control
- 1x Charge Cable (USB Type-C)

SETUP

Unpacking

Carefully remove all components from the packaging. Inspect the fan and accessories for any signs of damage. Retain packaging for future storage or transport.

Charging the Battery

The fan is equipped with a 40000mAh rechargeable battery, providing 15-220 hours of operation depending on usage. It features a 5V/3A Type-C input/output port and a USB-A output port, allowing it to function as a power bank for other electronic devices.

1. Locate the rubber cover on the back of the fan base.
2. Open the cover to reveal the Type-C and USB-A ports.
3. Connect the provided Type-C charging cable to the fan's Type-C input port and a suitable power adapter (not included).
4. The battery indicator lights on the control panel will show the charging progress. A full charge takes approximately 9-10 hours.
5. To use as a power bank, connect your device's charging cable to the USB-A output port.



40000mAh
Portable Power Source for
Emergency Power
Outage & Outdoor Use

Camera
9.5 Chargers

iPhone 14
8.5 Chargers

MacBook Pro
3 Chargers

iPad
4 Chargers

5V/3A Type-C input/output port
&
5V/3A USB output Port

The image shows a man in a cap and sunglasses sitting in a lounge chair on a boat, fishing. In front of him is a large orange and black portable fan. On a wooden table next to the fan are a camera, an iPhone 14, a MacBook Pro, and an iPad. A close-up inset of the fan's back shows the ports and their charging capabilities.

The fan can charge other electronic devices via its USB-A output port, acting as a portable power bank.

OPERATING INSTRUCTIONS

Powering On/Off

Press the power button on the control panel or the remote control to turn the fan ON or OFF.

Fan Speed Control

The fan offers 4 high-velocity speed settings. The highest speed can reach up to 4.9m/s, providing airflow up to 30ft away.

- Press the fan speed button on the control panel or the remote control to cycle through the 4 speed settings.
- The current speed level will be indicated on the control panel.



The fan offers four distinct speed settings for customized airflow.

Oscillation and Angle Adjustment

The fan features auto oscillation and a wide range of manual angle adjustments to direct airflow precisely where needed.

- **Auto Oscillation:** Press the oscillation button on the control panel or remote to activate horizontal oscillation (45° to 90°). Press again to stop.
- **Manual Angle Adjustment:** The fan head can be manually adjusted 270° vertically to suit your preference.

AUTO OSCILLATING & ANGLE ADJUSTABLE

adjustable settings allow you enjoy the cool in any directions



45° / 90° Auto Oscillating
270° Pivot

The fan provides both automatic oscillation and manual vertical angle adjustment for optimal air distribution.

LED Light Control

The fan is equipped with 32 LED beads offering 5 brightness levels, providing illumination for dark environments.

- Press the light button on the control panel or remote to cycle through the 5 brightness settings.
- The light can operate independently of the fan.

5 MODE BRIGHTNESS LIGHTS upto 500 LUMENS

220 hours of continuous work,
the sunshine will always be
around you and your life



The integrated LED lights provide illumination, useful in low-light conditions like camping.

Timer Function

Set the fan to automatically turn off after a specified period to conserve power.

- Press the timer button on the control panel or remote to select 1, 2, 4, or 8 hours of operation.
- The fan will automatically shut off once the set time has elapsed.

Remote Control Usage

The included remote control allows for convenient operation from up to 16.4 feet away. A dedicated slot on the fan base securely holds the remote when not in use.

- Ensure the insulating sheet is removed from the remote's battery compartment before first use.
- Align the remote with the slot on the fan base for storage.

MAINTENANCE

Cleaning the Fan Blades

Regular cleaning ensures optimal performance and extends the lifespan of your fan.

1. Ensure the fan is turned OFF and unplugged before cleaning.
2. Use a screwdriver (not included) to open the front cover of the fan.
3. Gently wipe the fan blades and interior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
4. Allow all parts to dry completely before reassembling the front cover.

Storage

When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and

moisture. Ensure the battery is partially charged (around 50%) before storage to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided Type-C cable.
Weak airflow.	Fan blades are dirty.	Clean the fan blades as per the Maintenance section.
Remote control not working.	Insulating sheet not removed from remote.	Remove the clear insulating sheet from the remote's battery compartment.
Light not working.	Light function is off.	Press the light button on the control panel or remote to turn on the light.
Fan not oscillating.	Oscillation function is off.	Press the oscillation button on the control panel or remote to activate oscillation.

SPECIFICATIONS

Feature	Detail
Brand	AddAcc
Model Name	40000mAh Portable camping fan (D13)
Power Source	Battery Powered (40000mAh Lithium Ion)
Product Dimensions	7.2"D x 13.14"W x 14.37"H
Item Weight	7.56 Pounds
Noise Level	50 dB
Number of Blades	3
Blade Length	9 Inches
Air Flow Capacity	580 Cubic Feet Per Minute
Voltage	5 Volts
Wattage	22.5 watts
Special Features	Remote Controlled, Portable, LED Light, Timer, Oscillating
Connector Type	USB Type C
Indoor/Outdoor Usage	Outdoor

WARRANTY AND SUPPORT

AddAcc is committed to providing reliable products and excellent customer service. Your purchase is

backed by a 360-day free return policy.

For any questions, concerns, or technical assistance, please contact our 24-hour online service. You can also refer to the official User Guide PDF for more detailed information:

[Download User Guide \(PDF\)](#)

© 2025 AddAcc. All rights reserved.