

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VOSTERIO](#) /

› [VOSTERIO Bluetooth Record Player User Manual](#)

VOSTERIO B-661-UB

VOSTERIO Bluetooth Record Player User Manual

Model: B-661-UB

1. INTRODUCTION

Thank you for purchasing the VOSTERIO Bluetooth Record Player. This 3-speed belt-driven turntable with external speakers offers a premium audio experience and versatile connectivity options, including Bluetooth input and output, and Aux-in. Its retro walnut design complements any home decor, making it an ideal choice for vinyl enthusiasts.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this product. Keep this manual for future reference.

- Do not install near any heat sources such as radiators, heaters, or other devices that generate heat.
- Unplug this unit from the A/C mains socket during lightning storms or when unused for long periods of time.
- To reduce the risk of fire or electric shock, do not expose the unit to rain, moisture, dripping or splashing, and no objects filled with liquids, such as vases, must be placed on the unit.
- DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause an electric shock or fire.
- No naked flame sources, such as lit candles, should be placed on the unit.
- The ventilation openings should not be blocked by covering them with items such as newspapers, tablecloths, curtains, etc.

PRODUCT SAFETY WARNING

(UK)

1. Do not install near any heat sources such as radiators, heaters, or other devices that generate heat.
2. Unplug the unit from the A/C mains socket during lightning storms or when unused for long periods of time.
3. To reduce the risk of fire or electric shock, do not expose the unit to rain, moisture, dripping or splashing, and no objects filled with liquids, such as vases, must be placed on the unit.
4. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause any electric shock or fire.
5. No naked flame sources, such as lit candles, should be placed on the unit.
6. The ventilation openings should not be blocked by covering them with items such as newspapers, tablecloths, curtains, etc.

(DE)

1. Stellen Sie das Gerät nicht in der Nähe von Wärmequellen wie Heizkörpern, Heizungen oder anderen Geräten auf, die Wärme erzeugen.
2. Trennen Sie das Gerät bei Gewitter oder bei längerer Nichtbenutzung von der Netzsteckdose.
3. Um die Gefahr eines Brandes oder elektrischen Schlages zu verringern, setzen Sie das Gerät nicht Regen, Feuchtigkeit, Tropfen oder Spritzern aus, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände, wie z. B. Vasen, auf das Gerät.
4. Überlasten Sie Steckdosen oder Verlängerungskabel NICHT über ihre Nennkapazität hinaus, da dies zu einem elektrischen Schlag oder Brand führen kann.
5. keine offenen Flammen, wie z.B. brennende Kerzen, auf das Gerät gestellt werden dürfen.
6. die Lüftungsöffnungen dürfen nicht durch Gegenstände wie Zeitungen, Tischdecken, Vorhänge usw. verdeckt werden.

(FR)

1. ne pas installer l'appareil à proximité de sources de chaleur telles que des radiateurs, des appareils de chauffage ou d'autres dispositifs générant de la chaleur.
2. débrancher l'appareil de la prise secteur pendant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes.
3. pour réduire les risques d'incendie ou d'électrocution, ne pas exposer l'appareil à la pluie, à l'humidité, aux gouttes ou aux éclaboussures, et ne pas placer d'objets remplis de liquides, tels que des vases, sur l'appareil.
4. ne pas surcharger les prises murales ou les rallonges au-delà de leur capacité nominale, sous peine de provoquer un choc électrique ou un incendie.
5. aucune source de flamme nue, telle qu'une bougie allumée, ne doit être placée sur l'appareil.
6. les ouvertures de ventilation ne doivent pas être obstruées par des objets tels que des journaux, des nappes, des rideaux.

(IT)

1. Non installare l'apparecchio vicino a fonti di calore come termosifoni, stufe o altri dispositivi che generano calore.
2. Scollegare l'unità dalla presa di corrente durante i temporali o quando non viene utilizzata per lunghi periodi di tempo.
3. Per ridurre il rischio di incendi o scosse elettriche, non esporre l'unità alla pioggia, all'umidità, a gocce o spruzzi e non appoggiare oggetti pieni di liquidi, come vasi, sull'unità.
4. Non sovraccaricare le prese a muro o le prolunghe oltre la loro capacità nominale, poiché ciò può causare scosse elettriche o incendi.
5. Sull'unità non devono essere collocate fonti di fiamme libere, come candele accese.
6. Le aperture di ventilazione non devono essere bloccate coprendole con oggetti quali giornali, tovaglie, tende, ecc.

(ES)

1. No lo instale cerca de fuentes de calor como radiadores, calefactores u otros aparatos que generen calor.
2. Desenchufe la unidad de la toma de corriente de CA durante tormentas eléctricas o cuando no vaya a utilizarla durante largos periodos de tiempo.
3. Para reducir el riesgo de incendio o descarga eléctrica, no exponga la unidad a la lluvia, humedad, goteo o salpicaduras, y no coloque objetos que contengan líquidos, como jarrones, sobre la unidad.
4. No sobrecargue las tomas de corriente ni los cables alargadores por encima de su capacidad nominal, ya que esto puede provocar una descarga eléctrica o un incendio.
5. No deben colocarse sobre la unidad fuentes de llamas desnudas, como velas encendidas.
6. Las aberturas de ventilación no deben bloquearse cubriéndolas con objetos como periódicos, manteles, cortinas, etc.

Figure 2.1: Product Safety Warnings as printed on the manual.

3. PACKAGE CONTENTS

Ensure all items are present and in good condition upon unboxing:

- VOSTERIO Bluetooth Record Player Unit
- Two (2) 15W External Stereo Speakers
- Power Adapter
- 45 RPM Adapter
- User Manual (this document)



Figure 3.1: Main components of the record player system.

4. PRODUCT OVERVIEW

Familiarize yourself with the main parts of your record player:

- **Turntable Platter:** Where the vinyl record rests. Designed for stable and anti-shaking performance.
- **Tone Arm:** Holds the stylus and tracks the record grooves.
- **Stylus (Needle):** The part that reads the grooves of the record.
- **Dust Cover:** Protects the turntable from dust and grime.
- **Speed Selector:** Allows selection of 33 $\frac{1}{3}$, 45, or 78 RPM.
- **Power/Volume Knob:** Turns the unit on/off and adjusts volume.
- **Mode/BT TX Button:** Switches between modes and initiates Bluetooth transmission.
- **External Speakers:** Two 15W stereo speakers for rich sound.
- **Aux-in Port:** For connecting external audio devices.
- **Bluetooth Input/Output:** Wireless connectivity for streaming music to and from the unit.

DETAIL DISPLAY



Figure 4.1: Key features and components of the record player.



Figure 4.2: Product dimensions for the turntable and speakers.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Place Speakers:** Position the two external speakers on a stable surface, ensuring they are connected to the corresponding SP-R (Right) and SP-L (Left) RCA ports on the back of the turntable unit.
3. **Connect Power:** Plug the power adapter into the DC 12V port on the back of the turntable, then plug the adapter into a wall outlet.
4. **Remove Stylus Protector:** Gently remove the clear plastic protector from the stylus (needle) before first use.
5. **Place Mat:** Place the felt mat onto the turntable platter.

POWERFUL EXTERNAL SPEAKERS

nice sound quality,brings you into the center of the performance.



Figure 5.1: Illustration of the powerful external speakers.

6. OPERATING INSTRUCTIONS

6.1 Playing Vinyl Records

1. **Power On:** Turn the Power/Volume knob clockwise to turn on the unit.
2. **Select Speed:** Set the speed selector to the appropriate RPM (33 $\frac{1}{3}$, 45, or 78) for your record. Use the included 45 RPM adapter for 7-inch singles.
3. **Place Record:** Carefully place your vinyl record on the turntable platter.
4. **Lift Tone Arm:** Gently lift the tone arm using the cueing lever.
5. **Position Tone Arm:** Move the tone arm over the desired starting groove of the record.
6. **Lower Tone Arm:** Slowly lower the tone arm onto the record using the cueing lever. The record will begin to play.
7. **Adjust Volume:** Adjust the volume using the Power/Volume knob.

8. **Auto-Stop Function:** The auto-stop function will automatically stop the platter when the record reaches its end, protecting your records.
9. **Stop Playback:** To stop playback, lift the tone arm using the cueing lever and return it to the tone arm rest. Turn the Power/Volume knob counter-clockwise to turn off the unit.



Figure 6.1: The 3-speed belt-driven turntable in action.

6.2 Bluetooth Input (Receiving Audio)

Use the external speakers to play music from your Bluetooth-enabled devices (e.g., smartphone, tablet, laptop).

1. **Power On:** Turn the Power/Volume knob clockwise to turn on the unit.
2. **Select Bluetooth Input Mode:** Press the "MODE/BT TX" button until the Bluetooth indicator light flashes, indicating pairing mode.
3. **Pair Device:** On your Bluetooth device, search for "VOSTERIO" in the Bluetooth settings and select it to pair. Once connected, the indicator light will stop flashing.
4. **Play Music:** Start playing music on your connected device. Audio will play through the VOSTERIO external speakers.

WIRELESS MUSIC PLAY

Enjoy your favorite music of mobile phone,
tablet, PC more freely

 **BLUETOOTH**



Figure 6.2: Enjoying wireless music playback via Bluetooth input.

6.3 Bluetooth Output (Transmitting Audio)

Connect the turntable to your own Bluetooth headphones, speakers, or soundbar to play vinyl records wirelessly.

1. **Power On:** Turn the Power/Volume knob clockwise to turn on the unit.
2. **Enable Pairing on External Device:** Put your Bluetooth headphones, speaker, or soundbar into pairing mode.
3. **Select Bluetooth Output Mode:** Press and hold the "MODE/BT TX" button on the turntable until the Bluetooth indicator light flashes rapidly, indicating transmission pairing mode.
4. **Connect:** The turntable will automatically search for and connect to nearby Bluetooth audio devices in pairing mode. Once connected, the indicator light will stop flashing.
5. **Play Vinyl:** Start playing a vinyl record as described in Section 6.1. Audio will transmit to your connected Bluetooth device.

Bluetooth Output

Wireless Pair with Your Bluetooth Receivers Like Bluetooth Earphone , Speakers , Sound Bar etc.



Figure 6.3: Wireless audio transmission from the record player.

6.4 Aux-in Connection

Connect external audio sources (e.g., MP3 player, CD player) via the Aux-in port.

1. **Connect Cable:** Plug a 3.5mm audio cable (not included) into the Aux-in port on the back of the turntable and the other end into your external audio device's headphone or audio output jack.
2. **Power On:** Turn the Power/Volume knob clockwise to turn on the unit.
3. **Play Audio:** Start playing audio on your external device. Sound will be routed through the VOSTERIO external speakers.

7. MAINTENANCE

- **Cleaning the Unit:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Stylus:** Use a soft brush (not included) to gently brush the stylus from back to front to remove dust and debris. Do not touch the stylus with your fingers.
- **Cleaning Records:** Use a dedicated record cleaning brush and solution to keep your vinyl records clean and free of dust, which can prolong stylus life and improve sound quality.
- **Dust Cover:** Keep the dust cover closed when not in use to prevent dust accumulation.
- **Stylus Replacement:** The stylus has a limited lifespan (typically 300-500 hours of play). If sound quality degrades, consider replacing the stylus. Consult the manufacturer for compatible replacement styli.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power knob off	Ensure power adapter is securely plugged in; Turn Power/Volume knob clockwise to ON.
No sound from speakers	Speakers not connected; Volume too low; Incorrect mode selected	Check speaker connections (SP-R, SP-L); Increase volume; Ensure correct mode (Phono, BT, Aux) is selected.
Record skips or sounds distorted	Dirty record; Dirty or worn stylus; Turntable not level	Clean record; Clean or replace stylus; Ensure turntable is on a flat, stable surface.
Bluetooth pairing fails	Device too far; Not in pairing mode; Interference	Ensure devices are within 10m (33ft); Re-enter pairing mode on both devices; Move away from other electronic devices.
Record plays too fast/slow	Incorrect speed selected	Adjust the speed selector to 33 $\frac{1}{3}$, 45, or 78 RPM as appropriate for the record.

9. SPECIFICATIONS

Feature	Detail
Brand	VOSTERIO
Model Number	B-661-UB
Product Dimensions	5 x 5 x 5 inches
Item Weight	13.52 pounds

Feature	Detail
Connectivity Technology	Auxiliary, Bluetooth
Maximum Rotational Speed	78 RPM (Supports 33 $\frac{1}{3}$, 45, 78 RPM)
Special Feature	Aux-in, Bluetooth Input & Output, Auto-stop
Material	Plastic (with Walnut finish)
Color	Walnut
Compatible Devices	Speaker, Bluetooth Headphones/Speakers
Motor Type	AC Motor (Belt-Driven)
Power Consumption	15 Watts

10. WARRANTY AND SUPPORT

VOSTERIO products are designed and manufactured to the highest quality standards. For specific warranty information and customer support, please refer to the warranty card included with your product or visit the official VOSTERIO website. You can also contact VOSTERIO customer service for assistance with product setup, troubleshooting, or general inquiries.

Visit the [VOSTERIO Store on Amazon](#) for more information and products.

