



Manuals.plus /

› Barbie /

› Barbie A Touch of Magic Walk & Flutter Pegasus Plush Toy Instruction Manual

Barbie HPJ50

Barbie A Touch of Magic Walk & Flutter Pegasus Plush Toy Instruction Manual

[Box](#) [Setup](#) [Operation](#) [Maintenance](#) [Overview](#) [What's in the](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The Barbie Walk & Flutter Pegasus is an 11-inch plush toy designed to bring magical playtime. This toy features walking and wing-flapping actions, accompanied by musical sounds. It includes hair accessories for styling.

- The Pegasus plush toy stands approximately 11 inches tall.
- Features a self-walking mechanism and flapping wings, activated by pulling the leash.
- Plays the Barbie A Touch of Magic song during walking.
- Includes a comb and three barrettes for styling the mane and tail.
- Suitable for children aged 3 years and older.



Image 1.1: The Barbie Walk & Flutter Pegasus plush toy.

2. WHAT'S IN THE BOX

Verify that all components are present:

- 1 Walk 'N Flutter Pegasus plush toy
- 1 hair comb
- 3 hair clips
- 3 AAA batteries (included)



Image 2.1: Contents of the Barbie Walk & Flutter Pegasus package.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the underside of the Pegasus plush toy.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Note: 3 AAA batteries are included with the product. Always use fresh batteries for optimal performance.

4. OPERATING INSTRUCTIONS

4.1 Walking and Wing Flapping

To activate the walking and wing-flapping feature, gently pull on the attached leash. The Pegasus will begin to walk and its wings will flutter. Pull the leash again to stop the action.



Image 4.1: Activating the walking feature by pulling the leash.



Image 4.2: The Pegasus's wings fluttering during operation.

4.2 Sound Feature

The Pegasus will play the Barbie A Touch of Magic song while walking. There are also additional sound effects, such as whinnying and crunching sounds, to enhance playtime.

4.3 Hair Styling

Use the included comb to brush the Pegasus's long mane and tail. Attach the three colorful barrettes to decorate its hair. Experiment with different styles for creative play.



Image 4.3: Styling the Pegasus's mane with included barrettes.

4.4 Official Product Video

Your browser does not support the video tag.

Video 4.4: Official demonstration of the Barbie A Touch of Magic Walk & Flutter Pegasus Plush toy by Mattel.

5. MAINTENANCE

5.1 Cleaning

- The Pegasus plush toy is surface clean only. Do not immerse in water.
- Use a soft, damp cloth to gently wipe away any dirt or stains.
- Allow the toy to air dry completely before further use or storage.

5.2 Hair Care

- Regularly comb the Pegasus's mane and tail with the included comb to prevent tangles and maintain its appearance.
- Avoid excessive pulling or harsh brushing to prevent damage to the hair fibers.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy not walking or making sounds.	Depleted or incorrectly installed batteries.	Check the battery compartment for proper battery insertion. Replace with fresh AAA batteries if necessary.
Wings not flapping.	Leash not pulled correctly or mechanism obstructed.	Ensure the leash is pulled gently and consistently to activate the wing-flapping mechanism. Check for any obstructions around the wings.

7. SPECIFICATIONS

Feature	Detail
Brand	Barbie
Model Number	HPJ50
Item Type	Toy (Stuffed Toy)
Material Type	Plush
Size	11 inches (height)
Power Source	Battery Powered
Batteries Required	3 AAA batteries (included)
Age Range	3 years and older
Additional Features	Sound, Walking, Wing Flapping
Included Components	1 Pegasus, 1 hair comb, 3 hair clips, 3 AAA batteries
Manufacturer	Mattel

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

This product does not come with a manufacturer's warranty.

8.2 Customer Support

For any product inquiries, assistance, or concerns, please contact Mattel customer support directly. Refer to the product packaging or the official Mattel website for the most current contact information.