

VCK TF004B

VCK 13-Inch Oscillating Tower Fan User Manual

Model: TF004B | Brand: VCK

[Introduction](#)

[Safety](#)

[Components](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. INTRODUCTION

Thank you for choosing the VCK 13-Inch Oscillating Tower Fan. This compact and portable fan is designed to provide efficient and quiet cooling for various indoor environments such as bedrooms, home offices, and desktops. Please read this manual thoroughly before use to ensure proper operation and maintenance.

Key Features:

- **Compact & Portable Design:** At 13 inches tall and weighing only 2.7 lbs, this fan is easy to move and saves space.
- **Custom Cooling:** Features 3 adjustable speed settings to personalize airflow intensity.
- **80° Wide Oscillation:** Provides broad air distribution to cool a larger area.
- **Bladeless Design:** Enhanced safety with an external safety grille, suitable for households with children and pets.
- **Quiet Operation:** Engineered for low noise, promoting a calm environment.



Figure 1: The VCK 13-Inch Tower Fan demonstrating its airflow, with leaves indicating air movement.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Read all instructions before using this fan.
- Ensure the power source voltage matches the fan's requirements (120V).
- Always unplug the fan before cleaning, servicing, or when not in use.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact customer support.
- Keep fingers and other objects away from the fan's air inlets and outlets.
- Do not use the fan in wet or damp locations, such as bathrooms or laundry areas.
- Place the fan on a stable, level surface to prevent it from tipping over.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the

outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

- Do not cover the fan or restrict airflow during operation.
- This fan is for indoor use only.



Figure 2: Illustration of a polarized plug, highlighting the wider blade for safe insertion into a polarized outlet.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present and in good condition:

- VCK 13-Inch Tower Fan Unit
- User Manual

4. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your VCK Tower Fan:

- **Control Knob:** Located on the top, used to power on/off, adjust fan speed, and activate/deactivate oscillation.
- **Air Outlet:** Front grille where air is expelled.
- **Air Intake:** Rear grille for air intake.
- **Base:** Provides stability for the fan.
- **Integrated Handle:** Located on the back for easy portability.



Figure 3: Close-up view of the easy-to-use control knob, indicating settings for speed control and combined speed with oscillation.

5. SETUP GUIDE

Follow these steps to set up your VCK Tower Fan:

1. **Unpack:** Carefully remove the fan and all packaging materials from the box. Retain packaging for future storage or transport.
2. **Placement:** Place the fan on a firm, level, and stable surface. Ensure there is adequate space around the fan for proper airflow, avoiding curtains, walls, or other obstructions.
3. **Connect Power:** Insert the polarized plug into a standard 120V AC electrical outlet. Ensure the plug is fully inserted.

6. OPERATING YOUR FAN

The VCK Tower Fan features a simple control knob for all functions.

1. **Power On/Off:** Rotate the control knob clockwise from the 'OFF' position to turn the fan on. Continue rotating to select a speed. Rotate counter-clockwise back to 'OFF' to power down.
2. **Adjusting Fan Speed:** The fan offers 3 speed settings. Rotate the control knob clockwise to select your desired speed:
 - **Setting I:** Low Speed
 - **Setting II:** Medium Speed
 - **Setting III:** High Speed
3. **Activating Oscillation:** To activate the 80° oscillation feature, continue rotating the control knob past the speed settings to the oscillation symbol. The fan will begin to rotate from side to side.
4. **Deactivating Oscillation:** To stop oscillation, rotate the control knob back to a non-oscillating speed setting or to the 'OFF' position.

Safely Take in The Breeze

Built-in polarized plug (one blade is wider than the other) to cut off power in case of electrical abnormalities



*This plug can only be plugged into a polarized outlet in one way

Figure 4: The VCK Tower Fan demonstrating its 80-degree wide oscillation, distributing air across a broad area.

No Noise Only the Wind

Enjoy cool and calm moments with the wind brought by the acoustic airflow system



Figure 5: The VCK Tower Fan placed on a bedside table, illustrating its quiet operation suitable for a bedroom environment.

7. CARE AND MAINTENANCE

Regular cleaning and proper storage will help maintain your fan's performance and extend its lifespan.

- **Cleaning:**

- a. Always unplug the fan from the power outlet before cleaning.
- b. Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- c. For dust accumulation in the air intake/outlet grilles, use a vacuum cleaner with a brush attachment or compressed air to gently remove dust.
- d. Ensure the fan is completely dry before plugging it back in and operating.

- **Storage:**

- a. If storing the fan for an extended period, clean it thoroughly.
- b. Store the fan in its original packaging or a protective cover in a cool, dry place.
- c. Do not place heavy objects on top of the fan during storage.



Figure 6: A child safely interacting near the VCK Tower Fan, demonstrating its improved bladeless design and external safety grille.

8. TROUBLESHOOTING

If you encounter any issues with your fan, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Fan not plugged in correctly. Power outlet malfunction.	Ensure the fan is securely plugged into a working 120V outlet. Check if the outlet is functional by plugging in another device. Check household circuit breaker.
Weak or no airflow.	Air inlets/outlets blocked. Fan speed set too low.	Ensure air inlets and outlets are clear of obstructions. Increase the fan speed using the control knob.
Fan makes unusual noise.	Fan not on a level surface. Internal obstruction or loose part.	Place the fan on a stable, level surface. Unplug the fan and gently check for any visible obstructions in the grilles. If the noise persists, contact customer support.
Oscillation not working.	Oscillation function not activated.	Rotate the control knob to the oscillation setting.

9. PRODUCT SPECIFICATIONS

Brand	VCK
Model Name	TF004B
Color	Black
Electric Fan Design	Table Fan / Tower Fan
Power Source	Corded Electric
Product Dimensions	4.3"D x 4.3"W x 12.8"H
Item Weight	2.82 Pounds
Room Type	Bedroom, Home Office
Special Feature	13 Inch Desktop Fan, Adjustable 3 Speeds, Bladeless, Lightweight, Portable
Recommended Uses	Cooling
Voltage	120V
Switch Type	Push Button (via knob)

Indoor/Outdoor Usage	Indoor
Control Method	Touch (via knob)
Number of Power Levels	3

10. WARRANTY AND CUSTOMER SUPPORT

VCK is committed to providing excellent support for its products. While specific warranty details are not provided in this manual, we encourage you to contact our customer service team if you have any questions, concerns, or require assistance with your VCK Tower Fan.

Our support team aims to respond within one business day to address your inquiries.

For assistance, please refer to the contact information provided with your purchase or visit the official VCK website.