

[Manuals.plus](#) /

› [Prestige](#) /

› Prestige Endura 1000W Mixer Grinder (4 Jars) User Manual

Prestige Endura

Prestige Endura 1000W Mixer Grinder (4 Jars) User Manual

Model: Endura

INTRODUCTION

Thank you for choosing the Prestige Endura 1000W Mixer Grinder. This appliance is designed for efficient grinding, blending, and juicing tasks in your kitchen. Please read this manual carefully before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.

Prestige Endura 1000W Mixer Grinder

4 Jars | Maximum Utility

Prestige®

ENDURA
1000W



Image: The Prestige Endura 1000W Mixer Grinder with its four jars, showcasing its robust design and versatility.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not immerse the motor unit in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Always unplug the appliance from the power supply before cleaning, assembling, or disassembling parts.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
- Supervise children closely when the appliance is in use.
- Do not use outdoors.
- Do not use attachments not recommended by the manufacturer.
- If you notice a mild burning smell during the first few uses, this is normal and due to the motor varnish heating

up. The smell should disappear after initial use. If it persists, contact customer service.

PRODUCT COMPONENTS AND SETUP

What's in the Box:

- 1 Mixer Grinder Base Unit
- 1 SS Wet Jar 1500ml with Blade
- 1 SS Dry Jar 1000ml with Blade
- 1 Transparent Juicer Jar 1500ml with Blade
- 1 SS Chutney Jar 450ml with Blade
- 3 Polycarbonate Jar Lids
- 1 Polypropylene Juicer Lid
- Spatula & Measuring Cup
- User's Manual
- Warranty Card

What's Inside the Box

- One Mixer Grinder Base Unit
- SS Wet Jar 1500ml with Transparent Dome Lid
- SS Dry Jar 1000 ml
- Transparent Juicer Jar 1500 ml
- SS Chutney Jar 450 ml
- Spatula
- User's Manual
- Warranty Card



Image: A visual representation of all components included in the Prestige Endura Mixer Grinder package, including the base unit, four jars, lids, spatula, and measuring cup.

Assembly:

1. Place the mixer grinder base unit on a stable, flat, and dry surface.
2. Ensure the power cord is unplugged from the wall socket.
3. Select the appropriate jar for your task (wet, dry, chutney, or juicer).
4. Place the ingredients into the chosen jar. Do not overfill.
5. Securely place the lid on the jar. Ensure it is properly locked into position.
6. Place the assembled jar onto the motor unit, aligning the jar's coupler with the motor's coupler. Turn clockwise until it locks into place.

OPERATING INSTRUCTIONS

The Prestige Endura Mixer Grinder features a powerful 1000W motor with ball bearing technology for smooth and efficient operation. It comes with 3 speed settings and a pulse function for precise control over your grinding and

blending tasks.


Unmatched Convenience



Sleek & Sturdy
For Safe, High-speed Grinding



Tight-fit Lid
To Prevent Spills

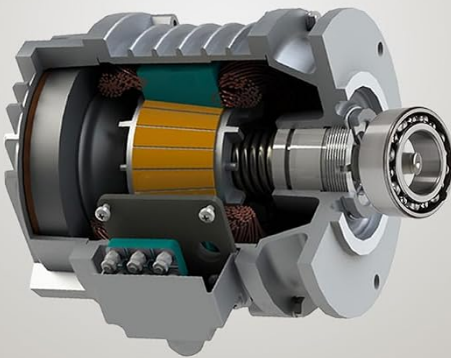

Ball Bearing Motor
With 100% Copper Winding



3 Speed Settings
With Pulse Function

Image: Close-up of the mixer grinder's base unit showing the 3-speed rotary control knob with pulse function, highlighting its user-friendly interface.

General Operation:

1. After assembling the jar with ingredients and securing it on the motor unit, plug the power cord into a suitable electrical outlet.
2. Turn the rotary switch to the desired speed setting (1, 2, or 3). Start with lower speeds for coarse grinding and gradually increase for finer results.
3. For short bursts of power or to clear ingredients from the blades, use the 'Pulse' function by turning the knob to 'P' and releasing.
4. Do not operate the mixer grinder continuously for more than 5 minutes. Allow a cooling period of 2-3 minutes before resuming.
5. After use, turn the switch to '0' (off) and unplug the appliance.

Using the Jars:



Image: An illustration detailing the four different jars included with the mixer grinder: Transparent Juicer Jar (1500ml), SS Wet Grinding Jar (1500ml), SS Dry Grinding Jar (1000ml), and SS Chutney Jar (450ml), along with their typical uses.

- **1.5L Wet Grinding Jar:** Ideal for preparing dosa batter, idli batter, purees, and other wet preparations. The 6-leaf blade ensures exceptional smoothness.
- **1.0L Dry Grinding Jar:** Suitable for grinding spices, coffee beans, rice, and other dry ingredients into fine powders.
- **450ml Chutney Jar:** Perfect for making small quantities of chutneys, pastes, and dips.
- **1.5L Transparent Juicer Jar:** Designed for extracting juices from fruits and vegetables. Ensure fruits are deseeded and cut into small pieces before juicing.

Grind | Blend | Mix | Juice

All in One



Image: A visual guide showing the different applications of each jar: grinding, blending, mixing, and juicing, demonstrating the product's multi-purpose functionality.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your mixer grinder.

1. **Before Cleaning:** Always unplug the appliance from the power outlet before cleaning.
2. **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not immerse the motor unit in water or any other liquid.
3. **Jars and Lids:**
 - Detach the jars and lids from the motor unit.
 - Wash the jars and lids with warm soapy water. Use a brush for thorough cleaning of blades.
 - Rinse thoroughly under running water.
 - Dry all parts completely before storing or reassembling.
 - The jars and lids are dishwasher safe.

- 4. **Blades:** Handle blades with extreme care as they are sharp.
- 5. **Storage:** Store the mixer grinder and its accessories in a clean, dry place.

TROUBLESHOOTING

If you encounter any issues with your Prestige Endura Mixer Grinder, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in.	Ensure the plug is securely inserted into the power outlet.
	Power outage.	Check your household's power supply.
	Jar not properly locked.	Ensure the jar is correctly placed and locked onto the motor unit.
	Overload protector tripped.	Press the overload protector button located at the bottom of the motor unit. Wait a few minutes before restarting.
Burning smell during operation.	New motor varnish heating up (initial use). Overloading the motor.	This is normal for the first few uses and should dissipate. Reduce the quantity of ingredients. Allow the motor to cool down.
Loud noise during operation.	Improperly fitted lid or jar. Hard ingredients.	Ensure the lid is securely closed and the jar is properly locked. Add some liquid or reduce the quantity of hard ingredients.
Leakage from jar.	Lid not properly secured. Overfilling the jar. Damaged gasket.	Ensure the lid is tightly closed. Do not fill the jar beyond the maximum fill line. Check the gasket for wear and tear. Replace if necessary.

If the problem persists after following these steps, please contact the Brand Service Centre.

SPECIFICATIONS

Brand	Prestige
Model Number	Endura
Wattage	1000 Watts
Motor Type	Heavy-Duty Ball Bearing Copper Motor
Number of Jars	4 (1.5L Wet, 1L Dry, 450ml Chutney, 1.5L Juicer)
Blade Material	Stainless Steel
Speed Settings	3 Speeds + Pulse Function
Controls Type	Knob Control
Voltage	230 Volts
Product Dimensions (D x W x H)	59D x 25W x 30H Centimeters

Item Weight	7.26 Kilograms
Material	Plastic, Stainless Steel
Dishwasher Safe Jars/Lids	Yes
Country of Origin	India

Power-Packed Copper Motor

1000
Watt



Ball-bearing Motor

for powerful performance



Hardest Ingredients

crushed with ease

Image: An exploded view illustrating the powerful 1000W copper motor with ball bearing technology, emphasizing its robust construction for efficient performance.

WARRANTY AND SUPPORT

Your Prestige Endura Mixer Grinder comes with the following warranty:

- **Product Warranty: 2 Years**

- **Motor Warranty:** 5 Years

For any service, support, or warranty claims, please contact:

Customer Care No: 080-46824000

Email: Customercare@ttkprestige.com

Manufacturer: TTK PRESTIGE LIMITED, REGISTERED OFFICE: PLOT NO . 38. SIPCOT INDUSTRIAL COMPLEX, HOSUR- 635 126, INDIA

Please retain your purchase receipt and warranty card for any warranty-related services.