

[Manuals.plus](#) /

› [YITAHOME](#) /

› YITAHOME 10x12ft Gazebo Hardtop Polycarbonate Canopy Outdoor with Netting and Shaded Curtains, Aluminum Frame Garden Tent for Patio, Backyard, Deck and Lawns, Gray

YITAHOME FTPLCG-K04F10X13

YITAHOME 10x12ft Gazebo Instruction Manual

Model: FTPLCG-K04F10X13 | Brand: YITAHOME

PRODUCT OVERVIEW

The YITAHOME 10x12ft Gazebo features a durable hardtop polycarbonate canopy designed for outdoor use. It includes netting and shaded curtains, supported by a robust aluminum frame. This all-season gazebo provides protection against various weather conditions, with a sleek roof slope to prevent water accumulation. It is suitable for patios, backyards, decks, and lawns, offering a spacious area for relaxation and gatherings.



Image: The YITAHOME 10x12ft Gazebo, showcasing its size and design in an outdoor setting.

IMPORTANT SAFETY INFORMATION

Always follow the included assembly instructions and use the provided hardware to secure the gazebo to a stable foundation. Never attempt to assemble or disassemble the gazebo alone; always have at least two people present to assist. Be cautious of pinch points and heavy components during assembly and disassembly. Always secure the gazebo to the ground using the provided ground stakes, especially in windy conditions.

SETUP AND ASSEMBLY

The YITAHOME 10x12ft Gazebo requires assembly. It is recommended that 2-4 people participate in the assembly process, which may take approximately 2-4 hours. The product will be delivered in 2 separate packages that may arrive at different times; please wait until all packages have arrived before starting assembly. Detailed instructions are included to guide you through a smooth process.

Assembly Steps Overview:

1. **Step 1: Assemble the Base Frame.** Begin by attaching the main support posts to their base plates. Ensure all connections are secure using the provided screws.

Your browser does not support the video tag.

Video: Official YITAHOME 10x12ft Polycarbonate Gazebo Installation Video. This video demonstrates the step-by-step assembly process, including securing the base and connecting frame components.

2. **Step 2: Construct the Upper Frame.** Connect the horizontal beams to the top of the vertical posts. Pay attention to the alignment of pre-drilled holes.

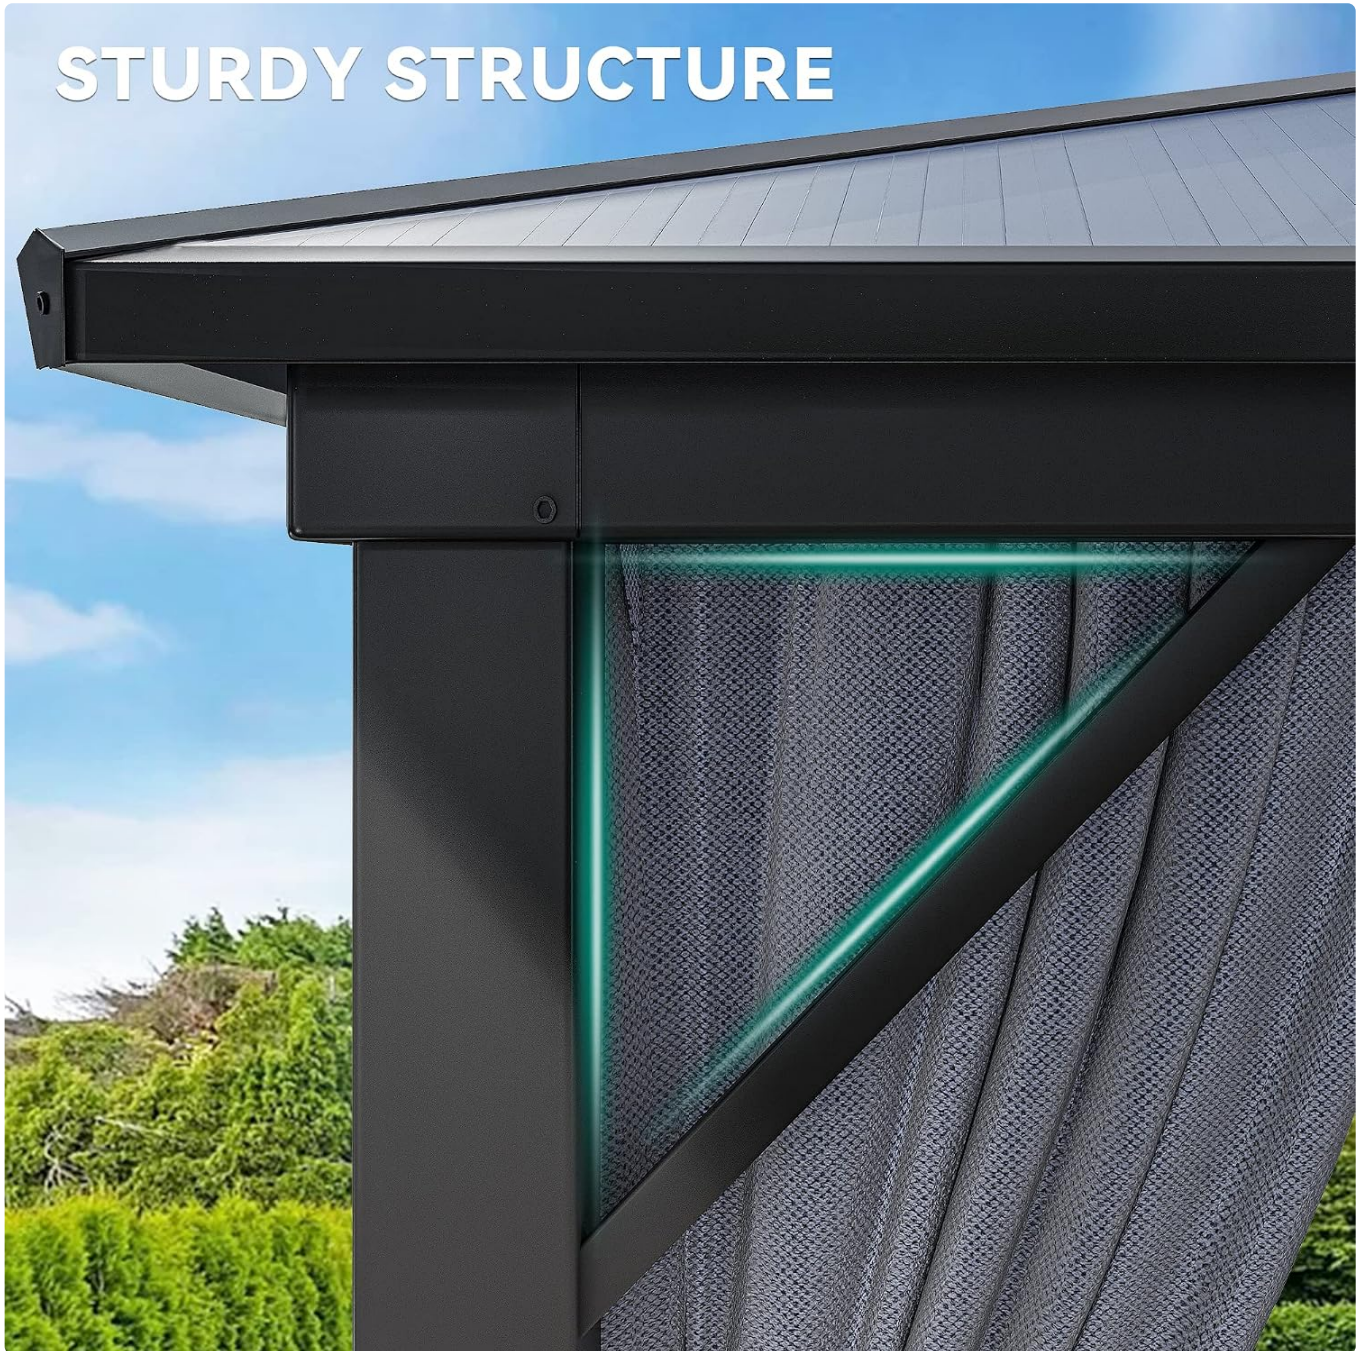 


Image: Detail of the sturdy aluminum frame connections, highlighting the triangular design for enhanced stability.

3. **Step 3: Install Roof Supports.** Attach the roof support beams to form the canopy structure. These supports are crucial for the polycarbonate panels.
4. **Step 4: Install Polycarbonate Roof Panels.** Carefully slide the polycarbonate panels into the designated channels on the roof structure. Ensure they are properly seated and secured to prevent leaks.


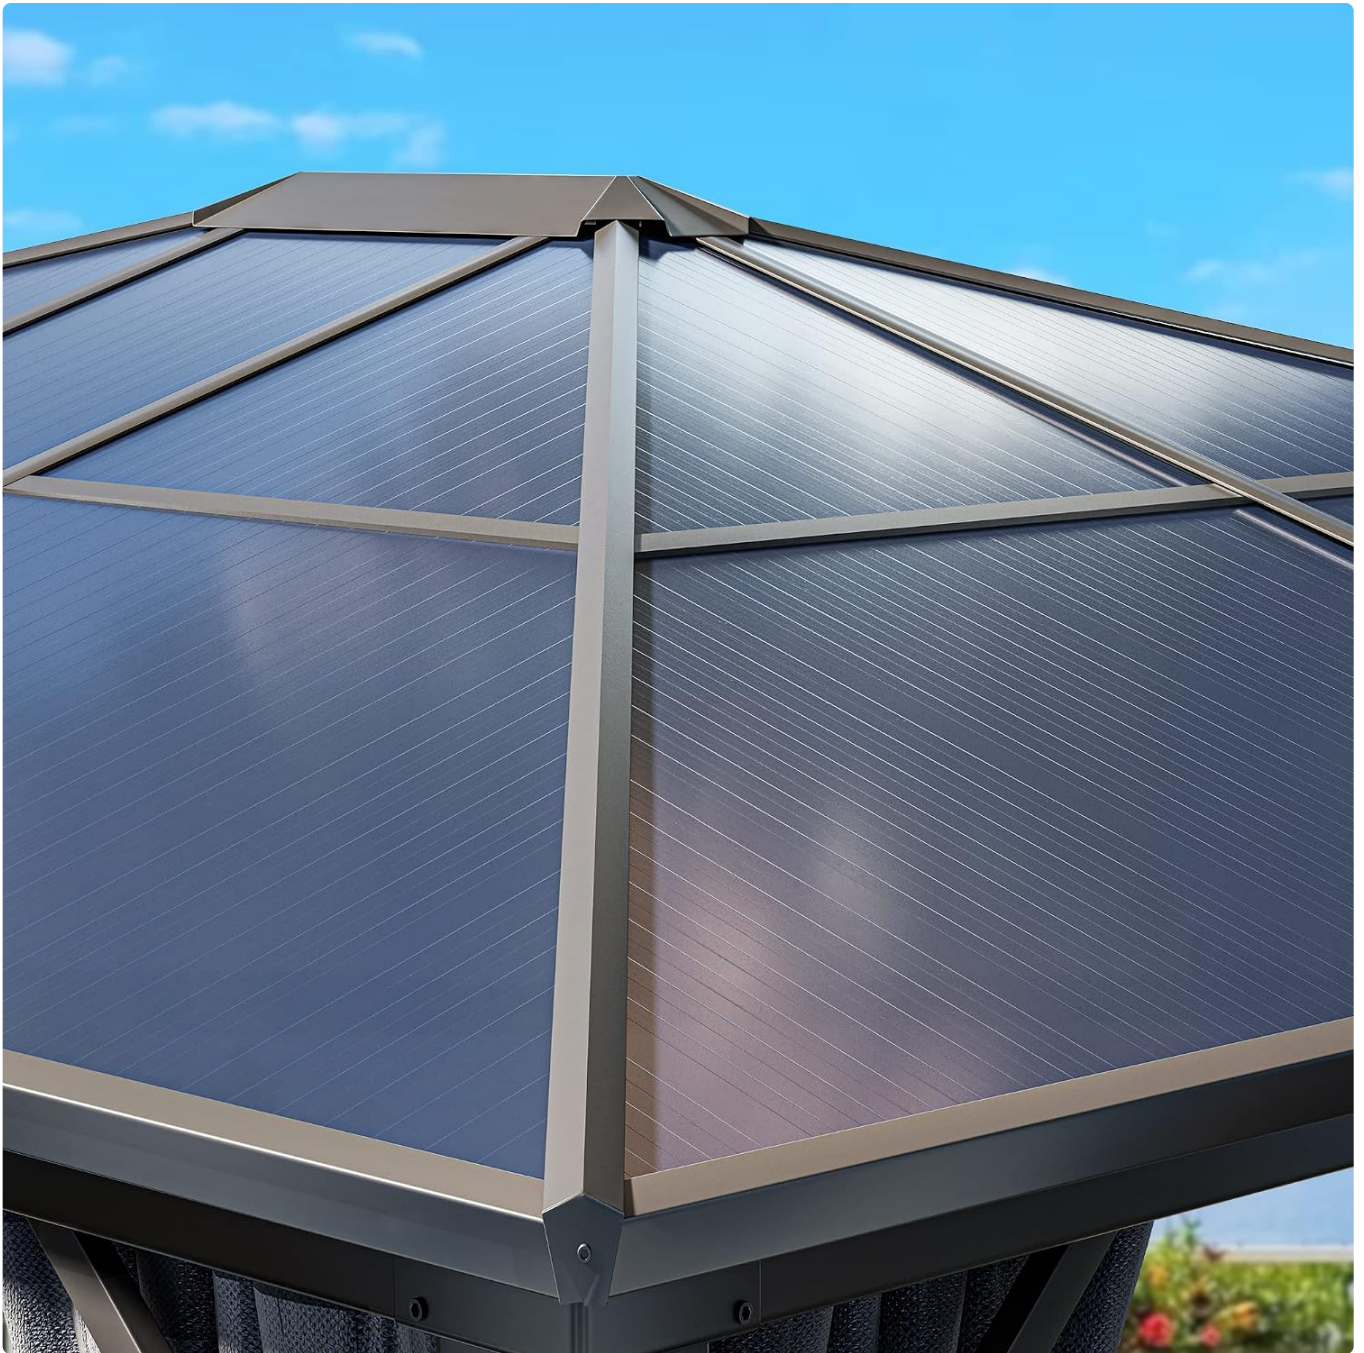


Image: A close-up view of the 6mm thick polycarbonate roof panels, showing their corrugated structure and how they fit into the frame.

5. **Step 5: Attach Sidewalls and Netting.** Hang the double-layered sidewalls and netting onto the double rail system. Ensure zippers are functional for easy access and privacy.


DOUBLE-LAYERED FABRIC

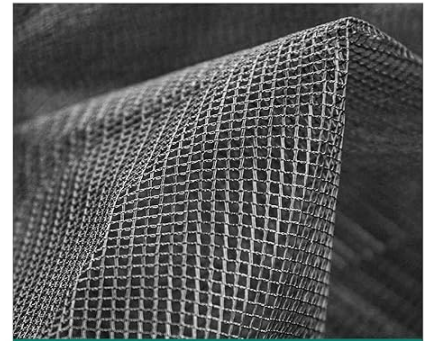

Thickened Nettings



 Double Tracks

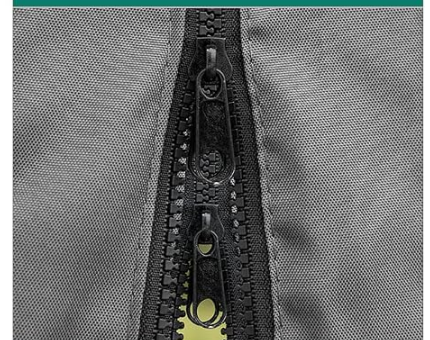

Double Zippers



Image: Illustration detailing the double-layered fabric system, highlighting thickened nettings, double tracks for curtains, and double zippers for convenience and privacy.

6. **Step 6: Secure the Gazebo.** Use the provided ground stakes to reinforce the pavilion and improve stability, especially in windy conditions.

OPERATING INSTRUCTIONS

The YITAHOME Gazebo is designed for versatile outdoor use. Its features allow for adaptable functionality:

- **Weather Protection:** The 6mm thick polycarbonate hardtop roof provides protection from rain and UV rays. The sleek slope design ensures efficient water runoff, preventing accumulation.
- **Privacy and Ventilation:** Utilize the double-layered sidewalls, consisting of gray polyester cloth and black mesh. The mesh can be used for ventilation and insect protection, while the polyester curtains offer privacy and additional shade. Both layers operate on a double track system for smooth movement.
- **Stability:** Ensure the gazebo is always secured to the ground using the provided ground stakes, especially during adverse weather conditions, to maintain stability.



Image: The gazebo shown in both rainy and snowy conditions, illustrating its all-season durability and weather resistance.

MAINTENANCE

Regular maintenance will extend the lifespan of your YITAHOME Gazebo.

- **Cleaning:** Clean the polycarbonate roof panels and aluminum frame with mild soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the materials. Rinse thoroughly with clean water.
- **Fabric Care:** The polyester cloth and mesh curtains can be spot cleaned with mild detergent. For deeper cleaning, they may be removed and hand-washed or machine-washed on a gentle cycle with cold water. Air dry completely before reattaching.
- **Frame Inspection:** Periodically inspect the aluminum frame for any signs of wear, loose connections, or rust. Although the frame is powder-coated for weather resistance, minor rust may occur over time, especially on exposed metal parts. Tighten any loose screws and address rust spots promptly with appropriate rust-inhibiting paint.
- **Winterization:** While designed for all seasons, in areas with heavy snowfall, it is advisable to regularly clear snow from the roof to prevent excessive weight accumulation. Consider disassembling and storing the gazebo in extreme winter conditions for prolonged durability.

TROUBLESHOOTING

If you encounter issues with your YITAHOME Gazebo, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Gazebo feels unstable or wobbly.	Loose connections; insufficient anchoring; uneven ground.	Ensure all screws and bolts are tightened. Verify that the gazebo is secured to the ground using all provided ground stakes. Relocate to a level surface if possible.
Roof panels leak or do not fit flush.	Panels not properly seated; damaged seals; incorrect panel orientation.	Re-check the installation of each polycarbonate panel, ensuring they are fully inserted into their channels and seals are intact. Refer to the assembly video for correct placement.
Curtains/Netting do not slide smoothly.	Debris in tracks; damaged rollers; misaligned tracks.	Clean the double rail system to remove any dirt or obstructions. Inspect rollers for damage. Ensure the tracks are properly aligned during assembly.

Problem	Possible Cause	Solution
Missing or incorrect parts.	Packaging error; parts delivered in separate shipments.	Verify all packages have arrived. Compare contents with the parts list in the manual. Contact YITAHOME customer support for assistance with missing or incorrect parts.

SPECIFICATIONS

- Brand:** YITAHOME
- Model Number:** FTPLCG-K04F10X13
- Product Dimensions:** 144"L x 120"W x 105.6"H (12ft L x 10ft W x 8.8ft H)
- Frame Material:** Aluminum
- Roof Material:** Polycarbonate (6mm thick)
- Curtain/Netting Material:** Polyester, Mesh
- Color:** Gray
- Water Resistance Level:** Waterproof
- UV Protection:** Ultraviolet-proof
- Assembly Required:** Yes
- Occupancy:** 4-6 people
- Item Weight:** 148.7 pounds
- UPC:** 840265285909

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your product or visit the official YITAHOME website. You can also find more information and contact options on the [YITAHOME Store on Amazon](#).