

[Manuals.plus](#) /

› [Deerma](#) /

› Deerma BY200 Fabric Vacuum Cleaner User Manual

Deerma BY200

Deerma BY200 Fabric Vacuum Cleaner User Manual

Model: BY200

INTRODUCTION

The Deerma BY200 Fabric Vacuum Cleaner is designed for efficient wet and dry cleaning of various fabric surfaces such as sofas, carpets, and curtains. It features a hot rinsing spray for deep stain removal and powerful suction for quick drying. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Deerma BY200.

SAFETY INFORMATION

- Always read all instructions before using the appliance.
- Do not immerse the appliance in water or other liquids.
- Ensure the power cord is not damaged before use. If damaged, contact authorized service personnel.
- Keep hands, feet, loose clothing, and hair away from moving parts.
- Do not use the appliance to pick up flammable or combustible liquids, or anything that is burning or smoking.
- Unplug the appliance from the power outlet when not in use and before cleaning or maintenance.
- This appliance is for household use only.
- The appliance has an IPX4 waterproof rating, meaning it is resistant to water splashes from any direction. However, it should not be submerged.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Deerma BY200 Fabric Vacuum Cleaner.



Figure 1: Main unit of the Deerma BY200 Fabric Vacuum Cleaner, showing its compact blue and black design with integrated handle and hose attachment.

- **Main Unit:** Contains the motor, water tanks, and controls.
- **Hose:** Flexible hose connecting the main unit to the cleaning head.
- **Cleaning Head (Two-in-one booster brush):** Features a spray nozzle and brush for effective cleaning.
- **Clean Water Tank (1.6L):** For holding clean water and cleaning solution.
- **Dirty Water Tank (1.4L):** For collecting dirty water after cleaning.
- **Power Cord:** 5-meter long cord for extended reach.
- **Universal Wheels:** For easy maneuverability.



Figure 2: The Deerma BY200 unit showcasing its 360-degree universal wheels for easy movement and the 5-meter power cord for wide coverage.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Assemble Hose and Cleaning Head:** Connect the flexible hose to the main unit and attach the cleaning head securely to the other end of the hose.
3. **Fill Clean Water Tank:** Remove the clean water tank (1.6L capacity). Fill it with clean water. For enhanced cleaning, you may add a suitable fabric cleaning solution as per the solution's instructions. Do not exceed the maximum fill line. Reinsert the tank firmly into the main unit.

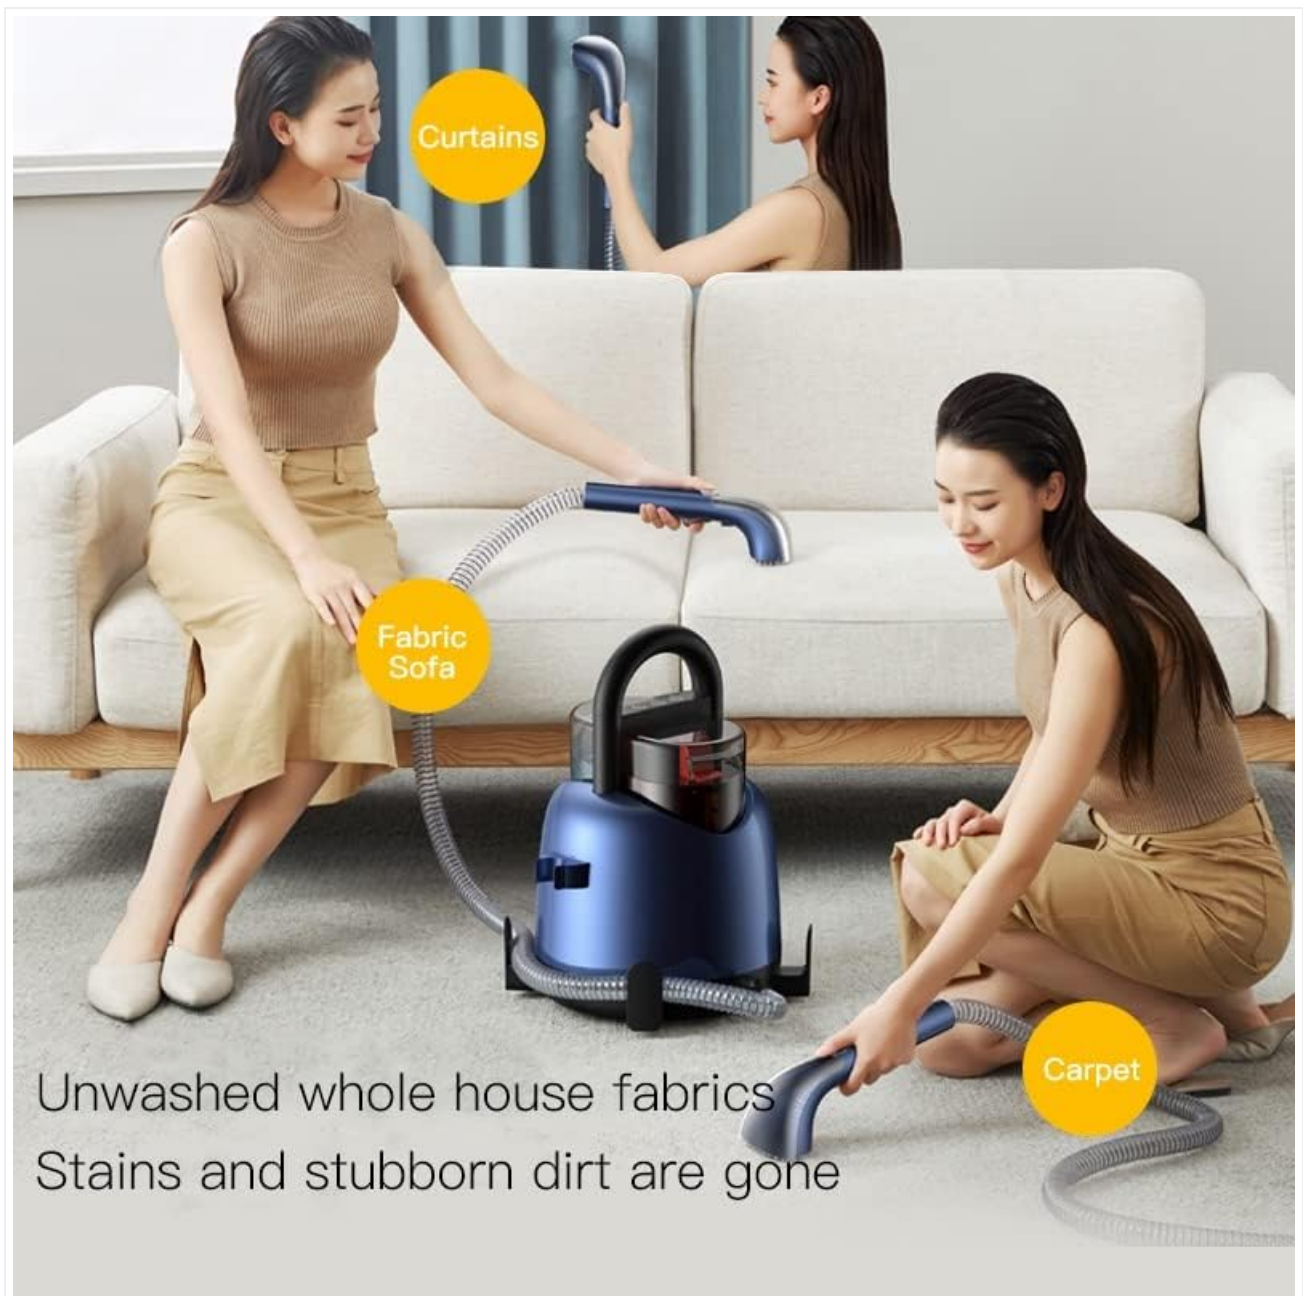


Figure 3: Illustration of the separate 1.6L clean water tank (for cleaning solution) and 1.4L dirty water tank, designed for easy separation of water and dirt.

4. **Position Dirty Water Tank:** Ensure the dirty water tank (1.4L capacity) is correctly seated in its compartment. This tank collects the extracted dirty water.
5. **Connect to Power:** Plug the power cord into a suitable electrical outlet (220 Volts).

OPERATING INSTRUCTIONS

The Deerma BY200 is designed for effective cleaning of fabric surfaces. Follow these steps for optimal results.

1. **Pre-test:** Before cleaning, always test the cleaning solution on an inconspicuous area of the fabric to ensure colorfastness and prevent damage.
2. **Power On:** Turn on the appliance using the power button.
3. **Hot Rinse Spray:** The BY200 features a 50°C hot rinse spray function. This hot water helps to accelerate stain dissolution and removal. Activate the spray function by pressing the trigger on the cleaning head.



Figure 4: The Deerma BY200 in action, showing the 50°C hot rinse spray being applied to a sofa for accelerated stain dissolution and removal.

Self-developed high-temperature hot rinsing
Dissolves stubborn stains
Residue-free stain removal

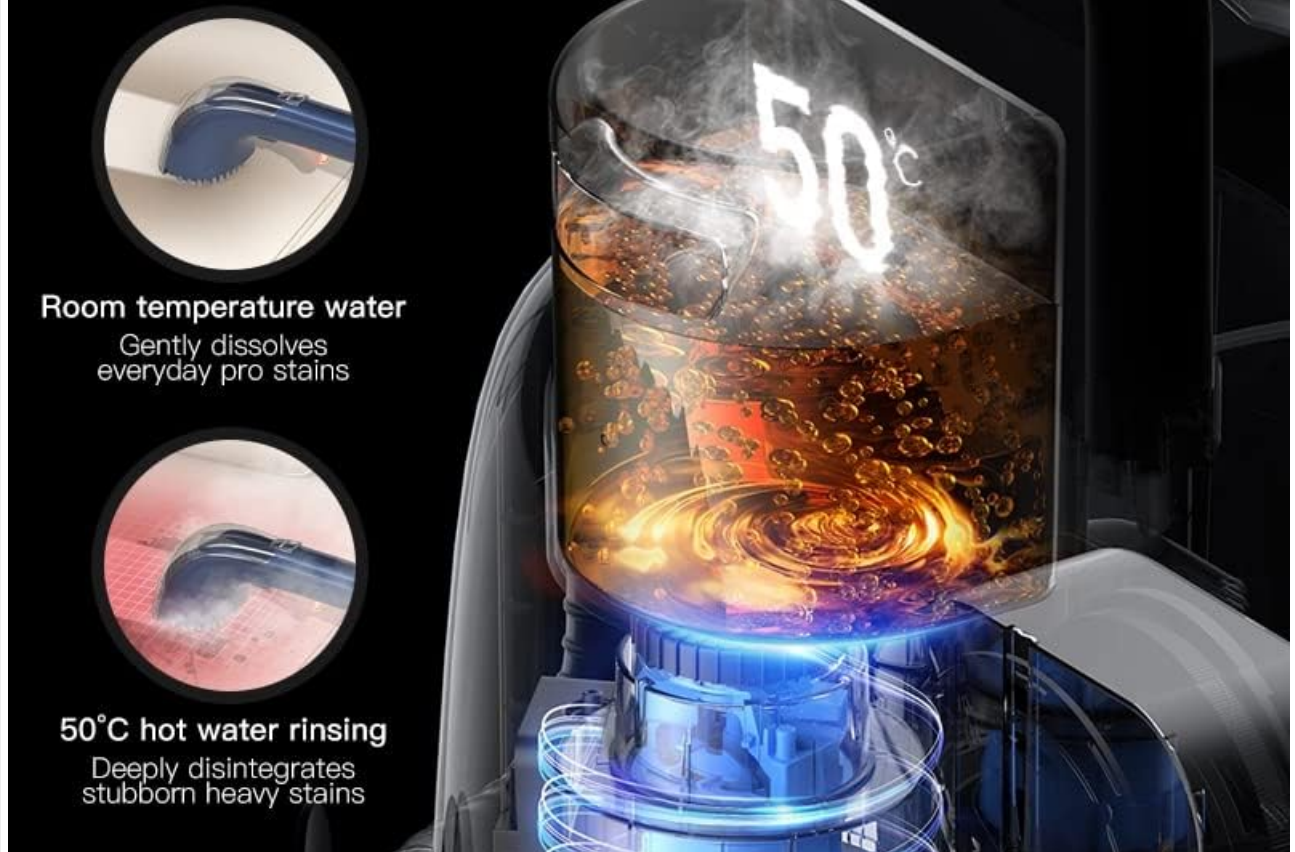


Figure 5: Detailed view of the self-developed high-temperature hot rinsing feature, indicating 50°C, which dissolves stubborn stains for residue-free removal. It also shows the option for room temperature water for everyday stains.

4. **Brush and Scrub:** Use the integrated brush on the cleaning head to gently scrub the stained area while spraying. This two-in-one booster brush helps to dislodge dirt and stains.
5. **Hurricane Suction:** After spraying and scrubbing, release the spray trigger and use the powerful hurricane suction to extract the dirty water and moisture from the fabric. Move the cleaning head slowly over the treated area to ensure thorough drying. This feature helps to quickly dry the cleaned surface.

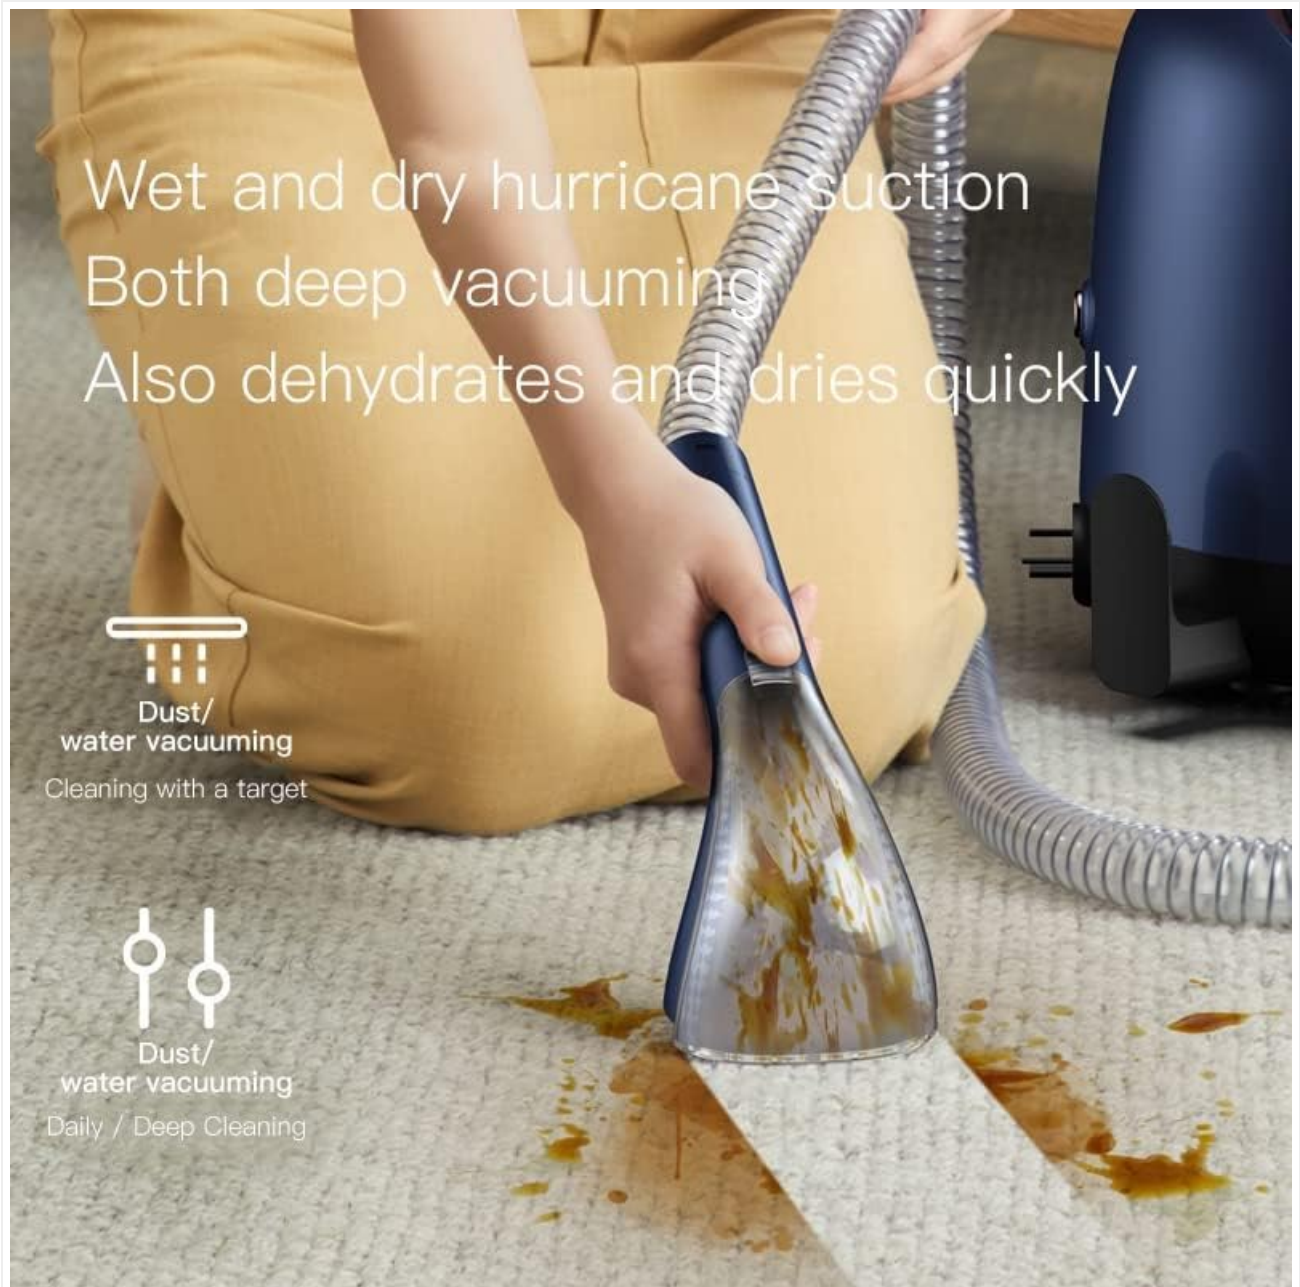


Figure 6: The Deerma BY200 performing wet and dry hurricane suction on a carpet, illustrating its capability for both deep vacuuming and quick dehydration/drying.

6. **Targeted Cleaning:** The appliance is suitable for various fabric surfaces including sofas, carpets, and curtains.



Figure 7: The Deerma BY200 effectively cleaning various fabric surfaces, including a fabric sofa, carpet, and curtains, demonstrating its versatility for whole house fabric cleaning.

7. **Five-Fold Cleansing Power:** The cleaning process involves spray (pressurized water column), brush (powerful brushing), wash (hot bleaching and stain dissolving), suck (hurricane vacuuming), and stem (dehydrated and quick-drying).



Figure 8: A cross-section diagram illustrating the five-fold cleansing power: spray (pressurized water), brush (powerful scrubbing), wash (hot bleaching and stain dissolving), suck (hurricane vacuuming), and stem (dehydrated and quick-drying).

8. **Empty Dirty Water Tank:** As the dirty water tank fills, empty it regularly to maintain suction performance.

9. **Power Off:** Once cleaning is complete, turn off the appliance and unplug it from the power outlet.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Deerma BY200.

1. **Empty and Clean Tanks:** After each use, empty both the clean and dirty water tanks. Rinse them thoroughly with clean water and allow them to air dry before reassembling.
2. **Clean Cleaning Head:** Remove any debris or hair from the brush and nozzle of the cleaning head. Rinse it under running water.
3. **Wipe Down Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
4. **Store Properly:** Store the appliance in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the power cord is neatly wrapped.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Appliance not plugged in; Power outlet faulty; Power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the power button.
No Spray	Clean water tank empty; Nozzle clogged; Spray trigger not pressed.	Refill the clean water tank. Clean the nozzle. Ensure the spray trigger is fully pressed.
Weak Suction	Dirty water tank full; Hose or cleaning head clogged; Tank not properly sealed.	Empty the dirty water tank. Clear any blockages in the hose or cleaning head. Ensure tanks are securely sealed.
Water Leaking	Tanks not properly installed; Tank seals damaged.	Reinstall tanks correctly, ensuring a tight seal. Inspect tank seals for damage; replace if necessary.

SPECIFICATIONS

- Brand:** Deerma
- Model Number:** BY200
- Color:** Blue
- Package Dimensions:** 53 x 36.6 x 35.8 cm
- Capacity (Clean Water Tank):** 1.6 Liters
- Capacity (Dirty Water Tank):** 1.4 Liters
- Power / Wattage:** 850 watts
- Voltage:** 220 Volts
- Noise Level:** 80 dB
- Special Features:** Corded, Bagless, 50°C Hot Rinse Spray, Two-in-one booster brush, Hurricane suction quick dry, IPX4 Waterproof
- Item Weight:** 5.6 Kilograms
- Filter Type:** Cartridge
- Surface Recommendation:** Carpet, Fabric Sofa, Curtains
- Power Source:** Corded Electric

WARRANTY AND SUPPORT

- For warranty information, service, or technical support, please refer to the warranty card included with your product or contact Deerma customer service. Keep your purchase receipt as proof of purchase.
- Customer Service:** Refer to the contact details provided in your product packaging or visit the official Deerma website for support.
- Extended Warranty Options:**
- 1-Year Extended Warranty by Salama Care (E-mail delivery)
 - 2-Year Extended Warranty by Salama Care (E-mail delivery)

Note: Extended warranty options may be subject to regional availability and terms.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BRVL9LFZ>

More documents and user manuals: <https://manuals.plus/>