

G11 Pro

G11 Pro Game Box Console User Manual

Model: G11 Pro

1. INTRODUCTION

The G11 Pro Game Box Console is an advanced entertainment system designed to provide a comprehensive gaming and multimedia experience. It features a dual operating system, allowing users to switch between a dedicated gaming environment (Emuelec) and a full Android 9.0 system for apps and streaming. This manual provides essential information on setting up, operating, and maintaining your G11 Pro console.



Image: The G11 Pro Game Box Console with its two wireless controllers, remote control, and power adapter.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- G11 Pro Game Box Console
- 2 x Wireless Controllers
- 1 x USB Receiver (for wireless controllers)
- 1 x Remote Control
- 1 x Power Adapter
- 1 x HD Cable (HDMI)
- 1 x TF Card (pre-installed with games)



2 GAMEGTV BOX



1 GIFT BOX



6 REMOTE CONTROL



3 RECEIVER



8 TF CARD



4 POWER ADAPTER



5 HD CABLE



7 WIRELESS CONTROLLER

Image: A visual representation of the package contents, including the gift box, console, USB receiver, power adapter, HD cable, remote control, wireless controllers, and TF card.

3. SETUP GUIDE

Follow these steps to set up your G11 Pro Game Box Console:

1. **Connect the Console:** Plug one end of the provided HD Cable into the HDMI port on the G11 Pro console and the other end into an available HDMI input on your television or monitor.
2. **Connect Power:** Connect the power adapter to the DC IN port on the console and then plug the adapter into a power outlet.
3. **Insert TF Card:** Ensure the TF card (pre-installed with games) is securely inserted into the TF card slot on the console.
4. **Connect Wireless Controllers:** Insert the USB receiver (dongle) into an available USB port on the G11 Pro console. The wireless controllers should automatically pair with the console. If not, ensure the controllers have batteries and are powered on.
5. **Power On:** The console should power on automatically once connected to power. If not, press the power button on the console (if available) or use the remote control.

6. **Select Input:** On your television, select the correct HDMI input source that the G11 Pro console is connected to.



Image: The G11 Pro console positioned next to its remote control, illustrating their compact design.

4. OPERATING INSTRUCTIONS

4.1 Dual System Operation

The G11 Pro operates on a dual system: Emuelec for gaming and Android 9.0 for other applications. You can switch between these systems from the main menu or by following specific prompts during startup.

4.2 Navigating the Interface

- Use the directional pad (D-pad) or joystick on the wireless controllers or the remote control to navigate menus.
- Press the 'A' button (or 'OK' on the remote) to select an option.
- Press the 'B' button (or 'Return' on the remote) to go back to the previous screen.

4.3 Playing Games

In the Emuelec system, you will find a vast library of pre-installed games categorized by simulator. Select a simulator, then choose your desired game to start playing.

DUAL JOYSTICK GAME CONTROLLER

THE GAME KEY SUPPORT CUSTOM
OPERATION IS MORE CONVENIENT



270 GAMES

CONFIGURING

GAMEPAD 1

HOLD ANY BUTTON TO SKIP

D-PAD UP	PRESS ANYTHING
D-PAD DOWN	-NOT DEFINED-
D-PAD LEFT	-NOT DEFINED-
D-PAD RIGHT	-NOT DEFINED-
START	-NOT DEFINED-
SELECT	-NOT DEFINED-
BUTTON A / EAST	-NOT DEFINED-
BUTTON B / SOUTH	-NOT DEFINED-
BUTTON X / NORTH	-NOT DEFINED-
BUTTON Y / WEST	-NOT DEFINED-

OK

Image: A screen displaying the configuration options for the dual joystick game controllers, showing button mapping.

4.4 Exiting Games and System Shutdown

To exit a game, refer to the in-game instructions or press a combination of buttons (e.g., SELECT + START simultaneously) on the controller to bring up the Emuelec menu, then select 'Quit' or 'Exit Game'.

To properly shut down the system, navigate to the main menu of the Emuelec or Android system and select the 'Shutdown' or 'Power Off' option. **Always use the proper shutdown procedure to prevent data corruption on the TF card.**

4.5 Android System Features

When in Android 9.0 mode, you can:

- Browse video websites (e.g., YouTube, Netflix).
- Download and install apps from the Android market.
- Connect a 2.4G wireless mouse and keyboard for easier navigation and input.

NOT ONLY CAN YOU PLAY GAMES

• • •

SEARCH DIRECTLY FOR WHAT YOU WANT TO WATCH ON TV



Image: A family watching a television screen displaying various Android applications, highlighting the console's multimedia capabilities.

5. KEY FEATURES

- **Dual System:** Seamlessly switch between Emuelec for gaming and Android 9.0 for smart TV functionalities.
- **High-Performance GPU:** Equipped with a G31 MP2 GPU processor for smooth performance, supporting large-scale 3D games and various simulators.
- **Extensive Game Library:** Comes with over 33,000 pre-installed games, supporting 40 major simulators including PS1, FC, GBA, and more.
- **4K HD Output:** Delivers high-definition video output for a clear visual experience.
- **Wireless Connectivity:** Built-in WiFi (IEEE 802.11) for internet access and 2.4G wireless support for controllers, mouse, and keyboard.
- **Expandable Storage:** Supports adding more games and content via the TF card slot.

High-performance G31 GPU

Play large-scale 3D games, with excellent performance, support for
God of War, support for Saturn simulator

A detailed diagram of the G31 GPU chip. The chip is a square component with a grid of pins on all four sides. It is highlighted with a glowing blue border. The background is a complex circuit board with glowing blue and yellow lines and nodes.

G31

Image: A detailed diagram highlighting the G31 GPU, emphasizing its high-performance capabilities for gaming.

G11^{PRO} GAME BOX



WiFi



Image: The G11 Pro Game Box console with prominent branding for 4K Ultra HD and WiFi features.

6. TROUBLESHOOTING

If you encounter issues with your G11 Pro console, please refer to the following common problems and solutions:

- **No Power/No Display:**
 - Ensure the power adapter is securely connected to the console and a working power outlet.
 - Verify the HDMI cable is properly connected to both the console and your TV, and that the correct HDMI input is selected on your TV.
- **Controllers Not Responding:**
 - Check if the USB receiver is firmly plugged into the console.
 - Ensure the wireless controllers have fresh batteries and are powered on.
 - Try re-pairing the controllers by pressing the sync button on the controller and the receiver (if available).
- **Games Lagging or Crashing:**
 - Some games, especially larger 3D titles, may experience performance variations. Ensure the console

has adequate ventilation.

- **Important:** Always exit games and shut down the system properly to prevent TF card corruption. Frequent improper shutdowns can lead to system instability.

- **TF Card Issues (Corruption/Unreadable):**

- The TF card is crucial for the system's operation and game storage. It is highly recommended to create a backup copy of the TF card's contents immediately after purchase. This can help restore the system if the original card becomes corrupted.

- If the TF card is corrupted, you may need to reformat it and reinstall the system and games (if you have a backup). Contact seller support for guidance if you do not have a backup.

- **Cannot Connect to WiFi:**

- Ensure your WiFi network is active and within range.

- Double-check the WiFi password.

- Restart the console and your router.

7. SPECIFICATIONS

Model	G11 Pro
CPU	G31 MP2 GPU processor
Memory	DDR3: 2GB
Flash Storage	eMMC: 16GB (Internal), 128GB (TF Card)
Operating System	Android 9.0, Emuelec System
WiFi	IEEE 802.11
Hardware Interface	HDMI, USB
Controller Type	Button Control (Wireless)
Power Source	Battery Powered (Controllers), Power Cord (Console)
Material	Plastic
Product Dimensions	7 x 6 x 7 inches
UPC	021201544285

8. MAINTENANCE

To ensure the longevity and optimal performance of your G11 Pro Game Box Console, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the console and controllers. Avoid using liquid cleaners or abrasive materials.
- **Ventilation:** Ensure the console is placed in a well-ventilated area to prevent overheating. Do not block the ventilation slots.
- **Storage:** When not in use for extended periods, store the console and accessories in a cool, dry place away from direct sunlight and extreme temperatures.
- **TF Card Care:** Handle the TF card with care. Avoid removing it while the console is powered on or

actively reading/writing data. Regularly back up the contents of your TF card to prevent data loss.

9. WARRANTY AND SUPPORT

Specific warranty information for the G11 Pro Game Box Console is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please contact the seller or retailer from whom you purchased the product. It is recommended to retain your proof of purchase for any warranty claims.