

[Manuals.plus](#) /

> [HERCHR](#) /

> HERCHR Microwave Corn Steamer with Lid Instruction Manual

HERCHR HERCHR6g87te29bh-11

HERCHR Microwave Corn Steamer with Lid Instruction Manual

[Introduction](#)

[Package Contents](#)
[Maintenance](#)

[Specifications](#)
[Troubleshooting](#)

[Setup](#)
[Operating Instructions](#)
[Safety Information](#)

[Care &](#)

1. INTRODUCTION

Thank you for choosing the HERCHR Microwave Corn Steamer with Lid. This product is designed to efficiently steam corn, vegetables, fish, and hot dogs in your microwave, providing a quick and healthy cooking solution. Constructed from food-grade PP material, it is durable and safe for use in the microwave, refrigerator, and freezer. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

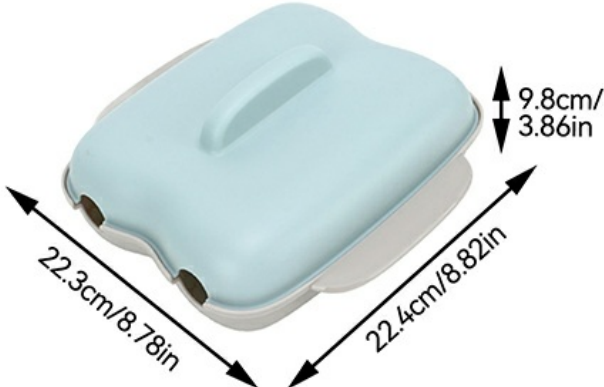 


Image: The HERCHR Microwave Corn Steamer, highlighting its high-quality polypropylene construction for durability and safe storage.

2. PACKAGE CONTENTS

Verify that all components are present in your package:

- 1 x Corn Cooker Case (Base)
- 1 x Lid
- 4 x Corn Skewers with Threads



Made of High-Quality PP, Sturdy and Durable

Humanized threaded needle, more secure.
Food grade PP, resistant to high temperatures.
Thickened and reinforced design, resistant to falling.

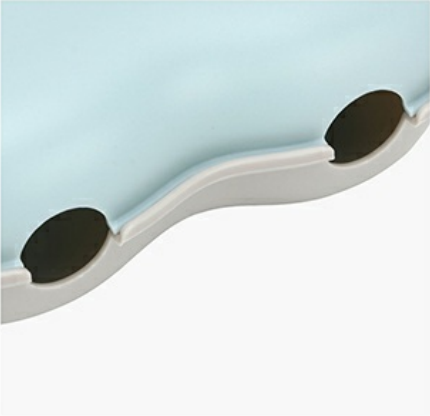 


Image: An exploded view of the steamer components, showing the lid, base, and four threaded skewers.

3. SPECIFICATIONS

Brand	HERCHR
Model Number	HERCHR6g87te29bh-11
Material	Food-Grade PP Plastic
Color	Blue
Dimensions (L x W x H)	Approx. 8.82 x 8.78 x 3.86 inches (22.4 x 22.3 x 9.8 cm)
Item Weight	Approx. 0.36 kg (12.70 ounces)
Care Instructions	Dishwasher Safe

Easy And Fast Cooking Of 2 Corn Cobs

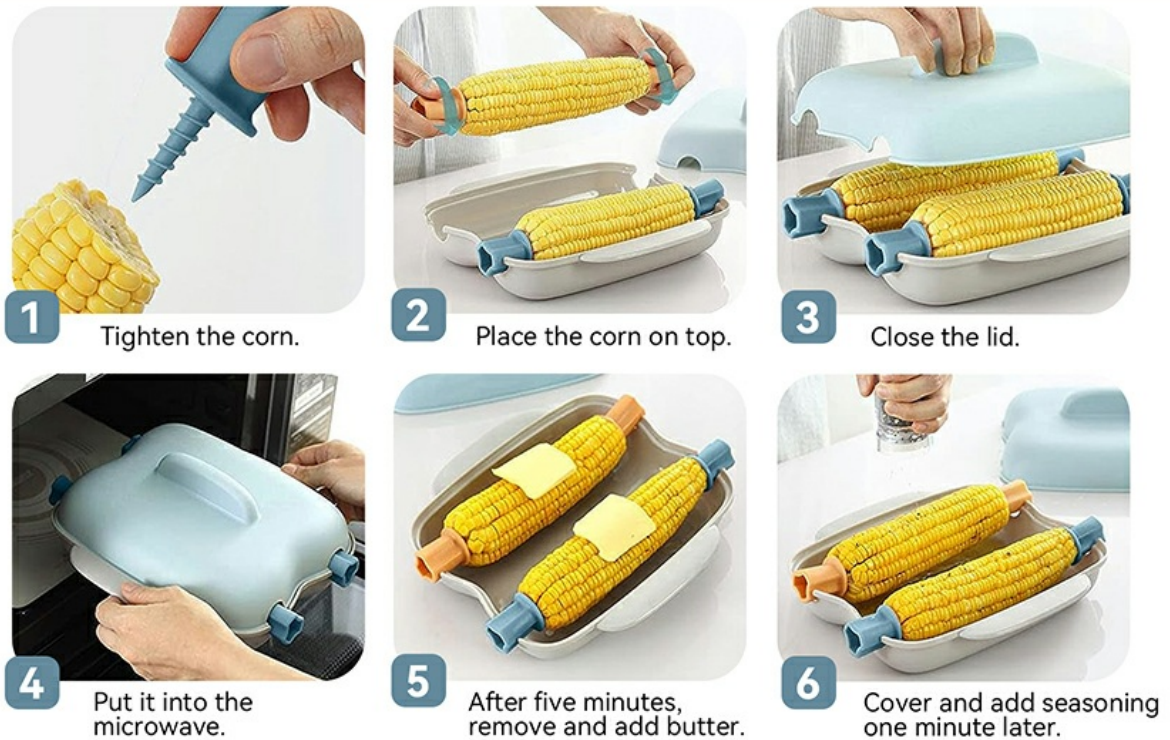 


Image: Diagram illustrating the product dimensions: length, width, and height.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the corn cooker case, lid, and skewers with warm soapy water. Rinse thoroughly and dry. The product is also dishwasher safe.

5. OPERATING INSTRUCTIONS

5.1. Steaming Corn

This steamer is designed to cook two large ears of corn simultaneously.

1. **Prepare Corn:** Remove husks and silk from fresh corn. For frozen corn, no thawing is required.
2. **Insert Skewers:** Firmly insert a threaded corn skewer into each end of the corn cob.
3. **Place in Steamer:** Place the skewered corn cobs into the corn cooker case. You may add a small amount of water (1-2 tablespoons) to the bottom of the case for additional steaming, though it is not strictly necessary as the corn's natural moisture will create steam.
4. **Add Seasoning (Optional):** Before cooking, you can add seasonings like butter, salt, or pepper directly to the corn.
5. **Cover:** Securely place the lid on the corn cooker case.
6. **Microwave:** Place the covered steamer in the center of your microwave oven.
7. **Cook Time:** Microwave for 3-5 minutes per ear on medium-high power (700-1000W). For two large ears, cook for approximately 5-7 minutes. Cooking times may vary based on microwave wattage and corn size.
8. **Rest & Serve:** Carefully remove the steamer from the microwave. Allow it to rest for 1 minute before opening the lid to release steam. Add additional butter or seasonings if desired, then serve.

2 Colors & Product Details

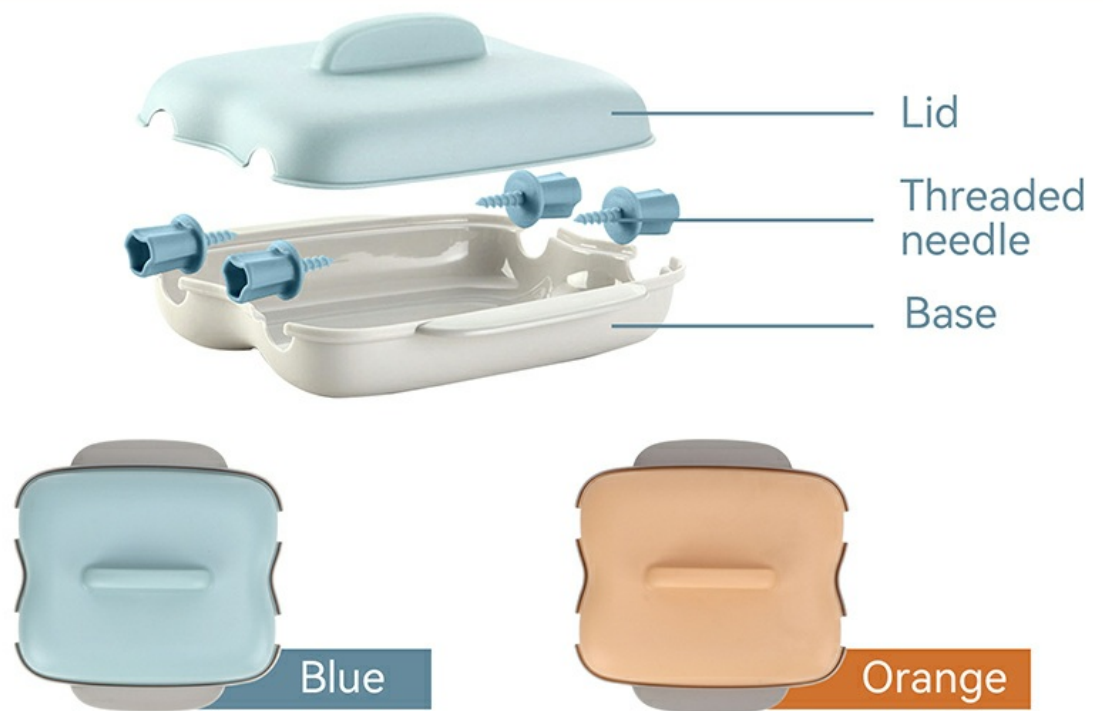 


Image: Visual guide demonstrating the steps for preparing and microwaving corn.

5.2. Steaming Other Foods

The HERCHR Microwave Corn Steamer is versatile and can be used for other foods:

- **Vegetables:** Place chopped vegetables (e.g., broccoli, carrots, green beans) in the steamer with 1-2 tablespoons of water. Cover and microwave for 3-6 minutes, depending on the vegetable and desired tenderness.
- **Fish:** Place a fish fillet in the steamer with a splash of water or lemon juice. Cover and microwave for 2-4 minutes, or until cooked through.
- **Hot Dogs/Sausages:** Place hot dogs or sausages in the steamer. Add a small amount of water (1 tablespoon) or no water for a drier heat. Cover and microwave for 1-3 minutes, or until heated through.



Taste is better than
cooked, and the
kernel is very tender

Image: The steamer shown with various foods it can prepare, including corn, hot dogs, and sausages.

5.3. Video Demonstration

Your browser does not support the video tag.

Video: A demonstration of the HERCHR Microwave Corn Steamer in use, showing how to place corn, add butter, and microwave for optimal results.

6. CARE AND MAINTENANCE

- **Cleaning:** The steamer is dishwasher safe. Alternatively, hand wash with warm water and mild dish soap. Rinse thoroughly and dry completely before storing.
- **Storage:** Store the steamer with its lid and skewers in a clean, dry place. The compact design allows for easy storage.
- **Durability:** Made from durable PP material, the steamer is designed for long-term use. Avoid abrasive cleaners or scouring pads that could scratch the surface.

7. TROUBLESHOOTING

- **Uneven Cooking:** Ensure the steamer is placed in the center of your microwave's turntable (if applicable) to allow for even heat distribution.
- **Food Not Cooked Through:** Cooking times are approximate and can vary based on microwave wattage, food density, and desired doneness. Increase cooking time in 30-second to 1-minute increments until desired results are achieved.
- **Lid Not Sealing Properly:** Ensure the lid is correctly aligned with the base and pressed down firmly. Check for any food debris that might be preventing a proper seal.



Image: Visual guide demonstrating the correct and incorrect placement of the steamer in a microwave for even heating.

8. SAFETY INFORMATION

- Always use caution when removing the steamer from the microwave, as it will be hot. Use oven mitts or heat-resistant gloves.
- Be careful when opening the lid after cooking, as hot steam will escape. Open the lid away from your face.
- This product is designed for microwave use only. Do not use in conventional ovens, on stovetops, or under a broiler.
- Keep out of reach of children when hot.
- Ensure the product is clean and free of damage before each use. Do not use if cracked or broken.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question