

[Manuals.plus](#) /

› [FELEMAN](#) /

› FELEMAN 2 in 1 Portable CD Player & Bluetooth Speaker User Manual

FELEMAN FELEMAN 2 in 1 Portable CD Player & Bluetooth Speaker

FELEMAN 2 in 1 Portable CD Player & Bluetooth Speaker User Manual

Model: FELEMAN 2 in 1 Portable CD Player & Bluetooth Speaker

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your FELEMAN 2 in 1 Portable CD Player & Bluetooth Speaker. This device combines a portable CD player with a powerful Bluetooth speaker, offering multiple audio playback options including CD, Bluetooth, FM radio, USB, and AUX-in. It features a built-in rechargeable battery for portability and comes with a remote control for convenient operation.

2. WHAT'S IN THE BOX



Image: The FELEMAN CD Player package contents, showing the main unit, remote control, USB to Type-C charging cable, AC adapter, and user manual.

- CD Player x1
- Remote Control x1
- AC Adapter x1
- USB to Type-C Charging Cable x1
- User Manual x1

3. PRODUCT OVERVIEW (CONTROLS AND PORTS)



Image: Detailed diagram illustrating the various buttons, ports, and features on the FELEMAN Portable CD Player, with each component clearly numbered for identification.

Top Panel Controls:

1. **Standby:** Power on/off button.
2. **Sleep Timer Setting:** Button to set the sleep timer.
3. **MODE:** Button to switch between different playback modes (CD, Bluetooth, FM, USB, AUX).
4. **Previous:** Skip to the previous track/station.
5. **Pause/Play:** Play or pause current audio.
6. **Stop:** Stop playback.
7. **Next:** Skip to the next track/station.
8. **VOL +:** Increase volume.
9. **VOL -:** Decrease volume.
10. **Repeat:** Cycle through repeat modes (e.g., repeat one, repeat all).
11. **CD Cover Open:** Button to open the CD compartment lid.
12. **CD Dust Lid:** Protective cover for the CD compartment.

Rear Panel Ports:

13. **DC Charging Port:** For connecting the AC adapter to charge the device.
14. **Power on/off:** Main power switch.
15. **Earphone/AUX Out Port:** 3.5mm jack for headphones or connecting to external speakers.
16. **AUX In Port:** 3.5mm jack for connecting external audio sources.
17. **USB Port:** For connecting a USB flash drive for audio playback.

4. KEY FEATURES

- **2-in-1 Functionality:** Operates as both a portable CD player and a Bluetooth speaker.
- **High-Fidelity Stereo Sound:** Equipped with dual 15W front-facing stereo speakers for enhanced audio quality.
- **Multiple Playback Modes:** Supports CD, Bluetooth, FM Radio, USB, and AUX-in.
- **Rechargeable Battery:** Built-in 2000mAh battery for portable use.
- **Wide CD Compatibility:** Compatible with CD, CDR, HDCD, MP3, and WMA formats.
- **Bluetooth Receiver:** Connects wirelessly to Bluetooth-enabled devices like smartphones, tablets, and computers.
(Note: This device acts as a Bluetooth receiver only and cannot connect to other Bluetooth speakers or headphones.)
- **FM Radio:** Integrated FM radio tuner (76MHz-108MHz).
- **Sleep Timer:** Allows setting an automatic shutdown time (30-120 minutes).
- **Anti-Skip Function:** Enhanced anti-skip protection for uninterrupted playback during movement.
- **Backlit LED Display:** Provides clear visibility of mode and playback information, even in low light.
- **Dust Cover:** Protects the CD disc and laser from dust and damage.
- **Remote Control:** For convenient operation from a distance.

5. SETUP

5.1 Charging the Device

Built-in Rechargeable Battery

Convenient to use indoor or outdoor



Wall Charger



Power Bank



Car Charger



Battery



(Adapter Included)

Image: The FELEMAN CD Player illustrating its 2000mAh built-in rechargeable battery and various charging methods including wall charger, power bank, and car charger.

1. Connect the provided USB to Type-C charging cable to the DC Charging Port (13) on the rear of the device.
2. Connect the other end of the USB cable to the AC adapter, a power bank, or a car charger.
3. Plug the AC adapter into a standard wall outlet.
4. The LED display will indicate charging status. A full charge provides extended portable use.

5.2 Powering On/Off

- To power on the device, slide the main Power on/off switch (14) on the rear to the 'ON' position. Then, press the Standby button (1) on the top panel.
- To power off, press the Standby button (1) again. For complete power disconnection, slide the main Power on/off switch (14) to the 'OFF' position.

6. OPERATING INSTRUCTIONS

6.1 CD Playback Mode



Image: A child studying with the FELEMAN CD Player, highlighting the A-B Repeat function for focused listening or learning.

1. Press the CD Cover Open button (11) to open the CD Dust Lid (12).
2. Carefully place a CD (compatible formats: CD, CDR, HDCD, MP3, WMA) onto the spindle, label side up.
3. Close the CD Dust Lid (12) until it clicks.
4. Press the MODE button (3) until 'CD' mode is displayed on the LED screen.
5. The player will automatically begin reading the disc and start playback.
6. Use the Pause/Play button (5) to pause or resume playback.
7. Use the Previous (4) and Next (7) buttons to skip tracks.
8. Press the Repeat button (10) to cycle through repeat options: Repeat One, Repeat All, Random Play, or Play in Order.
9. Use VOL - (9) and VOL + (8) to adjust the volume.

6.2 Bluetooth Mode (Receiver)



Image: The FELEMAN CD Player wirelessly connected to a smartphone via Bluetooth, demonstrating its function as a Bluetooth receiver.

1. Press the MODE button (3) until 'bt' (Bluetooth) mode is displayed on the LED screen. The device will enter pairing mode, indicated by a flashing Bluetooth icon.
2. On your external Bluetooth device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select 'FELEMAN CD Player' from the list of devices to pair.
4. Once paired, the Bluetooth icon on the LED screen will stop flashing, and you can play audio from your connected device through the FELEMAN speaker.
5. *Note: This device functions as a Bluetooth receiver only. It cannot transmit Bluetooth audio to other Bluetooth speakers or headphones.*

6.3 FM Radio Mode



Image: The FELEMAN CD Player's LED display showing various FM radio frequencies, indicating its FM radio functionality.

1. Press the MODE button (3) until 'FM' mode is displayed on the LED screen.
2. The device will automatically scan and store available FM stations (76MHz-108MHz).
3. Use the Previous (4) and Next (7) buttons to navigate through the stored stations.
4. Adjust volume using VOL - (9) and VOL + (8).

6.4 USB Playback Mode



Image: The FELEMAN CD Player with a USB flash drive connected to its USB port, demonstrating USB playback capability and the use of the remote control.

1. Insert a USB flash drive containing audio files (MP3, WMA) into the USB Port (17) on the rear of the device.
2. Press the MODE button (3) until 'USB' mode is displayed on the LED screen.
3. The device will automatically detect and begin playing audio files from the USB drive.

4. Use the playback controls (Pause/Play, Previous, Next, Repeat) as in CD mode.

6.5 AUX-in Mode



Image: The FELEMAN CD Player connected to a car's AUX input, demonstrating its use as a 'Travel Partner' for in-car audio playback.

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX In Port (16) on the rear of the device using a 3.5mm audio cable (not included).
2. Press the MODE button (3) until 'AUX' mode is displayed on the LED screen.
3. Play audio from your external device. The sound will be output through the FELEMAN speaker.
4. Adjust volume using VOL - (9) and VOL + (8) on the FELEMAN player or directly on your external device.

6.6 Remote Control Operation

The included remote control allows for convenient operation of all functions from a distance. Ensure the remote is aimed at the receiving window (LED screen position) of the player for optimal response. The remote control requires a cell battery (e.g., CR2025, included).

6.7 Sleep Timer Function

1. Press the Sleep Timer Setting button (2) on the top panel.
2. Repeatedly press the button to cycle through available shutdown times (e.g., 30, 60, 90, 120 minutes).
3. The device will automatically power off after the selected duration.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or abrasive materials.
- **Dust Cover:** Always keep the CD Dust Lid (12) closed when not inserting or removing a CD to protect the disc and laser from dust and debris.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

- **Device does not power on:** Ensure the main Power on/off switch (14) is in the 'ON' position and the device is charged or connected to power.
- **CD does not play or skips:** Ensure the CD is clean and free of scratches. Make sure the CD is inserted correctly, label side up. The anti-skip function is designed to minimize interruptions, but severe bumps may still affect playback.

- **No sound:** Check the volume level on both the device and any connected external audio source. Ensure headphones are properly connected to the Earphone/AUX Out Port (15) if used.
- **Bluetooth pairing issues:** Ensure the device is in Bluetooth mode ('bt' displayed) and your external device's Bluetooth is enabled and searching. Make sure no other device is currently paired.
- **Remote control not working:** Ensure the remote control's battery is functional and correctly inserted. Aim the remote directly at the LED display window. Battery power can affect remote range; nominal range is 3 meters, but actual range can be up to 7 meters with high battery power.
- **Poor FM reception:** Try repositioning the device to improve signal reception.

9. SPECIFICATIONS

Feature	Specification
Brand	FELEMAN
Model	2 in 1 Portable CD Player & Bluetooth Speaker
Connectivity Technology	Auxiliary, Bluetooth, USB
Color	Black
Speaker Type	Stereo (Dual 15W front-facing speakers)
Power Source	Battery Powered (Built-in 2000mAh Lithium Polymer)
Compatible CD Formats	CD, CDR, HDCD, MP3, WMA
FM Radio Frequency	76MHz-108MHz
Item Weight	1.76 pounds
Package Dimensions	11.14 x 7.28 x 3.03 inches

10. WARRANTY AND SUPPORT

FELEMAN provides professional customer service and technical support. If you encounter any issues or have questions regarding your product, please refer to the contact information provided with your purchase or visit the official FELEMAN website for assistance.

© 2023 FELEMAN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question