

[Manuals.plus](#) /

› [Zogola](#) /

› Zogola 3.6 Cubic Extra Large Safe Box User Manual

Zogola SAFE2

Zogola 3.6 Cubic Extra Large Safe Box User Manual

Model: SAFE2

Brand: Zogola

INTRODUCTION

Welcome to the user manual for your new Zogola 3.6 Cubic Extra Large Safe Box. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your safe. Please read these instructions carefully before using the product to ensure optimal performance and security.





A detailed view of the Zogola 3.6 Cubic Extra Large Safe Box, featuring its robust black exterior and dual compartments designed for secure storage of valuables.

IMPORTANT SAFETY INFORMATION

Adhering to these safety guidelines is crucial for your safety and the security of your valuables:

- Always keep the emergency keys in a secure location away from the safe. Do not store them inside the safe.
- Ensure the safe is installed on a stable, level surface or securely mounted to a wall/floor to prevent tipping.
- Do not expose the safe to extreme temperatures or direct sunlight for prolonged periods.
- Keep the keypad clean and dry. Avoid using abrasive cleaners.
- Regularly check battery levels and replace them as needed to ensure proper function of the electronic lock.
- In case of fire, the safe is designed to protect contents for a limited time. Follow local fire safety protocols.

PRODUCT FEATURES

Your Zogola safe box is equipped with several features designed for enhanced security and convenience:

- **Fireproof and Waterproof Construction:** Designed to protect contents from fire and water damage.
- **Heavy-Duty Alloy Steel:** Constructed from robust alloy steel for superior durability and resistance.
- **Double Door Design:** Features two separate compartments for organized storage.
- **Inner Cabinet Box:** Provides an additional secure compartment within the safe.
- **Anti-Theft Security:** Equipped with an alarm system and anti-drilling steel plate.
- **Dual Locking Mechanism:** Offers access via a programmable digital keypad and emergency keys.
- **Sensor Light:** Illuminates the interior when the door is opened for better visibility.
- **Removable Shelf:** Adjustable interior shelf for flexible storage options.

83LB LARGE CAPACITY HOME SAFE



This image illustrates the precise dimensions of the safe box, highlighting its generous capacity suitable for various items. The overall

dimensions are 14.17"D x 14.96"W x 29.53"H.

HEAVY DUTY FIREPROOF SAFE BOX



An exploded view demonstrating the advanced five-layer construction of the safe's door, engineered for superior fireproof and anti-drilling protection. These layers include a high temperature paint process, high temperature ionic coating, anti-drilling steel plate, five-layers alloy steel plate, and anti-scratch felt.

SETUP AND INSTALLATION

1. Unpacking

1. Carefully remove the safe from its packaging.
2. Inspect the safe for any signs of damage during transit. Contact customer support if damage is found.
3. Remove all packing materials and accessories from inside and around the safe.

2. Initial Access (Opening the Safe for the First Time)

1. Locate the emergency keys provided with your safe.
2. Insert the emergency key into the keyhole, usually hidden behind the keypad cover or a small panel.
3. Turn the key clockwise while simultaneously turning the handle to open the safe door.
4. Once open, remove any internal packaging or accessories.

3. Battery Installation


The electronic keypad requires batteries for operation.

1. Open the battery compartment, typically located on the inside of the safe door.
2. Insert the required number of AA batteries (not included) according to the polarity indicators (+/-).
3. Close the battery compartment securely.

4. Mounting (Floor/Wall Mount)

For enhanced security, it is highly recommended to bolt the safe to a floor or wall.

1. Choose a suitable location for the safe, ensuring it is level and stable.
2. Mark the drilling points through the pre-drilled holes inside the safe onto the floor or wall.
3. Drill holes using an appropriate drill bit for your surface type.
4. Align the safe with the drilled holes and insert the expansion bolts (provided) through the safe's holes into the floor/wall.
5. Tighten the bolts securely to anchor the safe in place.

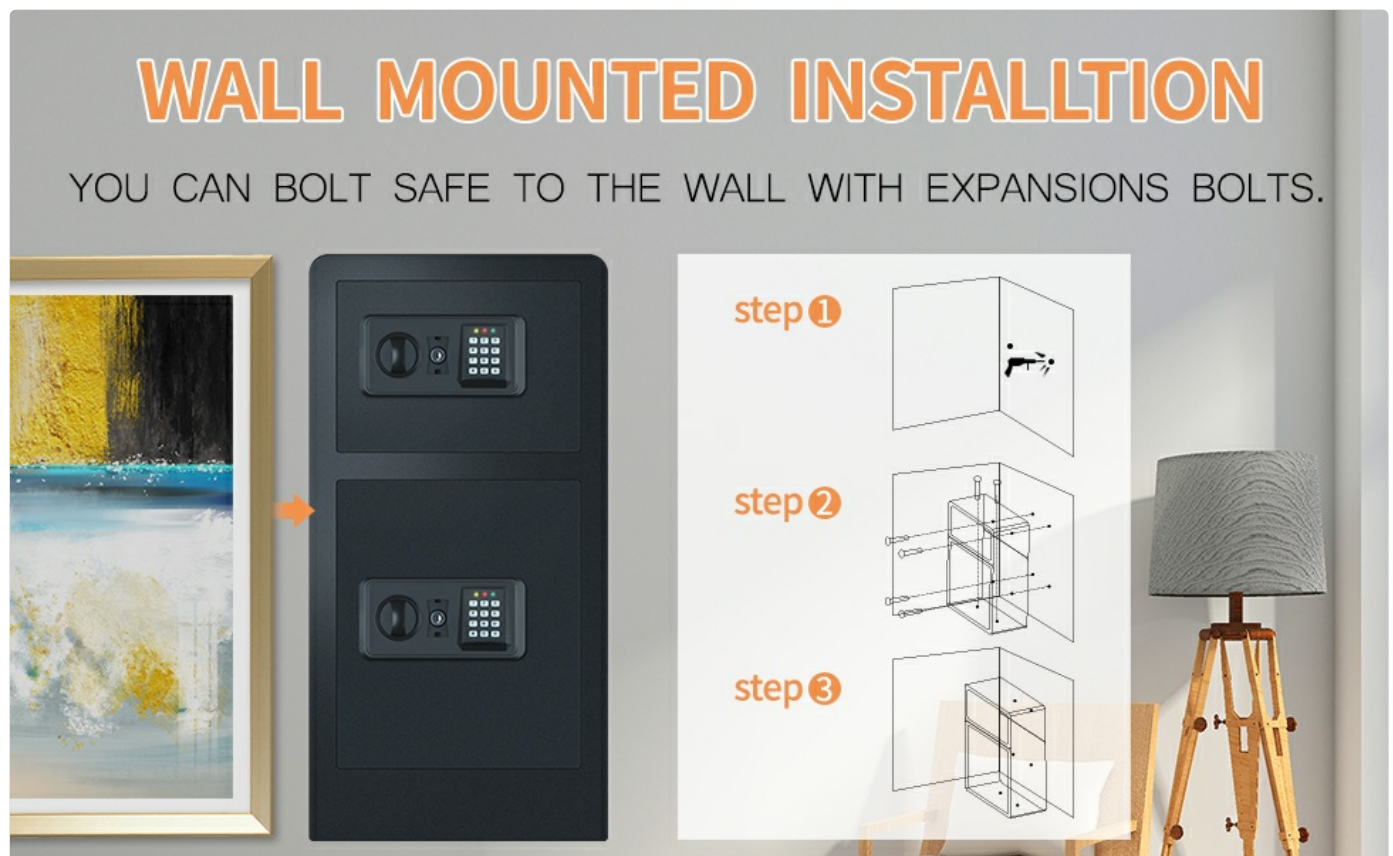

This diagram provides a step-by-step guide for securely mounting your safe to a wall using the provided expansion bolts, ensuring stability and added security.

OPERATING INSTRUCTIONS

1. Setting/Changing Passcode

1. With the safe door open, press the red reset button located on the inside of the door near the hinge. A beep will sound, and the indicator light will flash.
2. On the keypad, enter your desired 3-8 digit passcode.
3. Press the '#' or 'ENTER' button to confirm. The light will stop flashing, indicating the new passcode is set.
4. Test the new passcode with the door open before closing it.

2. Opening with Passcode

1. Enter your programmed passcode on the keypad.
2. Press the '#' or 'ENTER' button. A green light will illuminate, and you will hear a beep.
3. Within 5 seconds, turn the handle clockwise to open the door.

3. Opening with Emergency Key

In case of forgotten passcode or dead batteries, use the emergency key:

1. Locate the emergency keyhole (often concealed).
2. Insert the emergency key and turn it clockwise.
3. Simultaneously turn the handle to open the safe door.

PERFECT GIFT FOR YOUR FRIEND



An illustration detailing the dual-access mechanism of the safe, allowing entry via a programmable digital password or the physical emergency key. It also shows the turning mechanism for opening the door.

4. Using the Removable Shelf

The safe includes a removable shelf to customize your storage space.

- To install: Align the shelf with the support grooves inside the safe and slide it into place.
- To remove: Lift the shelf slightly and pull it out from the grooves.

Quick Access & Easy To Program



Peace of Mind



For Elderly Parents



For Living Alone

This image demonstrates the versatility of the safe's interior with its removable shelf. The shelf can be easily installed or removed to accommodate items of different sizes, optimizing storage space.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid harsh chemicals or abrasive materials that could damage the finish.
- **Battery Replacement:** Replace batteries annually or when the low battery indicator (if present) illuminates. Always use new, high-quality batteries of the specified type.
- **Key Care:** Keep emergency keys clean and dry. Do not force keys into the lock.
- **Door Mechanism:** Periodically check the door hinges and locking bolts for smooth operation. Do not lubricate the electronic lock mechanism.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe won't open with passcode.	Incorrect passcode entered; Batteries are low or dead; Keypad malfunction.	Re-enter passcode carefully; Replace batteries; Use emergency key to open.
Keypad is unresponsive.	Dead batteries; Loose battery connection.	Replace batteries; Ensure batteries are correctly inserted.
Door does not close properly.	Obstruction in the door frame; Locking bolts misaligned.	Check for any items blocking the door; Gently push the door to align.
Alarm sounds unexpectedly.	Safe was moved or tampered with; Low battery.	Check for signs of tampering; Replace batteries.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Zogola
Product Dimensions	14.17"D x 14.96"W x 29.53"H
Lock Type	Key, Touchpad Control
Color	Black
Capacity	3.6 Cubic Feet (approx. 83 Pounds)
Material	Alloy Steel
Special Features	Fireproof, Sensor Light, Anti-Theft Alarm
Mounting Type	Floor Mount, Wall Mount
Item Weight	83 Pounds
Water Resistance Level	Waterproof
Chamber Depth	14 Inches
Chamber Width	14.5 Inches
UPC	703079973236
Item Model Number	SAFE2

WARRANTY AND CUSTOMER SUPPORT

Your Zogola safe box comes with a standard manufacturer's warranty covering defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, troubleshooting, or warranty claims, please contact Zogola customer support through the retailer's platform or the contact information provided on the product packaging. Please have your model number (SAFE2) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question