

[Manuals.plus](#) /

› [OCOOPA](#) /

› OCOOPA D77 USB Desk Fan User Manual

OCOOPA D77

OCOOPA D77 USB Desk Fan User Manual

Model: D77

1. INTRODUCTION

Thank you for choosing the OCOOPA D77 USB Desk Fan. This portable and rechargeable fan is designed to provide efficient cooling with its powerful airflow and oscillating feature. Please read this manual carefully before use to ensure proper operation and maintenance.



Image 1.1: OCOOPA D77 USB Desk Fan. This image shows the fan from the front, highlighting its compact design and the OCOOPA logo on the grille.

2. SAFETY INSTRUCTIONS

To prevent injury or damage to the product, always follow these basic safety precautions:

- Do not insert fingers or any objects into the fan grille when the fan is operating.
- Keep the fan away from water or other liquids. Do not use in wet environments.
- Ensure the power source used for charging is compatible with the fan's specifications (5V).
- Do not disassemble, repair, or modify the fan yourself. Contact qualified service personnel if needed.
- Keep out of reach of children and pets.
- Avoid dropping or subjecting the fan to strong impacts.

3. PACKAGE CONTENTS

Upon opening the package, verify that all items are present:

- OCOOPA D77 USB Desk Fan
- USB Charging Cable (USB-A to USB-C)
- User Manual



EXQUISITE PACKAGE

Includes a delicate OCOOPA fan,
a charging cable and an user manual.



Image 3.1: Package Contents. This image displays the fan, its packaging box, a USB charging cable, and the user manual.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the fan. The fan is equipped with a 4000 mAh rechargeable battery.

1. Connect the provided USB charging cable to the fan's USB-C charging port.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The battery indicator lights will illuminate to show charging status. Charging typically takes approximately 5.5 hours for a full charge.

4.2 Placement

Place the fan on a stable, flat surface. The fan's compact and portable design allows for versatile placement on desks, bedside tables, or other suitable locations.



Image 4.1: Fan Design and Controls. This image illustrates the fan's dimensions, the Micro-USB and USB-C charging ports, the auto oscillation button, power switch, battery indicators, and speed indicators.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Speed Adjustment

The fan features 4 adjustable speed settings.

1. Press the **Power Switch** button once to turn on the fan at speed 1 (Natural Breeze).
2. Press the **Power Switch** button repeatedly to cycle through speed 2 (Gentle Breeze), speed 3 (Fresh Wind), and speed 4 (Strong Wind).
3. Press the **Power Switch** button a fifth time to turn off the fan.



POWERFUL AIRFLOW

4 speed settings bring you softest and strongest wind.


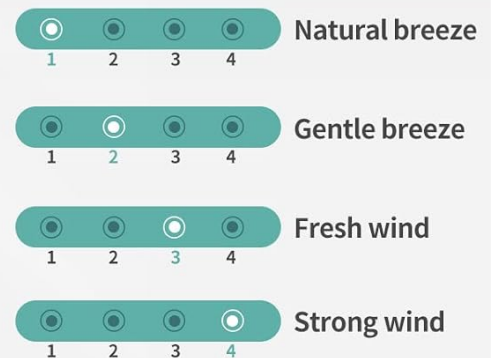


Image 5.1: Powerful Airflow with 4 Speed Settings. This graphic illustrates the four distinct speed settings: Natural Breeze, Gentle Breeze, Fresh Wind, and Strong Wind, with corresponding indicator lights.

5.2 Auto Oscillation

The fan offers an auto-oscillation feature for wider air distribution.

- Press the **Auto Oscillation Button** (marked with an 'S' or oscillation icon) once to activate the 120-degree oscillation function.
- Press the **Auto Oscillation Button** again to stop the oscillation.

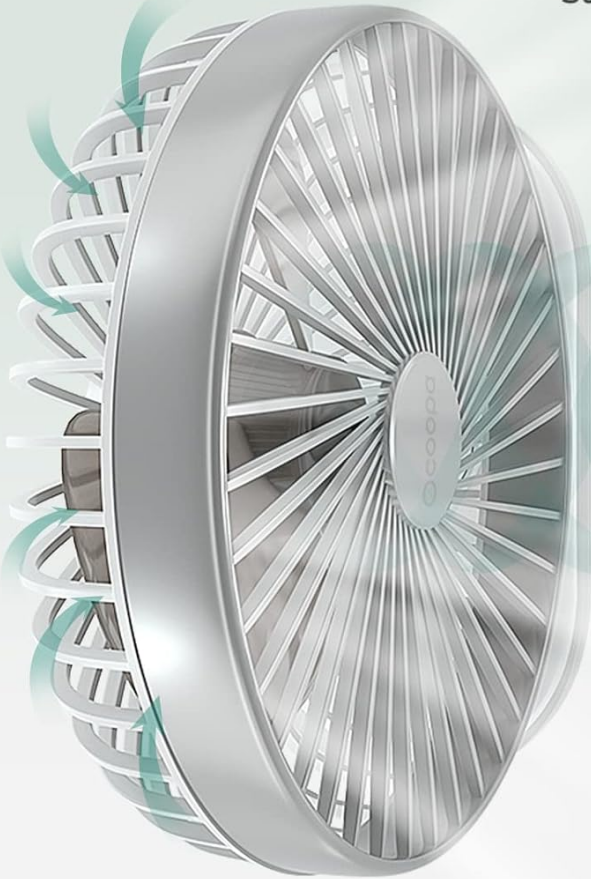

AUTO OSCILLATION

Creating a fresh air circulation around you ,
better cooling, ultimate comfort.



Image 5.2: Auto Oscillation Feature. This image shows the fan oscillating, creating a wide airflow pattern across a desk area.

5.3 Quiet Operation

The OCOOPA D77 fan is designed for quiet operation, especially at lower speeds, making it suitable for office or bedroom use.



WHISPER QUIET

Extra quiet low speed setting.



Image 5.3: Whisper Quiet Operation. This image highlights the fan's quiet performance, ideal for environments requiring minimal noise.

5.4 Battery Life

The fan's 4000 mAh battery provides extended use:

- Approximately 8 hours on Speed 1 with oscillation.
- Approximately 5 hours on Speed 3 with oscillation.

The fan can also be used while charging, ensuring continuous cooling.



Image 5.4: Coolness Anywhere with Battery Power. This image shows the fan operating wirelessly on a desk, emphasizing its portability and 4000mAh battery capacity.

6. MAINTENANCE

6.1 Cleaning the Fan

Regular cleaning helps maintain optimal performance and airflow.

1. Ensure the fan is turned off and unplugged from any power source before cleaning.
2. To remove the front grille, gently turn it counter-clockwise until it detaches.
3. Wipe the front grille and fan blades with a soft, damp cloth. Do not use abrasive cleaners or immerse the fan in water.
4. Once clean and dry, align the front grille and turn it clockwise to secure it back in place.

7. TROUBLESHOOTING

If you encounter issues with your OCOOPA D77 fan, refer to the following common problems and solutions:

- **Fan does not turn on:**
 - Ensure the fan is charged. Connect it to a power source using the USB cable.
 - Verify the power switch is pressed correctly.
- **Fan does not oscillate:**
 - Press the auto oscillation button to activate the feature.
- **Weak airflow:**
 - Increase the fan speed using the power switch.
 - Clean the fan blades and grille as described in the Maintenance section.
- **Unusual noise during operation:**
 - Ensure the fan is placed on a stable, flat surface.
 - Check for any obstructions around the fan blades or grille.
 - Clean the fan blades and grille.

If the problem persists, please contact OCOOPA customer support.

8. SPECIFICATIONS

Model Number	D77
Brand	OCOOPA
Dimensions (L x W x H)	9.7 x 17.3 x 22.7 cm (approximately 3.8 x 6.8 x 8.9 inches)
Weight	453.59 grams (approximately 1 pound)
Color	Silver
Material	Metal
Power Source	USB Powered
Special Feature	Oscillating
Number of Speeds	4
Noise Level	30 Decibels
Power	5 Watts
Voltage	5 Volts
Motor Type	Brushless Motor
Battery Capacity	4000 mAh

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The OCOOPA D77 USB Desk Fan comes with a 2-year warranty from the date of purchase. This warranty covers

manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

9.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your OCOOPA D77 USB Desk Fan, please contact OCOOPA customer support through the retailer where you purchased the product or visit the official OCOOPA website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question