

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [Allimity AKB72976003 Remote Control User Manual for LG Blu-ray Disc DVD Home Cinema Systems](#)

ALLIMITY AKB72976003

Allimity AKB72976003 Remote Control User Manual

For LG Blu-ray Disc DVD Home Cinema Systems

INTRODUCTION

This manual provides instructions for the Allimity AKB72976003 Remote Control. This remote is designed as a replacement or spare for various LG Blu-ray Disc DVD Home Cinema Systems. It offers direct functionality without the need for programming.

COMPATIBILITY

The AKB72976003 remote control is compatible with the following LG Blu-ray Disc DVD Home Cinema System models:

- LHB976
- HX551
- SB95PA-F
- HX906TA
- HX561
- HX721
- HX906SB
- HX906PA
- HX976TZW
- HX966TZ
- HX771
- SH96SB-S
- SH95TA-W
- SH96SB-C
- SH96SB-F
- SH96TA-S
- HB906TAW
- SH96TA-W

- HX751
- HB906SB
- SH96C-W96
- HB906TA
- SH96TZ-S
- SH96TZ-C
- SH96TZ-W
- HLX56S
- SB95PA-W
- SB95PA-C
- SB95PA-S
- HB905PA

This list is based on manufacturer specifications. Please verify your system's model number for compatibility.

SETUP

The Allimity AKB72976003 remote control requires no programming. Simply install the batteries to begin operation.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover open, illustrating the correct placement for two AAA batteries.

Note:

- Batteries are not included with the remote control.
- Always use new alkaline batteries for optimal performance.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period.

OPERATION

The AKB72976003 remote control functions identically to the original remote for compatible LG Blu-ray Disc DVD Home Cinema Systems. Point the remote directly at your device's infrared receiver.

Key Functions Overview





Image: Front view of the Allimity AKB72976003 remote control, displaying the layout of all buttons.

Below is a general guide to common button functions. Specific functionality may vary slightly depending on your LG Home Cinema System model.

Button	Function
POWER	Turns the system On or Off.
OPEN/CLOSE	Opens or closes the disc tray.
Number Buttons (0-9)	Direct selection of tracks, chapters, or inputting numbers.
RADIO/INPUT	Switches between radio and other input sources.
SPEAKER LEVEL	Adjusts individual speaker volume levels.
EFFECT SOUND	Cycles through sound effects or audio modes.
POP UP/TITLE	Displays the pop-up menu or title menu during disc playback.
PLAY/PAUSE (▶/)	Starts or pauses playback.
STOP (■)	Stops playback.
REWIND/FAST FORWARD (◀◀▶▶)	Rewinds or fast forwards playback.
SKIP (◀◀◀▶▶)	Skips to the previous or next track/chapter.
HOME	Accesses the main home menu of the system.
INFO/DISPLAY	Displays information about the current content or system status.
Navigation (Up, Down, Left, Right, ENTER)	Navigates through menus and confirms selections.
RETURN	Goes back to the previous menu or screen.
VOLUME (+/-)	Increases or decreases the master volume.
MUTE	Mutes or unmutes the audio.
REC	Initiates recording (if supported by the system).
DISC MENU	Accesses the disc menu during playback.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these simple maintenance guidelines:

- Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your Allimity AKB72976003 remote control, refer to the following common problems and solutions:

Problem	Possible Solution

Problem	Possible Solution
Remote control is not working.	<ul style="list-style-type: none">Check if the batteries are inserted correctly with the correct polarity (+/-).Replace the batteries with new AAA alkaline batteries.Ensure there are no obstructions between the remote control and the device's infrared sensor.Make sure you are within the effective range of the device.
Buttons are unresponsive or sticky.	<ul style="list-style-type: none">Clean the remote control surface, especially around the buttons, with a soft, dry cloth.If the issue persists after cleaning and battery replacement, the remote may be damaged.
Remote works intermittently.	<ul style="list-style-type: none">This often indicates low battery power. Replace the batteries.Ensure a clear line of sight to the device.

SPECIFICATIONS

- Model:** AKB72976003
- Brand:** ALLIMITY
- Connectivity Technology:** Infrared
- Power Source:** 2 x AAA Alkaline Batteries (not included)
- Product Dimensions:** 7 x 1.5 x 0.5 inches (approximately)
- Item Weight:** 2.65 ounces (approximately)
- Special Feature:** No Programming Required
- Compatible Devices:** LG Blu-ray Disc DVD Home Cinema Systems (specific models listed in Compatibility section)

WARRANTY AND SUPPORT

For information regarding warranty or customer support, please refer to the seller or the original product packaging. This remote control is a replacement part and typically falls under the seller's return policy.

For further assistance with your LG Home Cinema System, please consult your system's original user manual or LG's official support channels.