

Sigma KSF4335

SIGMA KSF4335 Electronic Safe

User Manual

INTRODUCTION

Thank you for choosing the SIGMA KSF4335 Electronic Safe. This manual provides essential information for the safe and efficient operation of your new electronic safe. Please read this manual thoroughly before installation and use, and keep it for future reference.

The SIGMA KSF4335 is designed to provide secure storage for your valuables such as cash, jewelry, and important documents. It features a robust steel construction, an electronic keypad for secure access, and anti-tampering mechanisms.

SAFETY INFORMATION

- Do not store the emergency override key inside the safe. Keep it in a secure, separate location.
- Keep the safe away from excessive moisture or direct sunlight.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- Do not attempt to force the safe open if the electronic lock fails. Use the emergency key.
- Replace batteries promptly when the low battery warning is indicated.

PACKAGE CONTENTS

Please check the contents of your package. If any items are missing or damaged, contact your retailer immediately.

- SIGMA KSF4335 Electronic Safe Unit
- Emergency Override Keys (2x)
- Mounting Bolts/Anchors (for wall/floor mounting)
- User Manual (this document)
- Batteries (if included, typically 4x AA)

SETUP

1. Unpacking

Carefully remove the safe from its packaging. Inspect the safe for any signs of damage during transit.

2. Battery Installation

1. Locate the battery compartment on the inside of the safe door.
2. Open the battery cover.
3. Insert 4x AA batteries (not always included) according to the polarity indicators (+/-).
4. Close the battery cover securely.

3. Mounting the Safe

The SIGMA KSF4335 safe is designed for secure mounting to a wall or floor using the pre-drilled holes. This significantly enhances security against theft.



Image: SIGMA KSF4335 Electronic Safe with dimensions labeled, showing its compact size suitable for various environments.

1. Choose a suitable location for mounting, such as a solid wall stud or a concrete floor.
2. Mark the drilling points through the pre-drilled holes at the back or bottom of the safe.
3. Drill pilot holes using an appropriate drill bit for your wall/floor material.
4. Align the safe with the drilled holes and secure it using the provided mounting bolts/anchors. Ensure it is firmly attached.

4. Initial Code Setup

Upon first use, you will need to set your personal access code. The safe typically comes with a factory default code (e.g., "159") or requires immediate programming.

1. With the safe door open, locate the red or green reset button on the inside of the door, near the hinge.
2. Press the reset button. You will hear a beep, and the indicator light on the keypad will flash.
3. Within 5 seconds, enter your desired 3-8 digit code on the keypad.
4. Confirm the code by pressing the "E" or "#" button. You will hear a confirmation beep.
5. Test the new code with the door open before closing it.

1. Opening the Safe



Image: The SIGMA KSF4335 Electronic Safe in its closed state, featuring the electronic keypad and manual override dial.

1. Enter your personal 3-8 digit code on the keypad.
2. Press the "E" or "#" button to confirm.
3. If the code is correct, the green light will illuminate, and you will hear a beep.
4. Within 5 seconds, turn the handle clockwise (or counter-clockwise, depending on model) to open the door.

2. Closing and Locking the Safe



Image: The SIGMA KSF4335 Electronic Safe with its door open, revealing the spacious interior and the robust locking bolts.

Simply close the door and turn the handle counter-clockwise (or clockwise) until the bolts engage. The safe will automatically lock.

3. Changing the User Code

1. Open the safe door using your current code.
2. Press the red or green reset button on the inside of the door.
3. Enter your new 3-8 digit code.
4. Press the "E" or "#" button to confirm.
5. Test the new code with the door open before closing it.

4. Emergency Override Key

In case of battery failure, forgotten code, or electronic malfunction, the safe can be opened using the emergency override key.

1. Locate the keyhole, usually hidden behind a small cover on the keypad panel.
2. Insert the emergency key and turn it.
3. While holding the key turned, rotate the handle to open the safe.

5. Low Battery Warning

When the batteries are low, the indicator light may flash red or the safe may emit a series of beeps after entering the code. Replace the batteries immediately to ensure continued operation.

6. Anti-Tampering Protection

The safe is equipped with an anti-tampering system. If an incorrect code is entered multiple times consecutively (e.g., 3-5 times), the safe will temporarily lock down for a period (e.g., 20 seconds to 5 minutes) to prevent further attempts. Wait for the lockout period to expire before trying again.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries annually or when the low battery warning appears. Always use new, high-quality AA alkaline batteries.
- **Lock Mechanism:** Periodically check the locking bolts and hinges for smooth operation. Do not lubricate the electronic keypad.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered; Low batteries; Electronic malfunction.	Re-enter code carefully. Replace batteries. Use emergency override key.
Keypad does not respond.	Dead batteries; Loose battery connection.	Replace batteries. Ensure batteries are correctly inserted.
Safe beeps continuously or flashes red.	Low battery warning; Tampering attempt.	Replace batteries. Wait for lockout period to expire if tampered.
Door does not close/lock properly.	Obstruction; Misalignment.	Check for items blocking the door. Ensure safe is level and mounted correctly.

SPECIFICATIONS

- **Model:** KSF4335
- **Brand:** Sigma
- **External Dimensions (W x D x H):** 74 cm x 43 cm x 20.32 cm
- **Door Thickness:** 4 mm
- **Body Thickness:** 2 mm
- **Weight:** 11 kg (24.25 lbs)
- **Material:** Alloy Steel
- **Color:** Grey
- **Lock Type:** Electronic Combination Lock, Emergency Key
- **Power:** 4x AA Batteries (not always included)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.

For technical assistance or inquiries, please visit the official Sigma website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question