

[manuals.plus](#) /› [WORKPRO](#) /› [WORKPRO W159032AE Cordless 2-in-1 Grass Shear and Shrubbery Trimmer User Manual](#)

WORKPRO W159032AE

WORKPRO W159032AE Cordless 2-in-1 Grass Shear and Shrubbery Trimmer User Manual

Model: W159032AE | Brand: WORKPRO

1. IMPORTANT SAFETY INFORMATION

Read all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Dual Lock Mechanism:** The handheld grass trimmer is designed with a dual lock for safety. To operate, first push the safety button located at the top of the handle, then press and hold the ON/OFF switch. You can release the safety lock after starting the machine.
- **Blade Lubrication:** A blue viscous liquid may be observed flowing out of the blade gear. This is lubricating oil, which lubricates the gear and prevents rust. This is normal operation.
- **Blade Care:** After using the blade, it must be cleaned promptly and kept dry during storage to ensure a longer lifespan.

2. PRODUCT OVERVIEW

The WORKPRO W159032AE is a versatile 2-in-1 cordless tool designed for grass shearing and shrub trimming. It features a lightweight design and a powerful motor for efficient garden maintenance.



Image: The WORKPRO Cordless 2-in-1 Grass Shear and Shrubbery Trimmer with its two interchangeable blades and USB-C charging cable.

Components:

- Main Trimmer Unit
- Grass Shear Blade (4.17" wide)
- Shrub Blade (5.9" long)
- USB-C Charging Cable



★ The Best Gift For the Best Father

Image: Detailed diagram showing the Type-C charging socket, Charger LED Indicator, Safety Lock-off Button, ON/OFF Switch, Shrub Blade, Blade Release Button, Grass Cutter Blade, and TPR Anti-Slip Handle.

3. SETUP

3.1 Charging the Battery

The trimmer is equipped with a 2000mAh high-capacity Lithium-Ion battery. Before first use, or if the battery is low, charge the unit fully.

1. Locate the Type-C charging socket on the trimmer unit.
2. Connect the provided USB-C charging cable to the trimmer.
3. Plug the other end of the USB-C cable into a compatible power source (5V/2A mobile phone charger, laptop/PC, car charger, or power bank USB port).
4. The Charger LED Indicator will show the charging status (e.g., red for charging, green for fully charged).
5. A full charge typically takes approximately 2-3 hours.

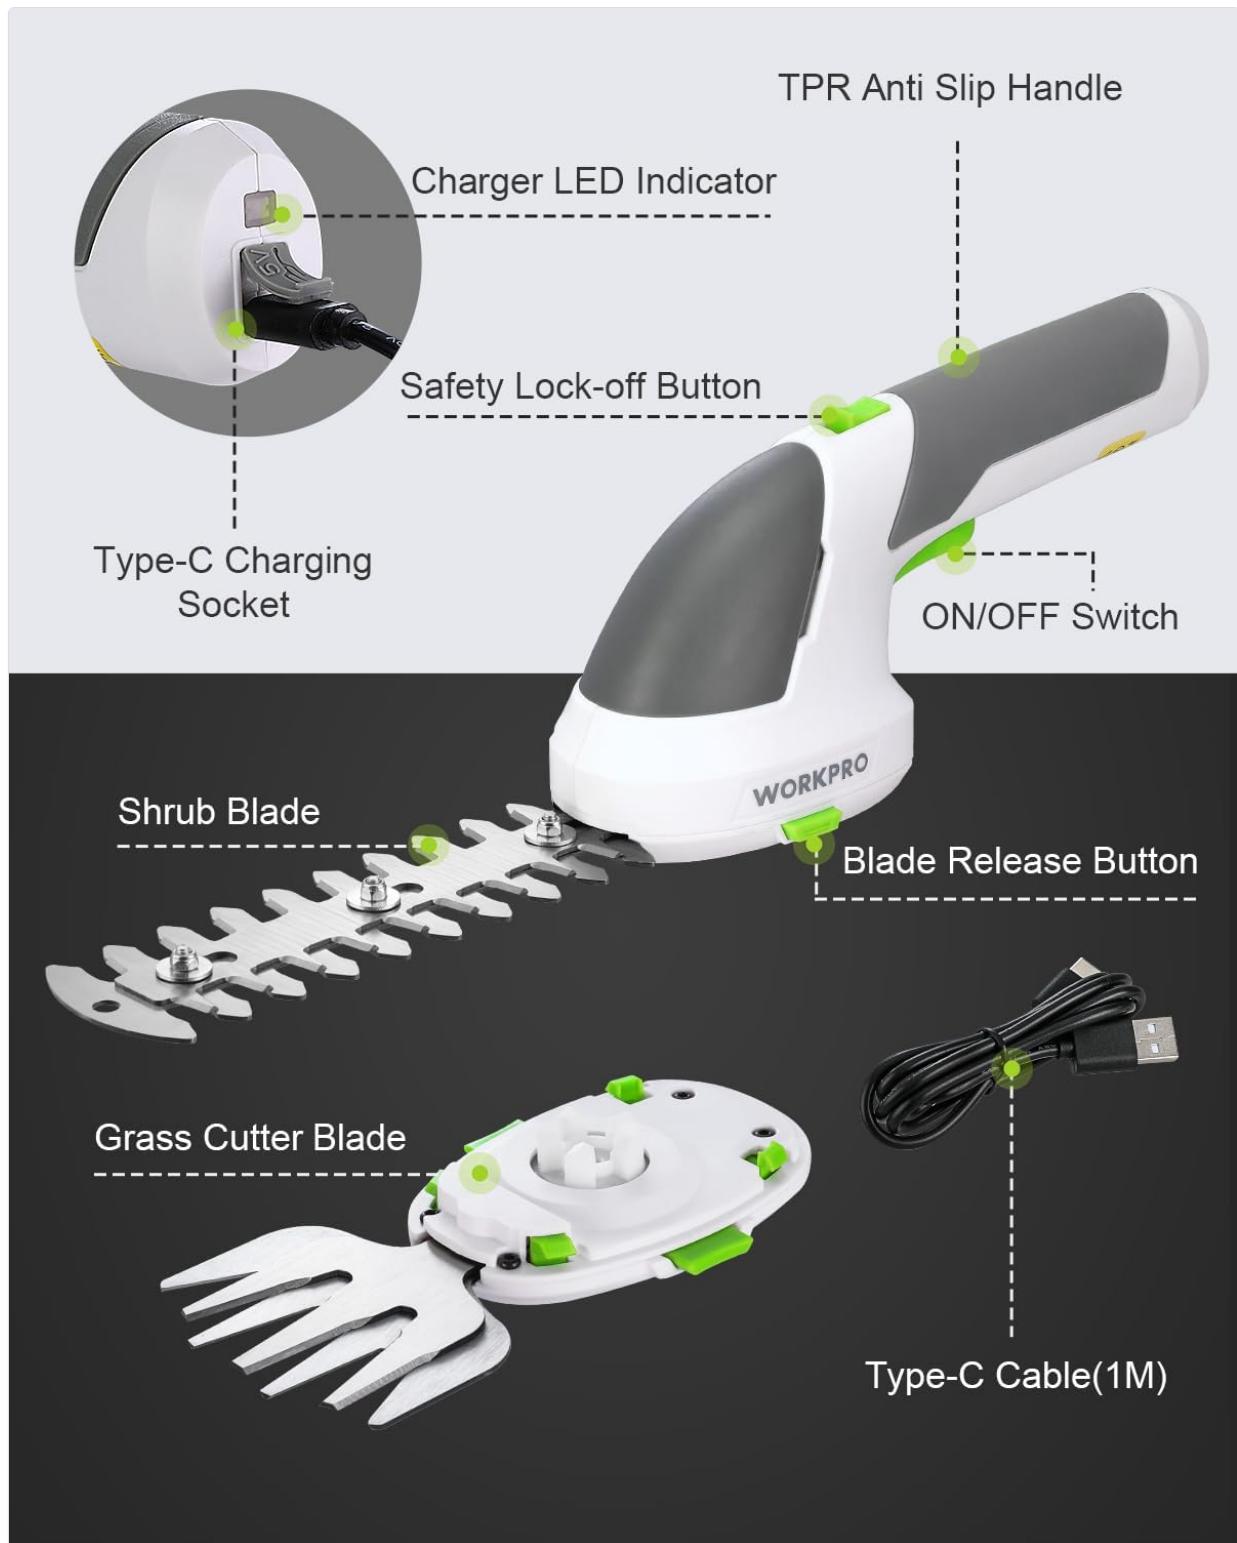


Image: The trimmer connected via USB-C cable to a wall adapter, showing the charging indicator lights (red for charging, green for fully charged).

3.2 Attaching/Changing Blades

The trimmer comes with two interchangeable blades: a grass shear blade and a shrub blade. Blade replacements are simple, fast, and do not require any tools.

1. Ensure the trimmer is turned off and disconnected from any power source.
2. To remove an installed blade, locate the two blade release buttons on either side of the blade housing.
3. Press both blade release buttons simultaneously and gently pull the blade assembly away from the main unit.
4. To attach a new blade, align the new blade assembly with the main unit.
5. Push the blade assembly firmly into place until it clicks, ensuring both blade release buttons snap back into their locked position.



Image: Close-up showing the blade release buttons for easy and safe blade replacement.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

The trimmer features an ergonomic dual-lock safety mechanism to prevent accidental startup.

1. To turn on the trimmer, first push the Safety Lock-off Button located at the top of the handle.
2. While holding the safety button, press and hold the ON/OFF Switch (trigger).
3. You may release the Safety Lock-off Button once the trimmer is running, continuing to hold the ON/OFF Switch for operation.
4. To turn off the trimmer, release the ON/OFF Switch.



It is Easier to Operate with One Hand

ERGONOMIC SAFETY LOCK FOR EASY CONTROL AND HANDLING

Image: Illustration demonstrating the two-step process to activate the trimmer using the ergonomic safety lock and ON/OFF switch.

4.2 Using the Grass Shear Blade

The grass shear blade is ideal for precise trimming of lawn edges and small grass areas.

- Attach the grass shear blade (4.17" wide) as described in Section 3.2.
- Hold the trimmer comfortably with one hand. Its lightweight design (0.82 lbs) reduces fatigue.
- Activate the trimmer and guide the blade along the edges of your lawn or around obstacles.



2-IN-1 CUTTING MODE



Image: The trimmer in grass shear mode, showing its maximum cutting width of 4.17 inches (106mm) for efficient trimming.

4.3 Using the Shrub Blade

The shrub blade is designed for shaping hedges, cleaning small shrubs, and trimming twigs.

- Attach the shrub blade (5.9" long) as described in Section 3.2.
- Activate the trimmer and carefully guide the blade to shape your shrubs or trim hedges.
- The hedge trim blades are suitable for branches with a thickness of less than 7.95 mm (0.31 inches).

UPGRADED POWER MOTOR

Upgraded High Speed
1100rpm Motor
More Efficient

LONG-LASTING BATTERY

2000mAh Lithium-ion Long Endurance



Image: The trimmer in hedge trimmer mode, illustrating its maximum cutting length of 5.90 inches (150mm) and maximum cutting thickness of 0.31 inches (7.95mm).

5. MAINTENANCE

5.1 Battery Maintenance

- To prolong the life of the cordless grass trimmer, recharge the battery every 3-6 months if it is not used often.

5.2 Blade Maintenance

- After each use, clean the blades thoroughly to remove any sap, debris, or plant residue.
- Ensure the blades are completely dry before storing to prevent rust.
- Store the blades with their protective covers on in a dry place.

6. TROUBLESHOOTING

If you encounter any issues with your WORKPRO trimmer, please refer to the following common troubleshooting steps:

- **Trimmer not starting:** Ensure the battery is fully charged and properly inserted. Verify that the dual-lock safety mechanism is engaged correctly (push safety button, then press trigger).
- **Reduced cutting performance:** Check if the blades are clean and free of debris. Ensure the blades are sharp; dull blades may require replacement. Verify that the material being cut is within the specified thickness limits for the shrub blade.
- **Battery not charging:** Confirm that the USB-C cable is securely connected to both the trimmer and the power source. Ensure the power source is active and providing 5V/2A output.

For further assistance, please contact WORKPRO customer support.

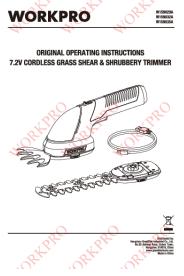
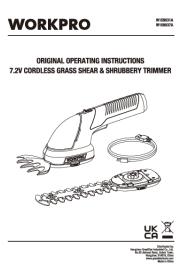
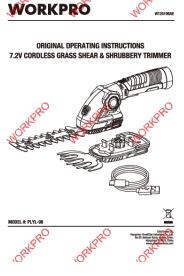
7. SPECIFICATIONS

Feature	Detail
Brand	WORKPRO
Power Source	Battery Powered
Color	White
Product Dimensions	10.24" L x 2.36" W x 4.13" H
Item Weight	2.16 Pounds
Blade Length (Shrub)	5.9 Inches
Cutting Width (Grass)	4.17 Inches
Material	Metal, Plastic
Blade Material	Metal
Voltage	7.2 Volts (DC)
Item Model Number	W159032AE
Batteries	1 Lithium Ion battery required (included)
UPC	820909687481

8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official WORKPRO website or contact their customer service department. Keep your purchase receipt for warranty claims.

Related Documents - W159032AE

 <p>WORKPRO ORIGINAL OPERATING INSTRUCTIONS CORDLESS GRASS SHEAR & SHRUBBERY TRIMMER</p>	<p><u>WORKPRO Cordless Grass Shear & Shrubbery Trimmer: Operating Instructions and Safety Guide</u> Detailed operating instructions, safety warnings, technical specifications, and maintenance guidelines for the WORKPRO Cordless Grass Shear & Shrubbery Trimmer (Models W159020A, W159023A, W159026A). Learn how to safely use, charge, and maintain your garden tool.</p>
 <p>WORKPRO ORIGINAL OPERATING INSTRUCTIONS 7.2V CORDLESS GRASS SHEAR & SHRUBBERY TRIMMER</p>	<p><u>WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer Operating Instructions</u> Original operating instructions for the WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer, covering safety precautions, charging, operation, cleaning, maintenance, and disposal.</p>
 <p>WORKPRO ORIGINAL OPERATING INSTRUCTIONS 7.2V CORDLESS GRASS SHEAR & SHRUBBERY TRIMMER</p>	<p><u>WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer User Manual</u> Comprehensive operating instructions and safety guide for the WORKPRO W159031A and W159037A 7.2V Cordless Grass Shear & Shrubbery Trimmer. Learn about proper use, maintenance, charging, and safety precautions.</p>
 <p>WORKPRO ORIGINAL OPERATING INSTRUCTIONS 7.2V CORDLESS GRASS SHEAR & SHRUBBERY TRIMMER</p>	<p><u>WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer PLYL-98 User Manual</u> Official operating instructions and safety guide for the WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer (Model PLYL-98). Learn about features, maintenance, and safe usage.</p>
 <p>WORKPRO ORIGINAL OPERATING INSTRUCTIONS 12V CORDLESS GRASS SHEAR & SHRUBBERY TRIMMER</p>	<p><u>WORKPRO 12V Cordless Grass Shear & Shrubbery Trimmer - Original Operating Instructions</u> Official operating instructions for the WORKPRO W159039A 12V Cordless Grass Shear & Shrubbery Trimmer, covering safety, usage, maintenance, and disposal. Includes technical specifications and charger indicator guide.</p>
 <p>WORKPRO ORIGINAL OPERATING INSTRUCTIONS 7.2V CORDLESS GRASS SHEAR & SHRUBBERY TRIMMER</p>	<p><u>WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer Operating Instructions Manual</u> Official operating instructions for the WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer (models W159029A, W159032A, W159035A). This guide covers safety, proper use, maintenance, and technical specifications for efficient garden maintenance.</p>