

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Baby Einstein](#) /

› [Baby Einstein Ocean Explorers Musical Compact Swing Instruction Manual](#)

### Baby Einstein 16663

# Baby Einstein Ocean Explorers Musical Compact Swing Instruction Manual

Model: 16663

Brand: Baby Einstein

## IMPORTANT SAFETY INFORMATION

**WARNING:** Failure to follow these warnings and instructions could result in serious injury or death.

- Never leave child unattended.
- Always use the restraint system.
- This product is not intended for sleep. If a child falls asleep in the swing, remove the child as soon as possible and place them on a firm, flat sleep surface.
- Do not use this product once your child can sit up unaided or weighs more than 20 lbs (9.1 kg).
- Never use this product on an elevated surface (e.g., a table).
- Always place the product on a flat, level floor.
- Do not move or lift the product with the child inside.
- Keep children away from the product during assembly and disassembly.
- Check the product for loose fasteners, damaged joints, or broken parts before each use. Do not use if any parts are missing or broken.
- Ensure all locking mechanisms are engaged before placing a child in the product.
- Keep the product away from open flames, heaters, or other strong heat sources.
- Only use replacement parts supplied or approved by the manufacturer.

## PACKAGE CONTENTS

Verify that all components are present before assembly:

- Swing Frame (Metal components)

- Seat Pad (Machine washable fabric)
- Headrest
- Toy Sleeve with 8 ribbons, Opus rattle, fish toy, and mirror
- Control Unit
- USB Cord (Wall adapter and one C battery for vibration unit not included)

## ASSEMBLY INSTRUCTIONS

Follow the steps below to assemble your Baby Einstein Ocean Explorers Musical Compact Swing. Refer to the included diagrams for visual guidance.

1. **Unpack Components:** Carefully remove all parts from the packaging and ensure no pieces are missing.
2. **Assemble the Frame:** Connect the metal frame components as indicated in the diagram. Ensure all connections click securely into place.
3. **Attach the Seat:** Secure the fabric seat pad to the assembled frame. Ensure all straps and buckles are correctly threaded and fastened.
4. **Install the Headrest:** Position the headrest within the seat pad for infant support.
5. **Connect the Control Unit:** Attach the control unit to the top of the swing frame.
6. **Insert Batteries (for vibration):** Open the battery compartment on the vibration unit (located under the seat) and insert one C battery (not included).
7. **Connect USB Power:** Plug the provided USB cord into the control unit and connect it to a compatible wall adapter (not included) or USB power source.
8. **Attach Toy Sleeve:** Secure the detachable toy sleeve to the designated attachment points on the swing frame.

## Swings in 3 directions



Image: Fully assembled Baby Einstein Ocean Explorers Musical Compact Swing, ready for use.

## OPERATING INSTRUCTIONS

### Control Panel Overview

The control unit located at the top of the swing allows you to manage all functions. It features a power button, swing speed selector, music and nature sound options, volume control, and a timer.



Image: Detailed view of the swing's control panel, showing power, speed, music, sound, volume, and timer buttons.

Your browser does not support the video tag.

Video: Demonstration of the Baby Einstein Musical Compact Swing's control panel, showing how to adjust settings for swing speed, music, and timer functions.

## Swing Functions

The swing offers 6 speeds and 3 swinging directions to soothe your baby. The seat also rotates 180 degrees to allow for different viewing angles.

- **Power On/Off:** Press the power button on the control unit to turn the swing on or off.
- **Adjust Swing Speed:** Use the speed selector buttons (1-6) to choose the desired swing intensity.
- **Change Swing Direction:** Manually rotate the seat to one of the three available swinging directions.
- **Recline Positions:** The seat features 2 recline positions for optimal comfort. Adjust by pressing the recline buttons or levers as indicated in your quick start guide.



Image: Visual representation of the swing moving in three different directions, illustrating its multi-directional capability.

## Music, Sounds, and Vibrations

Engage your baby with 8 classical melodies and 4 nature sounds. The swing also includes a vibration unit for calming comfort.

- **Select Melodies/Sounds:** Press the music note icon for classical melodies or the leaf icon for nature sounds. Cycle through options by pressing again.
- **Adjust Volume:** Use the volume control buttons (speaker icon) to increase or decrease the sound level.
- **Activate Vibrations:** Press the vibration button located on the underside of the seat to activate the calming vibrations. The vibration unit requires one C battery (not included).



Image: A hand pressing the vibration button located on the side of the swing's seat.

## Timer Settings

Set the swing to operate for a specific duration using the timer function.

- **Set Timer:** Press the timer button (clock icon) to select between 15, 20, or 30-minute intervals. The swing will automatically turn off after the selected time.

Your browser does not support the video tag.

Video: Overview of the Baby Einstein Musical Compact Swing, demonstrating its multi-directional swinging, vibration, and music features.

## TOY SLEEVE

The detachable toy sleeve provides engaging sensory elements for your baby, including ribbons, an Opus rattle, a fish toy, and a mirror. It can be removed for floor play.



**Removable toy sleeve  
for on-the-go play**

Image: The Baby Einstein swing with its detachable toy sleeve featuring various hanging toys.



## Machine-washable seat pad

Image: A baby sitting on the floor, engaging with the detached toy sleeve, highlighting its versatility for floor play.

### PORTABILITY AND STORAGE

The compact frame and integrated wheels allow for easy movement and storage of the swing.

- **Moving the Swing:** Utilize the wheels on the frame to easily move the swing between rooms.
- **Compact Storage:** The slim design allows the swing to fit into smaller spaces when not in use.



Image: A person demonstrating the compact design of the swing, easily moving it across a room.

## MAINTENANCE AND CARE

Proper maintenance ensures the longevity and safety of your swing.

- **Seat Pad & Headrest:** Remove from frame. Fasten buckles on restraint and seat pad. Machine wash cold water, gentle cycle. No bleach. Tumble dry, low heat.
- **Toy Bar & Toys:** Wipe clean with a damp cloth and mild soap. Air dry. Do not immerse in water.
- **Frame:** Wipe with a soft, clean cloth and mild soap.
- **Storage:** Always store in a dry area. Keep away from direct sun or heat sources.

## 8 Classical melodies & 4 nature sounds + volume control



Image: A washing machine, symbolizing the ease of cleaning the machine-washable seat pad.

### TROUBLESHOOTING

If you encounter issues with your swing, refer to the following common solutions:

Problem	Possible Solution
Swing does not turn on.	Ensure the USB cord is securely plugged into the control unit and a working power source. Check if the power outlet is functional.
Vibration unit not working.	Check if a fresh C battery is correctly installed in the vibration unit. Replace if necessary.
Swing motion is weak or inconsistent.	Ensure the swing is on a flat, level surface. Verify that the child's weight does not exceed the maximum limit (20 lbs / 9.1 kg). Check for any obstructions.
Music or sounds are not playing.	Check the volume settings on the control unit. Ensure the swing is powered on.

## SPECIFICATIONS

Feature	Detail
Model Number	16663
Product Dimensions	29.52"D x 34.25"W x 35.2"H (74.98 cm D x 87.0 cm W x 89.41 cm H)
Item Weight	15.16 pounds (6.89 kg)
Maximum Weight Capacity	20 lbs (9.1 kg)
Recommended Age	0-9 Months
Material Composition	65% Metal, 30% Plastic, 5% Fabric
Swing Speeds	6
Swing Directions	3
Recline Positions	2
Music/Sounds	8 Classical Melodies, 4 Nature Sounds
Timer Settings	15, 20, 30 minutes
Power Source	USB cord (wall adapter not included), 1 C battery for vibration (not included)



Image: Diagram showing the dimensions (height, width, depth) of the Baby Einstein Ocean Explorers Musical Compact Swing.

## **WARRANTY AND SUPPORT**

For warranty information or customer support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for proof of purchase.