

TCL 32S5400AF

TCL 32S5400AF Android TV User Manual

Model: 32S5400AF | Brand: TCL

[Overview](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty & Support](#)

1. PRODUCT OVERVIEW

The TCL 32S5400AF is a 32-inch Full HD Android TV designed to provide a comprehensive entertainment experience. It features a borderless design, HDR (High Dynamic Range) for enhanced picture quality, and Micro Dimming technology for improved contrast. Powered by Android TV, it offers access to a wide range of streaming applications and smart functionalities, including Google Assistant and Chromecast built-in.

Key Features:

- Full HD Resolution:** Enjoy sharp and detailed images with 1080p resolution.
- HDR & Micro Dimming:** Experience improved contrast, vibrant colors, and defined details.
- Dolby Audio:** Delivers dynamic, high-quality surround sound for an immersive audio experience.
- Android TV:** Access popular streaming apps like Netflix, Disney+, Amazon Prime Video, and more.
- Google Assistant & Chromecast:** Control your TV with voice commands and cast content from your devices.



Image 1.1: Front view of the TCL 32S5400AF Android TV, showcasing its borderless design and vibrant display capabilities.

2. INITIAL SETUP

2.1 Unpacking and Placement

Carefully remove the TV from its packaging. It is recommended to have two people for this process. Place the TV on a stable, flat surface or mount it on a wall using a compatible VESA mount (sold separately). Ensure adequate ventilation around the TV.

32"



Image 2.1: Dimensions of the TCL 32S5400AF TV (730mm width, 482mm height with stand, 182mm depth with stand) and included remote control.

2.2 Attaching the TV Stands

1. Place the TV face down on a soft, clean cloth to prevent screen damage.
2. Align the stands with the corresponding slots on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are firmly attached.

2.3 Connecting Peripherals

Connect your external devices such as set-top boxes, gaming consoles, or sound systems to the TV's ports. The TCL 32S5400AF includes multiple connectivity options.



Image 2.2: Detailed view of the TV's connectivity panel, showing 2 HDMI ports, 1 USB port, LAN, Optical Audio Out,

Cable/Antenna input, AV Input, Headphone jack, and CI Slot.

2.4 Power Connection and First Start-up

1. Plug the power cord into the TV and then into a wall outlet.
2. Press the power button on the TV or the remote control to turn on the TV.
3. Follow the on-screen instructions for the initial setup wizard, which will guide you through language selection, network connection (Wi-Fi or Ethernet), Google account sign-in, and channel scanning.

3. OPERATING YOUR TCL ANDROID TV

3.1 Remote Control Functions

The included remote control allows you to navigate the TV's interface, adjust settings, and access smart features. Familiarize yourself with buttons for power, volume, channel, input selection, home, back, and dedicated app buttons (if present).

3.2 Android TV Interface

The Android TV home screen provides quick access to your favorite apps, live TV, and recommended content. Use the directional buttons on your remote to navigate through menus and select items.



Image 3.1: The Android TV home screen, showing popular applications like YouTube, Disney+, Prime Video, and Netflix, along with content recommendations.

3.3 Google Assistant and Voice Control

Press the Google Assistant button on your remote and speak into the microphone to control your TV, search for content, get information, or manage smart home devices. Ensure your TV is connected to the internet for this feature to function.

3.4 Chromecast Built-in

Cast movies, shows, photos, and more from your phone or tablet directly to your TV. Ensure your mobile device and TV are connected to the same Wi-Fi network. Look for the Cast icon within compatible applications on your mobile device.

3.5 Picture and Sound Settings

Access the TV's settings menu to customize picture modes (e.g., Standard, Vivid, Movie), adjust brightness, contrast, and color. For audio, select sound modes (e.g., Standard, Music, Movie) and enable or disable Dolby Audio for an optimized listening experience.

4. MAINTENANCE AND CARE

4.1 Cleaning the Screen

Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. **Do not** use harsh chemicals, abrasive cleaners, or spray liquids directly onto the screen.

4.2 Cleaning the TV Body

Use a soft, dry cloth to wipe the TV's frame and back panel. Avoid blocking ventilation openings.

4.3 General Care

- Unplug the TV from the power outlet before cleaning or if it will be unused for an extended period.
- Keep the TV away from direct sunlight, heat sources, and excessive dust.
- Avoid placing heavy objects on top of the TV.

5. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common solutions before contacting support.

Problem	Possible Cause / Solution
No power / TV does not turn on	Ensure the power cord is securely plugged into both the TV and a working wall outlet. Try a different outlet. Check if the remote control batteries are depleted.
No picture, but sound is present	Check the input source. Ensure external devices are properly connected and powered on. The backlight might be off; check picture settings.
No sound, but picture is present	Check the volume level and mute status. Ensure external audio devices are correctly connected. Check audio output settings on the TV.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Smart TV features are slow or unresponsive	Check your internet connection speed. Close unused applications. Restart the TV by unplugging it from the power outlet for 30 seconds, then plugging it back in and powering it on.
Picture or sound issues (e.g., intermittent loss)	Perform a power cycle: unplug the TV for 30 seconds, then plug it back in. Ensure all cables are securely connected.

Problem	Possible Cause / Solution
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password. Try restarting your router and the TV.

6. TECHNICAL SPECIFICATIONS

Below are the key technical specifications for the TCL 32S5400AF Android TV:

Feature	Detail
Brand	TCL
Model Number	32S5400AF
Screen Size	32 Inches
Display Technology	LED
Resolution	1080p (Full HD)
Refresh Rate	60 Hz
Operating System	Android TV
Special Features	Flat Screen, HDR, Micro Dimming, Google Assistant, Chromecast built-in
Connectivity Technology	Bluetooth, Ethernet, HDMI, USB, Wi-Fi
HDMI Ports	2
USB Ports	1
Audio Output	Optical, Headphone
Aspect Ratio	16:9
Product Dimensions (with stand)	18.2D x 73W x 48.2H centimeters
Included Components	User Manual, Remote Control (with 2 AAA batteries)
Supported Languages	German, English, Spanish, French, Italian

7. WARRANTY AND SUPPORT

7.1 Product Warranty

This TCL television comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, service inquiries, or further information, please contact TCL customer support. Contact details can typically be found on the official TCL website for your region or in the warranty

documentation.

- **Online Support:** Visit the official TCL support website for FAQs, troubleshooting guides, and software updates.
- **Phone Support:** Refer to your warranty information for regional contact numbers.

© 2024 TCL. All rights reserved. Information in this manual is subject to change without notice.