

Anfilank JK-156A

Anfilank Electric Gooseneck Kettle User Manual

Model: JK-156A

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed during operation. Scalding may occur if the lid is open during use.
- This appliance is for household use only.
- Do not fill above the MAX line to avoid overflow.
- The kettle is equipped with boil-dry protection. If the kettle is accidentally switched on without water, it will automatically shut off. Allow it to cool down before refilling.

PRODUCT OVERVIEW

The Anfilank Electric Gooseneck Kettle is designed for efficient and precise water heating. It features a 1-liter capacity, 1500W fast boil, and a durable 100% stainless steel, BPA-free construction.



Anfilank Electric Gooseneck Kettle: A complete view of the kettle and its base.



Elegant Gooseneck Design: The kettle features a slender, curved spout for controlled pouring.



Ergonomic Heat-Safe Handle: Designed for comfortable and safe handling.



304 Stainless Steel Interior: Ensures pure water and durability.



Rapid Boil Zone: Internal markings indicate the minimum water level for quick boiling.



Indicator Light: Illuminates when the kettle is actively heating water.

SETUP

1. Unpack the kettle and all accessories. Remove any packaging materials.
2. Before first use, fill the kettle with water to the MAX line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. Place the power base on a dry, flat, stable surface.

4. Ensure the power cord is securely plugged into a grounded electrical outlet.

OPERATING INSTRUCTIONS

1. Filling the Kettle

- Remove the kettle from its power base.
- Open the lid and fill the kettle with fresh water. Do not fill below the '1 CUP' rapid boil zone marking or above the 'MAX' fill line to prevent boil-dry or overflow.
- Close the lid securely.

2. Boiling Water

- Place the filled kettle onto its power base.
- Press the ON/OFF switch located at the bottom of the handle. The indicator light will illuminate, signaling that the kettle is heating.
- The kettle will automatically shut off once the water reaches a rolling boil, and the indicator light will turn off.

3. Pouring

- Carefully lift the kettle from its base using the cool-touch handle.
- The precision gooseneck spout allows for a steady, controlled pour, ideal for pour-over coffee, tea, or instant meals.
- Always pour slowly and carefully to avoid splashing hot water.

Your browser does not support the video tag.

Video: Demonstrates the Anfilank Gooseneck Electric Kettle (1.0L, 1500W) in operation, highlighting its features and ease of use for boiling and pouring water.

CARE AND MAINTENANCE

1. Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- For the interior, fill the kettle with warm, soapy water, let it sit for a few minutes, then rinse thoroughly. Never immerse the kettle or its power base in water.
- The removable filter behind the spout can be cleaned by rinsing it under running water.

2. Descaling

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. Descaling regularly will maintain performance and extend the kettle's lifespan.

- Fill the kettle with 2 cups of white vinegar and 2 cups of water.
- Bring the mixture to a boil and let it stand for 30 minutes.
- Discard the mixture and rinse the kettle thoroughly several times with fresh water.
- For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Kettle does not heat.	Kettle not properly placed on base; power cord unplugged; no power at outlet.	Ensure kettle is correctly seated on base; check power plug connection; test outlet with another appliance.
Kettle shuts off too soon.	Boil-dry protection activated (low water level); mineral deposits.	Ensure water level is above '1 CUP' mark; allow kettle to cool before refilling; descale the kettle.
Water tastes metallic or plastic-like.	New appliance odor; insufficient initial cleaning.	Perform initial cleaning and boiling process 2-3 times as described in 'Setup'.
Water leaks from spout/lid.	Kettle overfilled; lid not properly closed.	Do not fill above 'MAX' line; ensure lid is securely closed.

SPECIFICATIONS

- **Model:** JK-156A
- **Capacity:** 1 Liter
- **Power:** 1500W
- **Voltage:** 120V
- **Material:** Food-grade 304 Stainless Steel (BPA-Free)
- **Special Features:** 1 Cup Rapid Boiling Zone, Automatic Shut-Off, Boil-Dry Protection, Indicator Light, Overheat Protection
- **Dimensions (L x W x H):** 10.31" x 5.95" x 8.27"
- **Item Weight:** 1.68 Pounds

WARRANTY AND SUPPORT

This Anfilank Electric Gooseneck Kettle comes with a 1-year free warranty from the date of purchase. For any quality problems or support inquiries, please contact Anfilank customer service. You can typically find contact information on the product packaging or the official Anfilank website. Please have your model number (JK-156A) and purchase details ready when contacting support.