

[Manuals.plus](#) /

> [ASHATA](#) /

> NH418UP Remote Control User Manual

ASHATA NH418UP

ASHATA NH418UP Remote Control User Manual

Model: NH418UP

INTRODUCTION

This manual provides comprehensive instructions for the ASHATA NH418UP Remote Control. Designed as a replacement for original Magnavox TV remotes, it offers full functionality and an ergonomic design for comfortable use. Please read this manual carefully to ensure proper setup and operation of your new remote control.





Figure 1: Front view of the ASHATA NH418UP Remote Control, showing all buttons and its compact design.

SETUP

Battery Installation

The NH418UP remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



来源: Veer图库 www.veer.com

Low power consumption

Easy and full access to all buttons
Battery inserted for
normal operation
(batteries not included)



Figure 2: Rear view of the remote control with the battery compartment open, showing where to insert AAA batteries.



Figure 3: Close-up of the battery compartment, illustrating the correct orientation for battery insertion.

OPERATING INSTRUCTIONS

The NH418UP remote control is designed to replicate the full functionality of your original Magnavox TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

Key Functions Overview

Button	Function
--------	----------

Button	Function
 Top Buttons	• Power (Red Button): Turns the TV on or off. • SOURCE: Selects input sources (HDMI, AV, etc.). • CC (Closed Caption): Toggles closed captions on/off. • SAP (Secondary Audio Program): Switches audio tracks. • SLEEP: Sets a sleep timer for the TV. • PICTURE SIZE: Adjusts the aspect ratio of the display. • Number Buttons (0-9): Direct channel selection. • PREV.CH: Returns to the previously viewed channel. • Media Control Buttons (LINK, Play/Pause, Stop, Rewind, Fast Forward, Skip): Controls media playback.
 Navigation & Menu Buttons	• VOL +/-: Adjusts the volume level. • Mute: Mutes or unmutes the TV sound. • CH +/-: Changes channels up or down. • BACK: Returns to the previous screen or menu. • MENU: Opens the TV's main menu. • INFO: Displays information about the current program or input. • Navigation Arrows (Up, Down, Left, Right): Navigates through menus and options. • OK: Confirms selections in menus. • Color Buttons (Red, Green, Yellow, Blue): Specific functions depending on the TV menu or application.



Navigation keys

With dedicated menu navigation keys
Various functions can be accessed directly
Easy and fast to use

Figure 4: The remote control in use, highlighting the ease of access to navigation keys for quick menu access.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Drops:** While durable, repeated drops can damage the internal circuitry. Handle the remote with care.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not working.	• Batteries: Check if batteries are inserted correctly (+/- orientation). Replace old or dead batteries with new ones. • Line of Sight: Ensure there are no obstructions between the remote and the TV's infrared sensor. • Distance: Make sure you are within the effective range of the remote control.
Some buttons are not responding.	• Dirty Contacts: Dust or debris might be affecting button contacts. Try gently pressing the button multiple times. If the issue persists, the remote may require professional cleaning or replacement. • Compatibility: While designed for Magnavox TVs, ensure your specific TV model is listed as compatible.
Remote works intermittently.	• Low Batteries: Batteries may be running low. Replace them. • Interference: Other electronic devices emitting infrared signals might cause interference.

SPECIFICATIONS

- **Model:** NH418UP
- **Material:** ABS
- **Battery Type:** 2 x AAA (Not Included)
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic Design
- **Item Weight:** 2.39 ounces (approx. 67.7 grams)
- **Package Dimensions:** 8.39 x 2.01 x 0.94 inches (approx. 21.3 x 5.1 x 2.4 cm)
- **Manufacturer:** ASHATA
- **Country of Origin:** China

COMPATIBLE MODELS

The ASHATA NH418UP Remote Control is compatible with a range of Magnavox TV models, including but not limited to:

- Magnavox 55ME345V F7
- Magnavox 43ME345V F7
- Magnavox 50MV336X F7B
- Magnavox 50MV376Y F7
- Magnavox 55MV346X
- Magnavox 55MV346X F7
- And other compatible Smart LCD TV models.

Compatible Models

Suitable for MAGNAVOX 55ME345V F7 43ME345V F7 50MV336X F7B
50MV376Y F7 55MV346X 55MV346X F7 43ME345V F7 etc.



Figure 5: Visual representation of the remote control's compatibility with various Magnavox TV models.

© 2023 ASHATA. All rights reserved.

For support, please refer to your product's purchase documentation or contact the seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BS44WNC6>

More documents and user manuals: <https://manuals.plus/>