



Manuals.plus /

› XSHOT /

› XSHOT Hyper Gel HPG-700 Blaster Instruction Manual

XSHOT HPG-700

XSHOT Hyper Gel HPG-700 Blaster Instruction Manual

Model: HPG-700

1. SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.

- Always wear the provided protective eyewear when operating the XSHOT Hyper Gel HPG-700 Blaster.
- Do not aim at eyes or face.
- Use only official XSHOT Hyper Gel Pellets. Other projectiles may damage the blaster or cause injury.
- Do not modify the blaster.
- Keep fingers and hair away from moving parts.
- Adult supervision is recommended for users under 14 years of age.



Image: A user demonstrating proper safety by wearing protective eyewear while holding the blaster.

2. PACKAGE CONTENTS

Verify that all items are present in your XSHOT Hyper Gel HPG-700 Blaster package:

- XSHOT Hyper Gel HPG-700 Blaster
- 700-Pellet Capacity Magazine
- Rechargeable Battery
- Battery Charging Cable
- Protective Eyewear
- 20,000 Dehydrated Hyper Gel Pellets



Image: The XSHOT Hyper Gel HPG-700 Blaster, protective eyewear, and a bottle of hydrated gel pellets, representing the main components included in the package.

3. SETUP GUIDE

3.1 Hydrating Hyper Gel Pellets

1. Empty the dehydrated Hyper Gel Pellets into a large container.
2. Add a generous amount of water to fully submerge the pellets.
3. Allow the pellets to soak for at least 3-4 hours, or preferably overnight, until they expand to their full size (approximately 7-8mm).
4. Drain any excess water before use.
5. Store hydrated pellets in a sealed container away from direct sunlight.



JUST ADD WATER



Image: Illustration showing dehydrated gel pellets in a packet and fully hydrated gel pellets in a bowl, emphasizing the "Just Add Water" process.

3.2 Charging and Installing the Battery

1. Locate the rechargeable battery and charging cable.
2. Connect the battery to the charging cable and plug it into a suitable USB power source.
3. Allow the battery to fully charge before first use. The charging indicator will change when complete.
4. Once charged, carefully insert the battery into the designated battery compartment on the blaster. Ensure it clicks securely into place.

3.3 Loading the Magazine

1. Ensure the magazine is detached from the blaster.
2. Open the loading port on the magazine.
3. Carefully pour the hydrated Hyper Gel Pellets into the magazine until it reaches its 700-pellet capacity.
4. Close the loading port securely.
5. Attach the loaded magazine to the blaster, ensuring it locks into position.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To power on the blaster, locate the power switch (often near the trigger guard) and slide it to the "ON" position.
- To power off, slide the switch to the "OFF" position.

4.2 Firing Modes

The HPG-700 Blaster features both semi-automatic and fully automatic firing modes.

- **Semi-Automatic Mode:** Each pull of the trigger fires a single gel pellet.
- **Fully Automatic Mode:** Holding down the trigger will continuously fire gel pellets until released or the magazine is empty.

Select your desired firing mode using the selector switch located on the side of the blaster.



Image: A detailed diagram of the HPG-700 Blaster, illustrating its key operational features including firing modes and battery location.

4.3 General Usage

- Always wear protective eyewear before operating.
- Ensure the area is clear of bystanders and obstacles.
- Aim responsibly and never at people's faces or animals.

5. MAINTENANCE

5.1 Cleaning

- After each use, ensure all remaining gel pellets are removed from the magazine and blaster.
- Wipe down the exterior of the blaster with a damp cloth. Do not submerge the blaster in water.
- Periodically check the barrel for any obstructions and clear them carefully.

5.2 Storage

- Store the blaster in a cool, dry place away from direct sunlight.
- Remove the battery from the blaster if storing for extended periods.
- Ensure hydrated gel pellets are stored in a sealed container to prevent drying out.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster not firing or weak shots	Low battery, improperly hydrated pellets, pellet jam, magazine not seated correctly.	Charge battery fully. Ensure pellets are fully hydrated. Check for and clear any pellet jams. Re-seat the magazine firmly.
Pellets not feeding	Magazine empty, pellets too small/large, magazine not seated correctly.	Refill magazine. Ensure pellets are correctly hydrated to the recommended size. Re-seat the magazine.
Blaster making unusual noise	Internal obstruction, mechanical issue.	Power off the blaster and check for visible obstructions. If the issue persists, contact customer support.

7. SPECIFICATIONS

Model: HPG-700

Firing Velocity: Up to 200 feet per second (FPS)

Firing Modes: Semi-Automatic, Fully Automatic

Magazine Capacity: 700 Hyper Gel Pellets

Pellet Type: XSHOT Hyper Gel Pellets (7-8mm hydrated)

Power Source: Rechargeable Battery

Recommended Age: 14 years and up

Product Dimensions: 23.62 x 2.76 x 13.78 inches

Item Weight: 4.33 pounds

Manufacturer: ZURU

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official ZURU XSHOT website or contact their customer service department. Keep your proof of purchase for warranty claims.

Online Support: www.zuru.com/xshot