

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [XSHOT](#) /

› [X-Shot Insanity Motorized Rage Fire Blaster User Manual](#)

## XSHOT 36654

# X-Shot Insanity Motorized Rage Fire Blaster User Manual

Brand: XSHOT | Model: 36654

## INTRODUCTION

---

This manual provides essential instructions for the safe and effective use of your X-Shot Insanity Motorized Rage Fire blaster. Please read all instructions carefully before assembly and operation. Retain this manual for future reference.



Figure 1: X-Shot Insanity Motorized Rage Fire Blaster with included accessories.

## SAFETY INFORMATION

---

**WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.**

- Do not aim at eyes or face.
- Use only official X-Shot darts. Other darts may not meet safety standards.
- Adult supervision is recommended during play.
- Keep small parts away from young children.

## PACKAGE CONTENTS

---

Verify that all items are present:

- X-Shot Insanity Motorized Rage Fire Blaster
- Tripod
- 40-dart auto-feeding belt
- 72 Darts (Air Pocket Technology)

- Scope
- Modular dart storage units (holds 46 additional darts)



Figure 2: Key features of the X-Shot Insanity Motorized Rage Fire Blaster.

## SETUP

---

### 1. Battery Installation

The blaster requires 6x AA batteries (not included). Use a screwdriver to open the battery compartment, insert the batteries according to polarity, and secure the cover.

### 2. Tripod Assembly

Attach the blaster to the tripod. The tripod allows for 360-degree rotation and vertical pivoting. Ensure the blaster is securely mounted before use. The blaster can also be detached from the tripod for handheld operation.



Figure 3: Blaster mounted on the adjustable tripod.

### 3. Dart Belt Assembly and Loading

- Connect the chain belts if they are separate.
- Load darts into the belt with the open side of the belt facing upwards.
- Feed the loaded belt into the blaster from left to right.
- Ensure the belt is properly seated and the small switch is pushed forward to lock it in place.

## OPERATING INSTRUCTIONS

---

### 1. Firing the Blaster

To fire the motorized blaster, push the trigger handle **forward and down fully**. This action activates the motor and initiates dart firing. Simply pushing the trigger forward without pushing down will only activate the motor without firing darts.



Figure 4: Proper grip for handheld firing.

## 2. Using the Tripod

The tripod allows for stable firing. Adjust the height and angle as needed. The blaster can rotate 360 degrees horizontally and pivot vertically for versatile targeting.

## 3. Dart Storage

The blaster includes modular dart storage units that can hold an additional 46 darts, ensuring you remain loaded during extended play. The scope can be attached for improved aiming.

## MAINTENANCE

---

- Keep the blaster clean and free of debris.
- Remove darts from the belt and blaster when not in use to prevent damage or deformation.
- Store the blaster and darts in a cool, dry place.
- **Important Note on Dart Belt Compatibility:** The dart belt for the X-Shot Insanity Motorized Rage Fire is specifically designed for this model. It is not compatible with older X-Shot Crusher dart belts due to differences in the feeding mechanism and dart visibility cutouts. Attempting to use incompatible belts may cause jamming or prevent firing.

## TROUBLESHOOTING

---

- **Blaster motor runs but no darts fire:** Ensure the trigger is pushed both **forward and down fully**. A partial press will only activate the motor.
- **Darts are not feeding or jamming:**
  - a. Verify that the dart belt is loaded with the open side facing upwards.
  - b. Check that the dart belt is properly inserted and the locking switch is engaged.
  - c. Ensure only official X-Shot darts are used. Damaged or incompatible darts can cause feeding issues.
- **Blaster not turning on:** Check battery installation and ensure fresh AA batteries are used.

## SPECIFICATIONS

---

<b>Product Dimensions:</b>	32.36 x 4.88 x 9.29 inches
<b>Item Weight:</b>	8 pounds
<b>Model Number:</b>	36654
<b>Manufacturer Recommended Age:</b>	8 years and up
<b>Power Source:</b>	6x AA Batteries (not included)
<b>Dart Capacity:</b>	40-dart auto-feeding belt, plus 46 additional dart storage
<b>Firing Range:</b>	Up to 27m / 90 feet

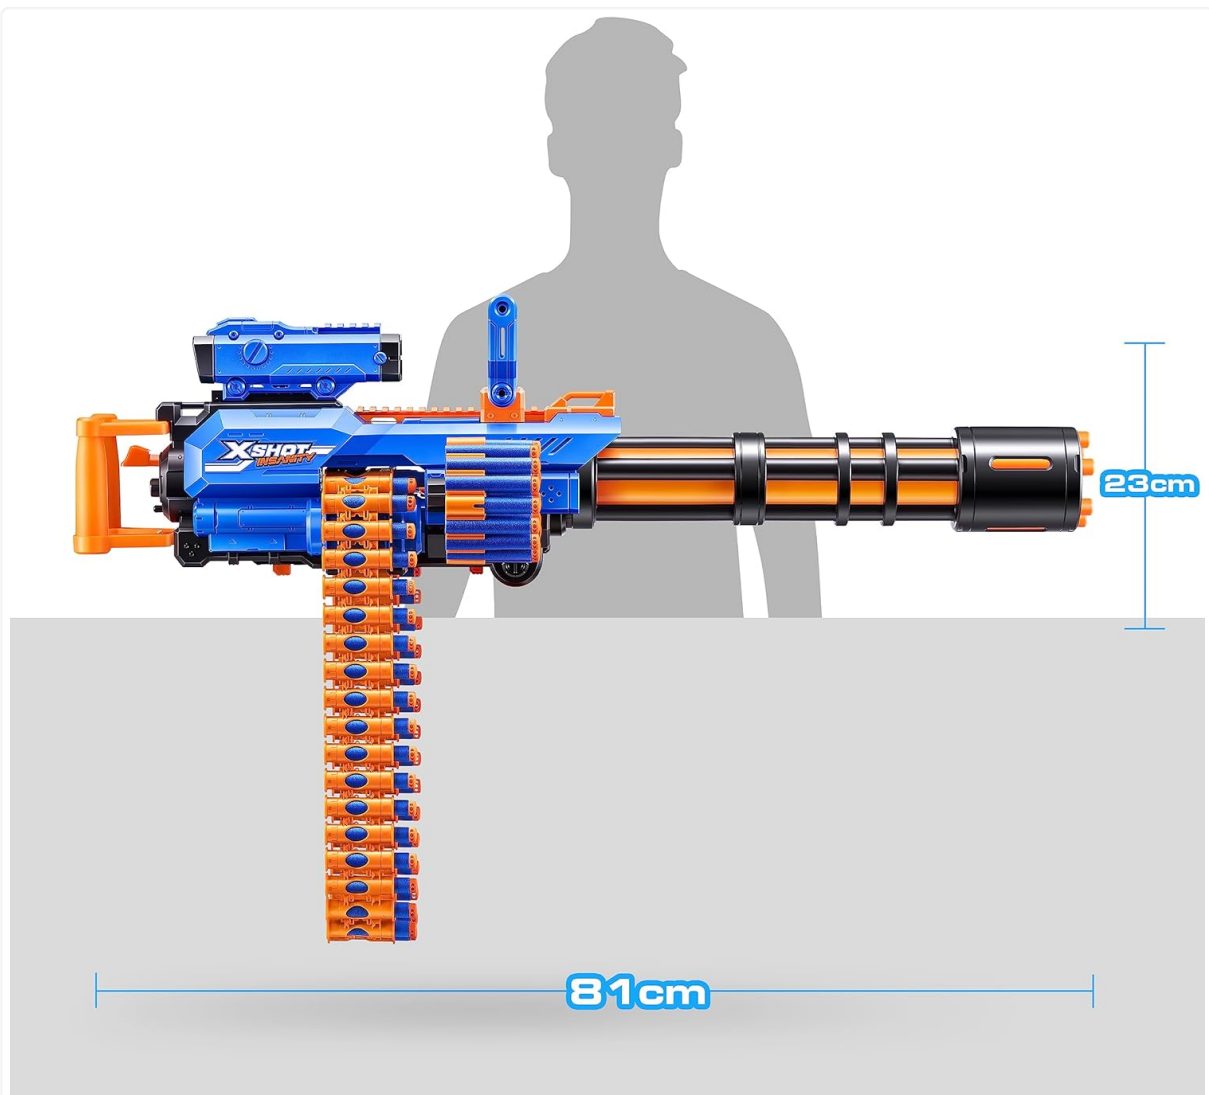


Figure 5: Product dimensions for the X-Shot Insanity Motorized Rage Fire Blaster.

## WARRANTY AND SUPPORT

---

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official XSHOT website. Keep your purchase receipt as proof of purchase.