

ZTE P618F08

ZTE Axon 40 SE User Manual

Model: P618F08

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your ZTE Axon 40 SE smartphone. Please read this manual thoroughly before operating your device to ensure optimal performance and longevity.

Key Features:

- **Operating System:** Android 12
- **Display:** 6.67-inch FHD+ AMOLED Punch-hole Display
- **Camera System:** Triple Rear Camera (50Mpx main + 5Mpx + 2Mpx), 8Mpx Front Camera
- **Memory & Storage:** Up to 6 GB RAM, 128 GB Internal Memory
- **Battery:** 4,500 mAh with 22.5W Fast Charging
- **Connectivity:** 4.5G Unlocked, Bluetooth, USB, Wi-Fi



Figure 1.1: Front and back view of the ZTE Axon 40 SE smartphone, showcasing its sleek design and camera module.

2. SETUP

2.1 Inserting the SIM Card

1. Locate the SIM card tray on the side of the device.
2. Insert the provided SIM ejector tool into the small hole next to the tray.
3. Gently push until the tray pops out.
4. Place your Nano-SIM card(s) and/or microSD card into the tray with the gold contacts facing down.
5. Carefully push the tray back into the slot until it is flush with the device.





Figure 2.1: Side profile of the ZTE Axon 40 SE, highlighting the SIM card tray location.

2.2 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the right side) until the ZTE logo appears.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.
- **To Restart:** Press and hold the Power button, then select "Restart" from the options.

2.3 Initial Configuration

Upon first power-on, follow the on-screen prompts to set up your device. This includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security features.

2.4 Charging the Device

Connect the USB Type-C cable to the charging port at the bottom of the phone and the other end to the provided 22.5W fast charger. The battery icon on the screen will indicate charging status.



Figure 2.2: Illustration of the ZTE Axon 40 SE's 4500mAh battery and fast charging capability.

3. OPERATING YOUR DEVICE

3.1 Basic Navigation

- **Touchscreen Gestures:** Tap, swipe, pinch-to-zoom are standard gestures for interacting with the display.
- **Volume Buttons:** Located on the right side, control media volume and ringtone volume.
- **Home Screen:** Swipe left or right to navigate between home screens. Swipe down from the top for notifications and quick settings.





Figure 3.1: Front view of the ZTE Axon 40 SE, showing the display and punch-hole camera.

3.2 Camera Usage

The ZTE Axon 40 SE features a versatile triple camera system on the rear and an 8Mpx front camera for selfies and video calls.

- Open the Camera app from your home screen or app drawer.
- Select your desired mode (Photo, Video, Portrait, etc.).
- Tap the shutter button to capture photos or start/stop video recording.
- Use the zoom controls on the screen to adjust magnification.

Cámara triple HD

50 MPX



Figure 3.2: Close-up of the ZTE Axon 40 SE's 50Mpx triple camera system.

3.3 Connectivity

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi to connect to available networks.
- **Bluetooth:** Go to Settings > Connected devices > Connection preferences > Bluetooth to pair with other Bluetooth devices.
- **Mobile Data (4.5G):** Ensure your SIM card is active and mobile data is enabled in Settings > Network & internet > Mobile network.

4. MAINTENANCE

4.1 Cleaning Your Device

To clean your ZTE Axon 40 SE, use a soft, lint-free cloth. Avoid using abrasive cleaners, solvents, or aerosol sprays directly on the device. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

4.2 Software Updates

Regularly check for software updates to ensure your device has the latest features, security patches, and performance improvements. Go to Settings > System > System update to check for and install updates.

4.3 Storage Management

To optimize performance, periodically manage your device's storage. Delete unnecessary files, clear app caches, and consider moving large media files to cloud storage or an external microSD card (if applicable). Go to Settings > Storage to view storage usage and free up space.

HASTA
6GB RAM
DINÁMICA

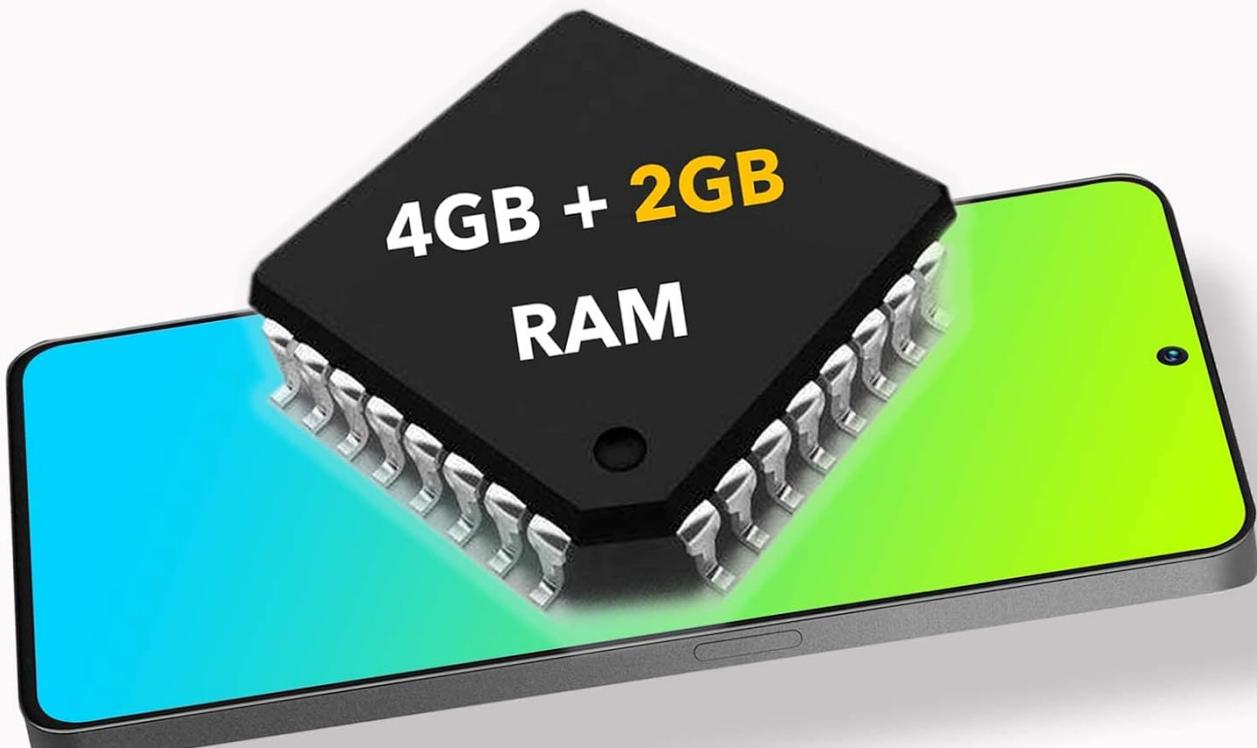


Figure 4.1: Illustration of the ZTE Axon 40 SE's dynamic RAM feature, allowing up to 6GB RAM.

5. TROUBLESHOOTING

Problem	Possible Solution

Problem	Possible Solution
Device not turning on	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds to force a restart.
Apps crashing or freezing	Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the device. Update the app.
Poor network signal	Check if mobile data is enabled. Restart the device. Try re-inserting the SIM card. Contact your service provider.
Battery drains quickly	Reduce screen brightness. Close unused apps. Disable Wi-Fi/Bluetooth when not in use. Check battery usage in Settings > Battery.

6. SPECIFICATIONS

Feature	Detail
Model Name	ZTE Axon 40 SE
Model Number	P618F08
Operating System	Android 12.0
Display Size	6.67 inches
Display Resolution	1080 x 2400 pixels (FHD+)
RAM	6 GB (Dynamic RAM)
Internal Storage	128 GB
Rear Camera	50Mpx + 5Mpx + 2Mpx Triple Camera
Front Camera	8Mpx
Battery Capacity	4500 mAh
Charging	22.5W Fast Charging
Cellular Technology	4.5G
Connectivity	Bluetooth, USB, Wi-Fi
Dimensions	16 x 8 x 0.1 cm (6.3 x 3.15 x 0.04 inches)
Weight	143 g (5.04 ounces)



Figure 6.1: Visual representation of the ZTE Axon 40 SE's 6.67-inch AMOLED display.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your ZTE Axon 40 SE comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact ZTE customer support. You can find contact information on the official ZTE website or in your product documentation.

Online Resources: Visit the official ZTE website for FAQs, software downloads, and additional support resources.

Related Documents - P618F08

 User Guide The official user guide for the ZTE Axon M smartphone, detailing setup, dual-screen functionality, connectivity, app usage, safety, and troubleshooting.	ZTE Axon M User Guide: Setup, Features, and Operation The official user guide for the ZTE Axon M smartphone, detailing setup, dual-screen functionality, connectivity, app usage, safety, and troubleshooting.
 ZTE A55 Quick Start Guide: Setup, Features, and Safety Information Get started with your ZTE A55 smartphone. This quick start guide covers setup, charging, powering on/off, and essential product safety information for the ZTE A55.	ZTE A55 Quick Start Guide: Setup, Features, and Safety Information Get started with your ZTE A55 smartphone. This quick start guide covers setup, charging, powering on/off, and essential product safety information for the ZTE A55.
 Blade A3 SE T-Essential User Manual	ZTE Blade A3 SE T-Essential User Manual Get started with your ZTE Blade A3 SE T-Essential smartphone. This user manual covers setup, features, operations, safety, and specifications for the ZTE Blade A3 SE.
 ZTE Blade V30 Vita Quick Start Guide Get started quickly with your ZTE Blade V30 Vita smartphone. This guide provides essential setup instructions, safety information, and specifications for your device.	ZTE Blade V30 Vita Quick Start Guide Get started quickly with your ZTE Blade V30 Vita smartphone. This guide provides essential setup instructions, safety information, and specifications for your device.
 BLADE L7A User Manual	ZTE Blade L7A User Manual: Setup, Features, and Safety Explore the ZTE Blade L7A smartphone with this comprehensive user manual. Learn about setup, personalization, connectivity, calls, messages, camera, settings, and essential safety information from ZTE Corporation.

ZTE Blade A510 User Manual: Comprehensive Guide

Explore the ZTE Blade A510 with its official user manual. Learn about setup, features, troubleshooting, and more for your ZTE smartphone.

Documents - ZTE – P618F08

Unsupported Device List as of WZM Version 4.0			
Brand	Device	Manufacturer	Model Name
zte	846	Cisco	CP-8605
zte	1854	Vivo	vivo1854
zte	1855	Vivo	vivo1855
zte	1856	Vivo	vivo1856
zte	1857	Vivo	vivo1857
zte	1858	Vivo	vivo1858
zte	1859	Vivo	vivo1859
zte	1860	Vivo	vivo1860
zte	1861	Vivo	vivo1861
zte	1862	Vivo	vivo1862
zte	1863	Vivo	vivo1863
zte	1864	Vivo	vivo1864
zte	1865	Vivo	vivo1865
zte	1866	Vivo	vivo1866
zte	1867	Vivo	vivo1867
zte	1868	Vivo	vivo1868
zte	1869	Vivo	vivo1869
zte	1870	Vivo	vivo1870
zte	1871	Vivo	vivo1871
zte	1872	Vivo	vivo1872
zte	1873	Vivo	vivo1873
zte	1874	Vivo	vivo1874
zte	1875	Vivo	vivo1875
zte	1876	Vivo	vivo1876
zte	1877	Vivo	vivo1877
zte	1878	Vivo	vivo1878
zte	1879	Vivo	vivo1879
zte	1880	Vivo	vivo1880
zte	1881	Vivo	vivo1881
zte	1882	Vivo	vivo1882
zte	1883	Vivo	vivo1883
zte	1884	Vivo	vivo1884
zte	1885	Vivo	vivo1885
zte	1886	Vivo	vivo1886
zte	1887	Vivo	vivo1887
zte	1888	Vivo	vivo1888
zte	1889	Vivo	vivo1889
zte	1890	Vivo	vivo1890
zte	1891	Vivo	vivo1891
zte	1892	Vivo	vivo1892
zte	1893	Vivo	vivo1893
zte	1894	Vivo	vivo1894
zte	1895	Vivo	vivo1895
zte	1896	Vivo	vivo1896
zte	1897	Vivo	vivo1897
zte	1898	Vivo	vivo1898
zte	1899	Vivo	vivo1899
zte	1900	Vivo	vivo1900
zte	1901	Vivo	vivo1901
zte	1902	Vivo	vivo1902
zte	1903	Vivo	vivo1903
zte	1904	Vivo	vivo1904
zte	1905	Vivo	vivo1905
zte	1906	Vivo	vivo1906
zte	1907	Vivo	vivo1907
zte	1908	Vivo	vivo1908
zte	1909	Vivo	vivo1909
zte	1910	Vivo	vivo1910
zte	1911	Vivo	vivo1911
zte	1912	Vivo	vivo1912
zte	1913	Vivo	vivo1913
zte	1914	Vivo	vivo1914
zte	1915	Vivo	vivo1915
zte	1916	Vivo	vivo1916
zte	1917	Vivo	vivo1917
zte	1918	Dougee	407
zte	1919	Dougee	508
zte	1920	Dougee	509
zte	1921	Vivo	vivo1921
zte	1922	Vivo	vivo1922
zte	1923	Vivo	vivo1923
zte	1924	Vivo	vivo1924
zte	1925	Vivo	vivo1925
zte	1926	Vivo	vivo1926
zte	1927	Vivo	vivo1927
zte	1928	Vivo	vivo1928
zte	1929	Vivo	vivo1929
zte	1930	Vivo	vivo1930
zte	1931	Vivo	vivo1931
zte	1932	Vivo	vivo1932
zte	1933	Vivo	vivo1933
zte	1934	Vivo	vivo1934
zte	1935	Vivo	vivo1935
zte	1936	Vivo	vivo1936
zte	1937	Vivo	vivo1937
zte	1938	Vivo	vivo1938
zte	1939	Vivo	vivo1939
zte	1940	Vivo	vivo1940
zte	1941	Vivo	vivo1941
zte	1942	Vivo	vivo1942
zte	1943	Vivo	vivo1943
zte	1944	Vivo	vivo1944
zte	1945	Vivo	vivo1945
zte	1946	Vivo	vivo1946
zte	1947	Vivo	vivo1947
zte	1948	Vivo	vivo1948
zte	1949	Vivo	vivo1949
zte	1950	Vivo	vivo1950
zte	1951	Vivo	vivo1951
zte	1952	Vivo	vivo1952
zte	1953	Vivo	vivo1953
zte	1954	Vivo	vivo1954
zte	1955	Vivo	vivo1955
zte	1956	Vivo	vivo1956
zte	1957	Vivo	vivo1957
zte	1958	Vivo	vivo1958
zte	1959	Vivo	vivo1959
zte	1960	Vivo	vivo1960
zte	1961	Vivo	vivo1961

WZM Version 4.0 Unsupported Device List: Comprehensive Guide

A comprehensive list of mobile devices and models that are not supported by WZM Version 4.0, including brands like Vivo, Samsung, Nokia, and more. Essential for compatibility checks.

lang:de score:9 filesize: 1.64 M page_count: 98 document date: 2024-11-06