

IsEasy LI2V-15

IsEasy Domino Induction Cooktop LI2V-15 User Manual

Model: LI2V-15

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your IsEasy Domino Induction Cooktop with Flex Zones. Please read these instructions carefully before installation and operation, and keep them for future reference. This modern induction cooktop features a sleek black glass finish and advanced electronic controls, bringing the latest technology to your kitchen.

2. SAFETY INSTRUCTIONS

To prevent accidents and ensure proper operation, always adhere to the following safety guidelines:

- **Electrical Safety:** Ensure the cooktop is connected to a properly grounded electrical outlet. Do not use extension cords or adapters. Disconnect power before cleaning or maintenance.
- **Cookware Compatibility:** Only use magnetic cookware suitable for induction cooking. Non-magnetic pots and pans will not heat.
- **Hot Surfaces:** Although induction cooktops heat the cookware directly, the glass surface can become hot from residual heat. Avoid touching the cooktop surface immediately after cooking.
- **Child Safety:** Keep children away from the cooktop during operation and when it is cooling down. Utilize the child lock function to prevent accidental activation.
- **Ventilation:** Ensure adequate ventilation around and beneath the cooktop as specified in the installation instructions. Do not block air vents.
- **Overheating Protection:** The cooktop is equipped with an overheating protection system that automatically shuts off the unit if the temperature exceeds safe levels.
- **Foreign Objects:** Do not place metallic objects such as knives, forks, spoons, or lids on the cooktop surface as they can become hot.

3. SETUP AND INSTALLATION

The IsEasy Domino Induction Cooktop can be installed as a built-in unit or used as a countertop appliance. Proper


installation is crucial for safety and performance.

3.1 Dimensions and Cutout

The product dimensions are 51 cm (length) x 29.5 cm (width) x 6.9 cm (height). For built-in installation, the required cutout size is approximately 49.6 cm (length) x 27.6 cm (width).



Image: The cooktop shown in both countertop and built-in configurations, highlighting its dimensions and the required cutout size for installation. The product measures 51cm in length, 29.5cm in width, and 6.2cm in height. The cutout for built-in installation is 49.6cm by 27.6cm.

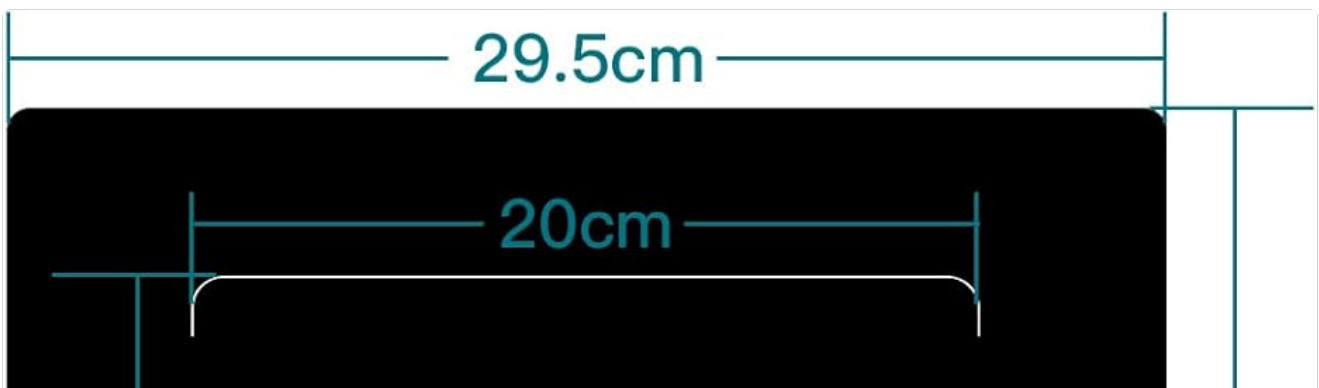 

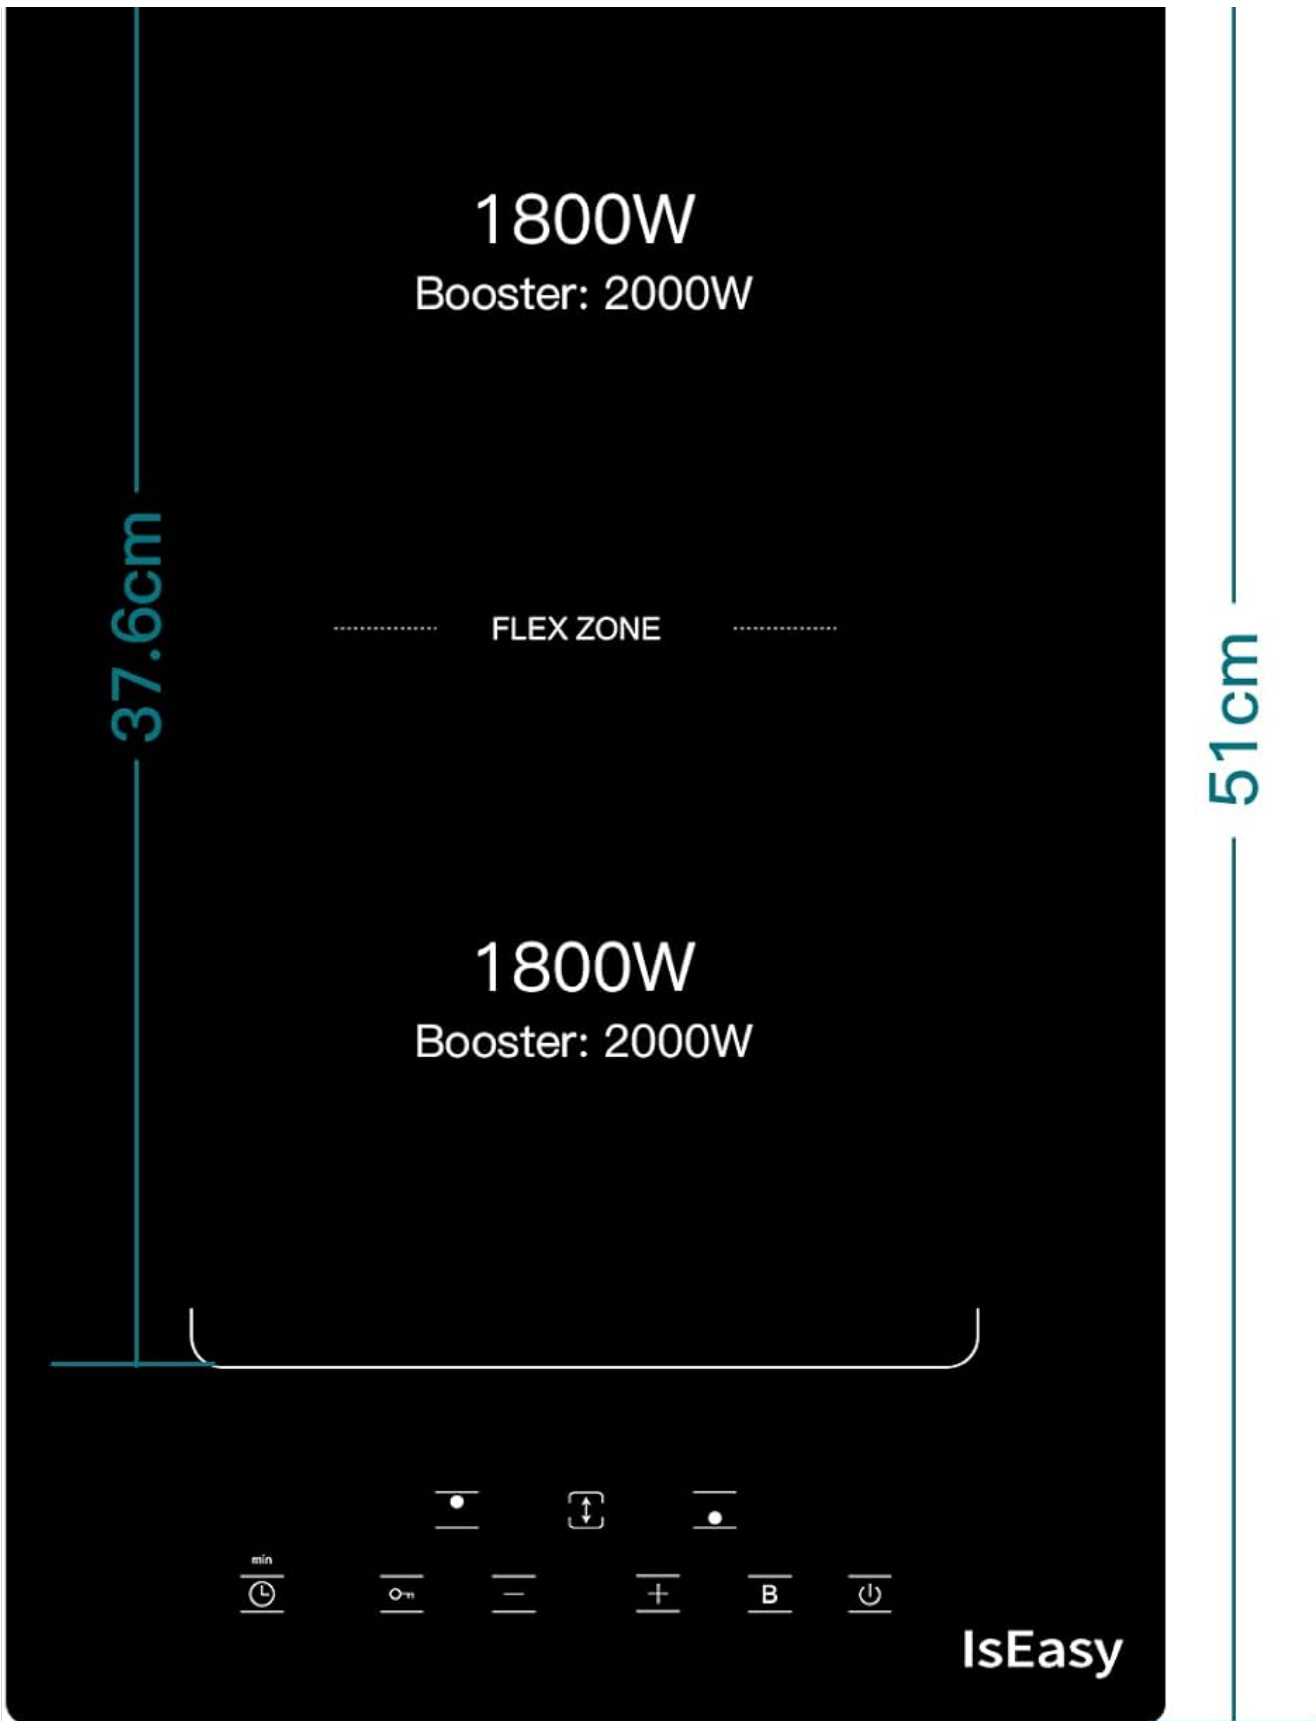 


Image: A technical drawing of the IsEasy Domino Induction Cooktop, illustrating its overall dimensions (51cm x 29.5cm) and the layout of the cooking zones. It shows the 1800W (Booster: 2000W) zones and the flexible zone area.

3.2 Electrical Connection

The cooktop operates on 220-240V and has a total nominal power of 3400 W. It requires an electrical fuse of 15.5 amperes. Ensure the electrical wiring meets local regulations and is installed by a qualified electrician.

Effektives Kühlsystem

Lärminderung.



Image: An underside view of the cooktop, showing its effective cooling system with air vents and a fan for noise reduction. A close-up of the power plug and rubber feet are also visible, indicating the product's design for stability and heat dissipation.

4. OPERATING INSTRUCTIONS

Your IsEasy Induction Cooktop features intuitive touch controls for easy operation.

Das kochen wird einfach & schnell

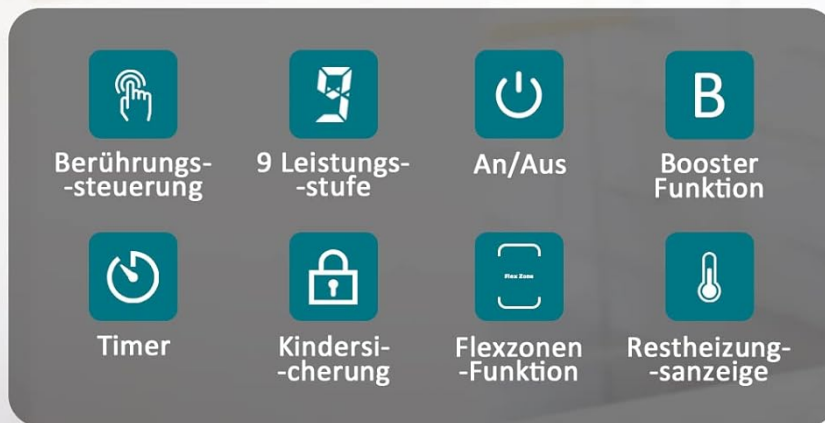 


Image: A close-up of the cooktop's control panel, illustrating the touch controls. Icons represent various functions: Touch Control, 9 Power Levels, On/Off, Booster Function, Timer, Child Lock, Flex Zones Function, and Residual Heat Indicator.

4.1 Power On/Off

Touch the On/Off button to activate or deactivate the cooktop.

4.2 Power Levels

The cooktop offers 9 heating levels, from low to high, allowing precise temperature control for various cooking needs. Use the '+' and '-' buttons to adjust the power level.

9 Leistungsstufe

99 Minuten-Timer



Genießen sie gemütliche kochzeit

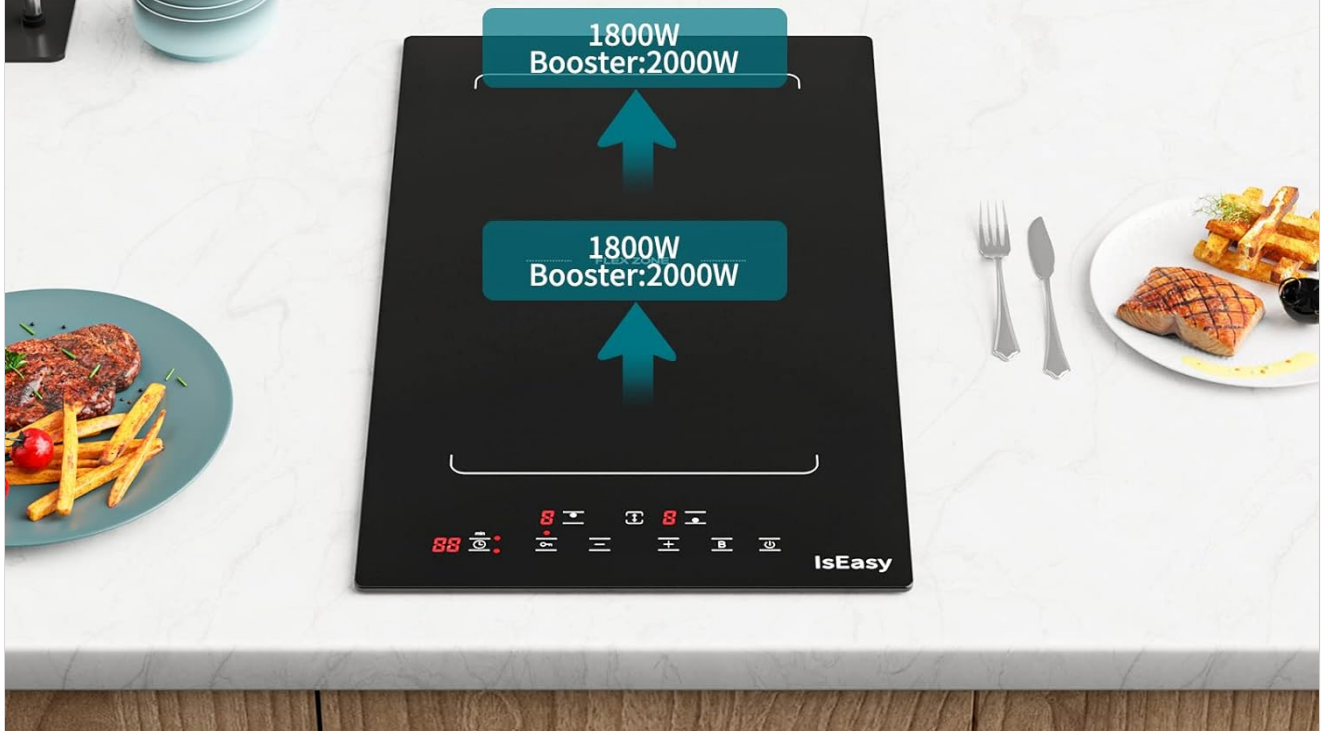 


Image: This graphic illustrates the 9 power levels and the 99-minute timer. It also shows the power distribution for the two cooking zones: each zone provides 1800W, with a booster function increasing it to 2000W.

4.3 Boost Function

Each cooking zone features a Boost function for rapid heating. The individual cooking zones can reach 2000W with Boost, while the flexible zone can achieve 3400W. Activate the Boost function by touching the 'B' button.

4.4 Flex Zones

The cooktop includes flexible zones, which combine two cooking areas into one large heating surface. This is ideal for larger cookware like griddle pans or roasting dishes, offering more cooking versatility. To activate, touch the Flex Zone button.

Flexible Grill Funktion

Netter kochpartner auf wochenendpartys, festivals.

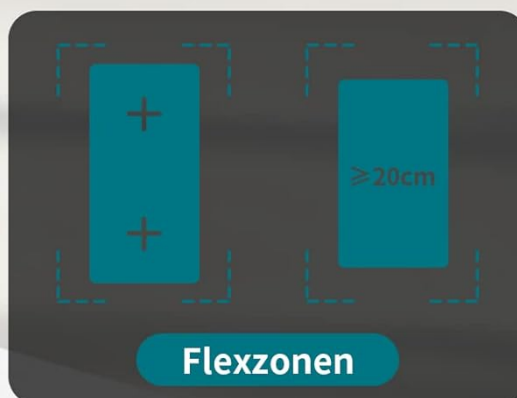 


Image: The cooktop demonstrating its flexible grill function. It shows how two individual zones (suitable for 12-26cm pots) can be combined into a single large flex zone (suitable for cookware >20cm), perfect for griddle pans or larger dishes.

4.5 Timer Function

Set a cooking timer for 1 to 99 minutes. The cooktop will automatically switch off the selected zone once the set time has elapsed. Touch the timer button and use '+' and '-' to adjust the duration.

4.6 Child Lock

Activate the child lock to prevent accidental operation, ensuring safety for your family. To activate or deactivate, press and hold the child lock button for a few seconds.

Kindersicherung

Gewährleistung der Sicherheit für Ihre ganze familie.



Image: A visual representation of the child safety lock feature on the induction cooktop, emphasizing its role in ensuring family safety by preventing unintended use.

4.7 Residual Heat Indicator

After cooking, the cooktop surface may retain heat. A residual heat indicator will illuminate to warn you that the zone is still hot, even after it has been turned off.

5. MAINTENANCE AND CLEANING

The tempered glass surface of your IsEasy Induction Cooktop is designed for easy cleaning and maintenance.

- **Daily Cleaning:** After each use, allow the cooktop to cool down. Wipe the surface with a soft cloth and a small amount of mild dish soap.
- **Stubborn Stains:** For more stubborn stains, use a ceramic hob scraper or a specialized induction cooktop cleaner. Always follow the cleaner's instructions.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the glass surface.
- **Spills:** Clean up spills immediately, especially sugary liquids, to prevent them from burning onto the surface and

causing permanent damage.

6. TROUBLESHOOTING

If you encounter any issues with your cooktop, refer to the following common troubleshooting tips:

- **Cooktop Not Turning On:** Check if the cooktop is properly plugged in and if the circuit breaker has tripped. Ensure the On/Off button is pressed correctly.
- **No Heat Production:** Verify that you are using induction-compatible cookware. The pot must have a magnetic base and be within the recommended size range (12-28 cm).
- **Error Codes:** If an error code appears on the display, consult the full product manual (if available) or contact customer support for specific guidance.
- **Unusual Noises:** A slight humming or buzzing sound during operation is normal for induction cooktops, especially at higher power settings, due to the magnetic field. If the noise is excessive or unusual, ensure the cookware is flat and suitable for induction.
- **Cooktop Shuts Off Unexpectedly:** This could be due to the overheating protection system. Remove the cookware, allow the cooktop to cool, and then restart. Ensure proper ventilation.

7. SPECIFICATIONS

Brand	IsEasy
Model Number	LI2V-15
Product Dimensions	51 cm (L) x 29.5 cm (W) x 6.9 cm (H)
Cutout Size (Built-in)	49.6 cm (L) x 27.6 cm (W)
Type	Induction Cooktop
Number of Heating Elements	2 (with Flex Zones)
Total Nominal Power	3400 W
Booster Power (Individual Zone)	2000 W
Booster Power (Flex Zone)	3400 W
Power Levels	9
Timer	1-99 minutes
Control Type	Touch Control
Surface Material	Crystal Glass
Color	Black
Special Features	Boost Function, Child Safety Lock, Residual Heat Indicator, Flex Zones

8. WARRANTY AND SUPPORT

IsEasy is committed to providing high-quality products. For any questions, suggestions, or support regarding your IsEasy Domino Induction Cooktop, please contact our customer service. We aim to respond to all inquiries within 24 hours. Please refer to your purchase documentation for specific warranty terms and conditions.

For further assistance, you may visit the [IsEasy Brand Store](#).