

[Manuals.plus](#) /

› [Pretty Love](#) /

› Pretty Love Sienna Model 4960 Sucking and Vibrating Masturbator Instruction Manual

Pretty Love 4960

Pretty Love Sienna Model 4960

SUCKING AND VIBRATING MASTURBATOR INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the Pretty Love Sienna Model 4960 Sucking and Vibrating Masturbator. This manual provides essential information for the safe and effective use, maintenance, and care of your device. Please read these instructions thoroughly before first use and retain them for future reference.

The Sienna Model 4960 is designed to provide a unique experience with its combination of sucking, vibrating, and voice functions. It features multiple settings for personalized enjoyment.

2. Safety Information

- **Read All Instructions:** Before using the device, carefully read and understand all instructions provided in this manual.
- **Adult Use Only:** This product is intended for adult use only. Keep out of reach of children.
- **Consult a Physician:** If you have any medical conditions, are pregnant, or have concerns about using this product, consult a healthcare professional before use.
- **Hygiene:** Always clean the device thoroughly before and after each use to maintain hygiene and prevent infections. Use a mild soap and warm water or a specialized toy cleaner.
- **Lubrication:** Use only water-based lubricants with this device. Oil-based lubricants can damage the silicone material.
- **Charging:** Use only the provided charging cable. Do not use the device while it is charging. Avoid overcharging.
- **Storage:** Store the device in a clean, dry place, away from direct sunlight and extreme temperatures.
- **Discontinue Use:** If you experience any discomfort, pain, or irritation during use, discontinue use immediately and consult a physician.
- **Water Resistance:** The device may be splash-proof, but it is not fully submersible unless explicitly stated. Refer to specifications for details.

3. Product Overview

The Pretty Love Sienna Model 4960 features a sleek design with intuitive controls. Familiarize yourself with the components and buttons before operation.



Figure 1: Pretty Love Sienna Model 4960 device and its retail packaging. The device is white with black control buttons on the side.



Figure 2: Front view of the Sienna Model 4960, highlighting the control panel with four distinct buttons.

Components:

- **Main Unit:** The primary body of the device containing the motor, battery, and control panel.
- **Inner Sleeve:** The removable, textured sleeve designed for insertion.
- **Charging Port:** Located on the device, typically covered by a silicone plug.



Figure 3: The Sienna Model 4960 disassembled, showing the main outer casing, the removable inner sleeve, and the top cap.

Control Buttons:

- **Power Button ():** Press and hold to turn the device on or off. A short press may cycle through modes.
- **Vibration Mode Button (W):** Cycles through various vibration patterns and intensities.
- **Suction Mode Button (★):** Cycles through different suction patterns and intensities.
- **Voice/Talk Button ():** Activates or changes the voice/sex talk functions.

4. Setup

4.1 Initial Charging

1. Locate the charging port on the device, usually covered by a silicone plug.
2. Insert the provided USB charging cable into the port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer, wall adapter).
4. Allow the device to charge fully before first use. The indicator light will typically change or turn off when charging is complete.

4.2 First-Time Cleaning

Before the first use, and after every subsequent use, clean the device thoroughly. Remove the inner sleeve if detachable. Wash the sleeve and the insertable part of the main unit with warm water and a mild, antibacterial soap or a specialized toy cleaner. Rinse thoroughly and allow to air dry completely before storage.

5. Operating Instructions

5.1 Powering On/Off

- To turn on: Press and hold the Power Button () for 2-3 seconds. The indicator light will illuminate.
- To turn off: Press and hold the Power Button () for 2-3 seconds. The indicator light will turn off.

5.2 Using Vibration Functions

- Once the device is powered on, press the Vibration Mode Button (W) to cycle through the available vibration patterns and intensities.
- Each short press will change the vibration mode. Continue pressing until you find your preferred setting.

5.3 Using Suction Functions

- With the device powered on, press the Suction Mode Button (★) to cycle through the available suction patterns and intensities.
- Each short press will change the suction mode.

5.4 Using Voice/Talk Functions

- Press the Voice/Talk Button () to activate or change the voice/sex talk functions.
- Multiple presses may cycle through different voice settings or turn the feature off.

5.5 Combined Use

The vibration, suction, and voice functions can often be used independently or in combination. Experiment with different settings to discover your preferred experience.

6. Maintenance

6.1 Cleaning

- Always clean the device immediately after each use.
- If the inner sleeve is removable, carefully detach it from the main unit.
- Wash the inner sleeve and the insertable parts of the main unit with warm water and a mild, antibacterial soap or a dedicated toy cleaner.
- Rinse thoroughly with clean water to remove all soap residue.

- Do not immerse the entire main unit in water unless the product is explicitly rated as fully waterproof. Wipe the exterior of the main unit with a damp cloth.
- Allow all components to air dry completely before reassembling or storing.

6.2 Charging

- Recharge the device when the power indicator light signals low battery or when performance diminishes.
- Always use the original charging cable.
- Do not leave the device charging unattended for extended periods.
- Disconnect the charger once the battery is full to prevent overcharging.

6.3 Storage

- Store the device in a clean, dry, and cool place.
- Keep it away from direct sunlight, extreme temperatures, and other sex toys made of different materials to prevent material degradation or discoloration.
- Ensure the device is fully dry before storing.

7. Troubleshooting

- **Device Not Turning On:**
 - Ensure the device is fully charged.
 - Press and hold the Power Button () for the required duration (2-3 seconds).
- **Weak Vibration/Suction:**
 - The battery may be low; recharge the device.
 - Ensure the inner sleeve is correctly inserted and sealed.
- **Device Not Charging:**
 - Check if the charging cable is securely connected to both the device and the power source.
 - Try a different USB power source or wall adapter.
 - Ensure the charging port is clean and free of debris.
- **Unusual Noises:**
 - If the device makes unusual noises, discontinue use and contact customer support.

8. Specifications

- **Model Number:** 4960
- **Brand:** Pretty Love
- **Functions:** Sucking, Vibrating, Voice/Sex Talk
- **Dimensions:** Approximately 50 x 50 x 28 cm (Product dimensions from source, may refer to packaging)
- **Weight:** Approximately 752.96 g
- **Material:** Body-safe silicone and ABS (Assumed based on typical product materials)
- **Power Source:** Rechargeable battery (USB charging)
- **Water Resistance:** Splash-proof (Do not submerge)

9. Warranty

This product comes with a limited manufacturer's warranty against defects in materials and workmanship. The warranty period and terms may vary by region and retailer. Please retain your proof of purchase for any warranty claims. For specific warranty details, refer to the packaging or contact your point of purchase.

10. Customer Support

If you have any questions, concerns, or require assistance with your Pretty Love Sienna Model 4960, please contact the retailer where you purchased the product or visit the official Pretty Love website for customer support information.

© 2023 Pretty Love. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question