

ECONTROLLY RMF-TX900U

ECONTROLLY RMF-TX900U Infrared Remote Control User Manual

Model: RMF-TX900U

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your ECONTROLLY RMF-TX900U Infrared Remote Control. This remote is designed as a replacement for various Sony TV models, offering straightforward operation without the need for complex programming.

Please read these instructions carefully before using the remote control to ensure optimal performance and longevity.

2. SETUP: BATTERY INSTALLATION

The RMF-TX900U remote control requires two (2) AAA ALKALINE batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Important: Do not use rechargeable batteries. Only use AAA ALKALINE batteries.







Figure 2.1: Front view of the ECONTROLLY RMF-TX900U remote control. The battery compartment is located on the back.

3. OPERATING INSTRUCTIONS

The RMF-TX900U is an infrared (IR) remote control. It operates by sending infrared signals to your television. For proper function, ensure there is a clear line of sight between the remote control and the IR receiver on your Sony TV.

- **No Programming Required:** This remote control is pre-programmed and ready to use with compatible Sony TV models immediately after battery installation. No setup codes or pairing procedures are necessary.
- **Infrared Operation:** Point the remote control directly towards your television when pressing buttons. Obstructions between the remote and the TV's IR sensor will prevent the remote from working.
- **No Voice Control:** This remote control does not support voice control functions.



Figure 3.1: Angled view of the remote control, highlighting the button layout for various functions.

Key Functions Overview:

Button	Function
Power ()	Turns the TV on or off.

Button	Function
TV	Switches to TV input.
Settings (⚙)	Accesses TV settings menu.
123	Displays on-screen numeric keypad.
Navigation Pad (Up, Down, Left, Right, Enter)	Navigates menus and confirms selections.
Back (↶)	Returns to the previous screen or menu.
Home (⌂)	Accesses the TV's home screen or smart features.
Volume (+ / -)	Adjusts the TV volume up or down.
Mute (⏻)	Mutes or unmutes the TV audio.
Channel (CH + / -)	Changes TV channels up or down.
Play (▶) / Pause (⏸)	Controls media playback.
YuTbe / NETFLX / Disney / prn video	Direct access buttons for popular streaming services.

4. COMPATIBLE SONY TV MODELS

This ECONTROLLY RMF-TX900U remote control is compatible with the following Sony TV models:

- XR-75X90CK
- KD-65X80CK
- XR-75X95K
- XR-55X90CK
- XR-85X95K
- XR-65X95K
- XR-42A90K
- KD-75X80CK
- XR-65A80CK
- XR-65X90CK
- XR-55A80CK
- XR-77A80CK
- XR-85X90CK
- KD-55X80CK
- XR-48A90K
- XR-85Z9K
- XR-75Z9K
- XR-55A95K
- KD-85X80CK
- XR-65A95K

This list includes both hyphenated and non-hyphenated versions of model numbers as provided by the

5. MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote control's performance degrades or stops working. Always replace both batteries at the same time with new AAA ALKALINE batteries.
- **Cleaning:** To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working or unresponsive.	• Batteries are depleted or incorrectly inserted. • Obstruction between remote and TV's IR sensor. • Remote control is too far from the TV.	• Replace batteries with new AAA ALKALINE batteries, ensuring correct polarity. • Remove any objects blocking the line of sight to the TV. • Move closer to the TV and point the remote directly at it.
Specific buttons are not functioning.	• Low battery power. • Button stuck or damaged.	• Replace batteries. • Gently press the button multiple times to dislodge any debris. If still unresponsive, the remote may be damaged.

7. SPECIFICATIONS

Feature	Detail
Model Number	RMF-TX900U
Product Dimensions	6.89 x 1.57 x 0.59 inches (17.5 x 4.0 x 1.5 cm)
Item Weight	1.48 ounces (42 grams)
Power Source	2 x AAA ALKALINE batteries (not included)
Special Feature	Pre-programmed, Infrared (IR)
Color	Black
Max Number of Supported Devices	1 (Television)
Compatible Devices	Sony Televisions (specific models listed in Section 4)

8. CUSTOMER SUPPORT

If you have any questions, encounter issues not covered in this manual, or require further assistance with your ECONTROLLY RMF-TX900U remote control, please do not hesitate to contact our customer support team.

Please refer to your purchase documentation or the retailer's website for specific contact information.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question