

[Manuals.plus](#) /

› [HONEY JOY](#) /

› HONEY JOY Kids 3-Person Heavy Duty Metal Seesaw Teeter Totter (Model TS10005) Instruction Manual

HONEY JOY TS10005

HONEY JOY Kids 3-Person Heavy Duty Metal Seesaw Teeter Totter Instruction Manual

Model: TS10005

INTRODUCTION

Thank you for choosing the HONEY JOY Kids 3-Person Heavy Duty Metal Seesaw Teeter Totter. This product is designed to provide a fun and engaging rocking experience for children aged 3-8 years. It features a robust metal construction and comfortable seating for up to three children, making it suitable for both indoor and outdoor play environments.



Image: Children enjoying the HONEY JOY 3-Person Seesaw Teeter Totter.

SAFETY INFORMATION

WARNING: Adult supervision is required at all times when children are using this product.

- **Recommended Age:** This seesaw is designed for children aged 3 to 8 years.
- **Weight Capacity:** Maximum weight capacity is 66 pounds (30 kg) per seat, with a total maximum weight of 198 pounds (90 kg) for the entire unit. Do not exceed these limits.
- Ensure the seesaw is placed on a flat, level surface, free from obstacles.
- Regularly inspect all parts for wear, damage, or loose connections before each use.
- Instruct children to hold onto the handlebars firmly during use.
- Keep hands and feet clear of moving parts to prevent pinching or injury.
- Do not allow children to stand on the seats or handlebars.

WHAT'S IN THE BOX

Please check to ensure all components are present before assembly:

- 1x Kids Seesaw Teeter Totter (unassembled components)
- 1x Instruction Manual
- Hardware pack (screws, nuts, washers, etc.)

SETUP AND ASSEMBLY

Assembly requires adult supervision. Please follow these steps carefully. It is recommended to have two adults for easier assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches. Verify all parts are present against the included parts list.
2. **Assemble Main Frame:** Connect the main metal frame pieces using the provided screws and tools. Ensure all connections are secure but do not fully tighten until all parts are aligned.
3. **Attach Seats and Backrests:** Secure the red plastic seats and backrests to the frame. Pay attention to the orientation of each piece.
4. **Install Handlebars:** Attach the easy-grip handlebars to their designated positions.
5. **Secure EVA Foam:** Ensure the EVA foam covered bottom is correctly positioned to protect floors.
6. **Final Tightening:** Once all components are in place and aligned, securely tighten all screws and bolts. Do not overtighten.
7. **Final Check:** Before first use, double-check all connections to ensure they are tight and stable.



Smooth Surface

Grip Safely and Cozily

Comfortable Backrest and Seat

Bring Optimal Comfort

Sturdy Steel Frame

Support Up to 30 kg for Per Seat

Frame with EVA Foam Covered

Prevent Your Floor from Scratching

Image: Key features and components for assembly.

OPERATING INSTRUCTIONS

The HONEY JOY seesaw provides a safe and smooth rocking motion for children. It can be used by one, two, or three children simultaneously.

- **Seating:** Children should sit facing each other, with their feet on the footrests and hands firmly gripping the handlebars.
- **Rocking Motion:** Children can initiate the rocking motion by pushing off the ground with their feet or by shifting their weight. Encourage gentle and controlled movements.
- **Single-User Play:** If only one child is playing, they can sit in the middle seat to balance the seesaw and rock independently.
- **Indoor/Outdoor Use:** This seesaw is suitable for both indoor and outdoor environments. Ensure it is placed on a flat, stable surface.



Image: Versatile use of the seesaw indoors and outdoors.

MAINTENANCE

Regular maintenance will ensure the longevity and safety of your seesaw:

- **Cleaning:** Wipe down the seesaw with a damp cloth and mild soap as needed. Avoid harsh chemicals that could damage the finish or plastic components.
- **Inspection:** Periodically check all bolts, nuts, and screws for tightness. Tighten any loose fasteners.
- **Rust Prevention:** While designed for outdoor use, prolonged exposure to moisture can lead to rust. If leaving outdoors, consider covering it or bringing it indoors during inclement weather to prevent rust and staining.
- **Storage:** Store the seesaw in a dry, covered area when not in use for extended periods to protect it from the elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Seesaw feels unstable or wobbly.	Loose bolts or uneven assembly.	Check all connections and tighten any loose bolts. Ensure the seesaw is on a flat, level surface.
Difficulty during assembly (holes not aligning).	Incorrect orientation of parts or minor manufacturing variations.	Do not fully tighten any bolts until all major components are loosely assembled. If a part doesn't fit, try rotating it or switching its position with a similar part. Apply gentle pressure to align holes if necessary.
Rust appearing on metal parts.	Prolonged exposure to moisture or harsh weather.	Clean affected areas and apply a rust-inhibiting paint or sealant. Store the seesaw indoors or cover it when not in use, especially in wet conditions.

SPECIFICATIONS

- **Brand:** HONEY JOY
- **Model Number:** TS10005
- **Material:** Heavy Duty Metal (Carbon Steel), PP Plastic
- **Color:** Red, Yellow, Blue
- **Overall Dimensions:** 53.5 x 15 x 23 inches (L x W x H)
- **Item Weight:** Approximately 22.1 pounds (10 kg)
- **Recommended Age:** 36 months - 8 years
- **Weight Capacity:** 66 lbs (30 kg) per seat; 198 lbs (90 kg) total
- **Number of Players:** 3



Recommended Age:
3 – 8 Years Old



Weight Capacity:
100 kg

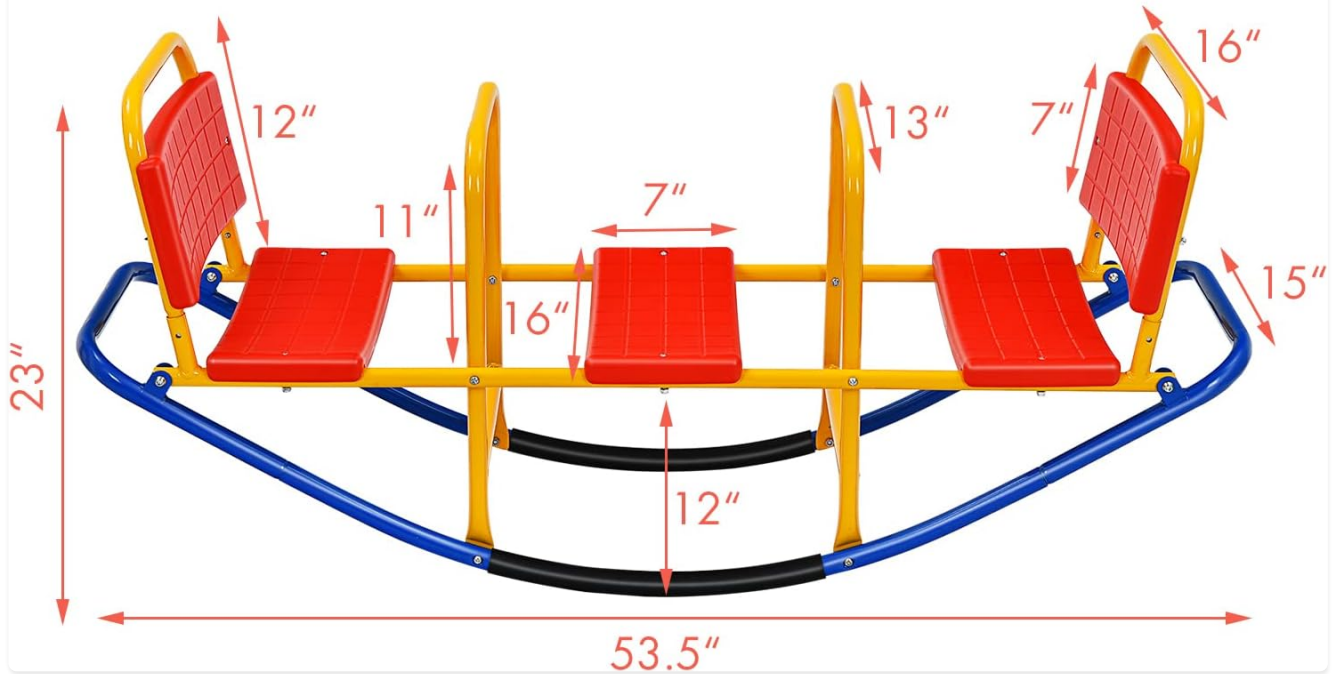


Image: Product dimensions and specifications.

WARRANTY

This product comes with a standard manufacturer's warranty. Please refer to your purchase documentation or contact the retailer for specific warranty terms and conditions. Keep your proof of purchase for any warranty claims.

SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues not covered in this manual, please contact HONEY JOY customer service or your retailer. For more information about HONEY JOY products, visit the official [HONEY JOY Store on Amazon](#).

© 2026 HONEY JOY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BS6DSMSF>

More documents and user manuals: **<https://manuals.plus/>**