

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Chefman](#) /

› [Chefman 1.8 Liter Stainless Steel Electric Kettle \(Model RJ11-17-SS-RL-BLACK\) Instruction Manual](#)

Chefman RJ11-17-SS-RL-BLACK

Chefman 1.8 Liter Stainless Steel Electric Kettle Instruction Manual

Model: RJ11-17-SS-RL-BLACK

INTRODUCTION

Thank you for purchasing the Chefman 1.8 Liter Stainless Steel Electric Kettle. This manual provides important safety information, operating instructions, maintenance tips, and troubleshooting guidance to ensure safe and efficient use of your appliance. Please read this manual thoroughly before first use and retain it for future reference.





Image: The Chefman 1.8 Liter Stainless Steel Electric Kettle in black, showcasing its sleek design and illuminated water window.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Chefman Customer Support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove

plug from wall outlet.

- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed during operation.
- Exercise extreme caution when pouring hot water.
- This appliance is equipped with **Boil-Dry Protection** and **Automatic Shutoff** features for enhanced safety. The kettle will automatically turn off when water reaches boiling point or if it detects no water inside.

Safe Heating

Boil-dry protection automatically shuts off the kettle when heating is complete



Image: The kettle in operation, showing the red indicator light during the heating process, highlighting the safe heating feature.

PRODUCT FEATURES

The Chefman Electric Kettle is designed for convenience and efficiency. Key features include:

- **Fast Boiling:** Boils water in as little as 3 minutes.
- **Ready Light:** Red LED lights illuminate during heating and turn off when boiling is complete.

- **Quick View Window:** A convenient water level window allows you to monitor the water volume.
- **Cordless Convenience:** The kettle lifts off its 360-degree swivel base for easy pouring and serving.
- **Easy-Grip:** The 360-degree swivel base allows for comfortable handling and pouring from any angle.
- **Streamlined Design:** Modern stainless steel construction.
- **Mess-Free Pouring:** A specially designed spout minimizes drips and spills.
- **Safety Shutoff:** Automatic shutoff when boiling temperature is reached or water is gone.
- **1.8 Liter Capacity:** Large capacity for multiple servings.

CHEFMAN® Fast-Boil 1.8L Stainless-Steel Electric Kettle



Image: An overview of the kettle's main features, including fast-boil technology, cord-free design, LED indicators, and safety mechanisms.

Easy-View Window

Check water levels at-a-glance and red LED lights turn off when boiling is complete



Image: A detailed view of the easy-view water window, indicating water levels and the blue LED illumination when in use.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Clean:** Before first use, fill the kettle with water to the MAX line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residue.
3. **Placement:** Place the power base on a dry, flat, heat-resistant surface. Ensure the kettle is placed securely on the base.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Open the lid and fill the kettle with the desired amount of water. Do not fill below the MIN line or above the MAX line (1.8 Liters). The water level window will help you monitor the fill level.

2. **Close Lid:** Ensure the lid is securely closed before placing the kettle on its power base.
3. **Place on Base:** Place the kettle firmly onto the power base.
4. **Start Boiling:** Press the ON/OFF switch located on the handle. The red LED indicator light will illuminate, indicating that the kettle is heating.
5. **Automatic Shutoff:** The kettle will automatically turn off once the water has reached a rolling boil. The red LED light will extinguish.
6. **Pouring:** Carefully lift the kettle from its base and pour the hot water. The cordless design allows for easy serving.
7. **Re-boiling:** If you need to re-boil water, wait a few moments for the internal thermostat to reset, then press the ON/OFF switch again.

Faster Boiling

Boil water faster than on the stove or in the microwave
and enjoy a hot cup in as little as 3 minutes



Image: Demonstrates pouring hot water from the kettle into a cup, highlighting the fast boiling capability.

Cord-Free Pouring

No need to unplug—simply lift off the 360-degree swivel base and pour



Image: Illustrates the cord-free pouring feature, showing the kettle being used away from its base.

Your browser does not support the video tag.

Video: An official product video demonstrating the Chefman Electric Kettle in use, showcasing its features and operation.

CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity of your Chefman Electric Kettle.

- **Cleaning:** Always unplug the kettle and allow it to cool completely before cleaning. The exterior can be wiped with a damp cloth. Do not use abrasive cleaners or scouring pads.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
 - a. Fill the kettle with 2 cups of white vinegar and 2 cups of water.
 - b. Bring the mixture to a boil and let it stand for 30 minutes.
 - c. Discard the mixture and rinse the kettle thoroughly with fresh water several times.

d. For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.

- **Storage:** When not in use, store the kettle on its base in a clean, dry place.
- **Product Care Instructions:** Hand Wash. Do not immerse the power base or cord in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in. Kettle not properly seated on base. Power switch not pressed. Boil-dry protection activated.	Ensure the power cord is securely plugged into a working outlet. Place the kettle firmly on the power base. Press the ON/OFF switch. If boil-dry protection activated, remove kettle from base, let it cool for 10-15 minutes, then refill and restart.
Water takes too long to boil.	Limescale buildup. Overfilled kettle.	Descal the kettle as per the "Care and Maintenance" section. Ensure water level is between MIN and MAX lines.
Kettle leaks.	Lid not closed properly. Overfilled.	Ensure the lid is securely closed. Do not fill above the MAX line.
Red LED light does not turn on.	Kettle not heating.	Refer to "Kettle does not heat up" solutions.

SPECIFICATIONS

Brand	Chefman
Model Name	Chefman Easy-View Electric Kettle
Item Model Number	RJ11-17-SS-RL-BLACK
Capacity	1.8 Liters
Material	Stainless Steel
Color	Black
Product Dimensions	8.25"L x 6"W x 9.75"H
Item Weight	2.49 pounds (1.13 Kilograms)
Special Features	1500 Watt Speed Boil, Illuminated Water Window, LED Indicator Lights, Removable Lid
Power	1500W/120V
UPC	810087843359

9.25"

8.98"

6.42"



Image: Detailed dimensions of the Chefman Electric Kettle.

WARRANTY AND CUSTOMER SUPPORT

This Chefman Electric Kettle comes with a 1-year assurance provided by Chefman. For warranty claims or technical support, please contact Chefman Customer Support.

For further assistance, visit the official Chefman website or refer to the contact information provided in your product packaging.

Manufacturer: Chefman

© 2023 Chefman. All rights reserved.